
User Manual

Models 2181/2182

**2.1 GS/s Single / Dual
Arbitrary Waveform Generators
Publication No. 070910**

Tabor Electronics Ltd.

Tabor Electronics Ltd.
P.O. Box 404, Tel Hanan Israel 20302
Tel: +972-4-821-3393, FAX: +972-4-821-3388

PUBLICATION DATE: September 7, 2010

Copyright 2005 by Tabor Electronics Ltd. Printed in Israel. All rights reserved. This book or parts thereof may not be reproduced in any form without written permission of the publisher.

WARRANTY STATEMENT

Products sold by Tabor Electronics Ltd. are warranted to be free from defects in workmanship or materials. Tabor Electronics Ltd. will, at its option, either repair or replace any hardware products which prove to be defective during the warranty period. You are a valued customer. Our mission is to make any necessary repairs in a reliable and timely manner.

Duration of Warranty

The warranty period for this Tabor Electronics Ltd. hardware is three years, except software and firmware products designed for use with Tabor Electronics Ltd. Hardware is warranted not to fail to execute its programming instructions due to defect in materials or workmanship for a period of ninety (90) days from the date of delivery to the initial end user.

Return of Product

Authorization is required from Tabor Electronics before you send us your product for service or calibration. Call your nearest Tabor Electronics support facility. A list is located on the last page of this manual. If you are unsure where to call, contact Tabor Electronics Ltd. Tel Hanan, Israel at 972-4-821-3393 or via fax at 972-4-821-3388. We can be reached at: support@tabor.co.il

Limitation of Warranty

Tabor Electronics Ltd. shall be released from all obligations under this warranty in the event repairs or modifications are made by persons other than authorized Tabor Electronics service personnel or without the written consent of Tabor Electronics.

Tabor Electronics Ltd. expressly disclaims any liability to its customers, dealers and representatives and to users of its product, and to any other person or persons, for special or consequential damages of any kind and from any cause whatsoever arising out of or in any way connected with the manufacture, sale, handling, repair, maintenance, replacement or use of said products.

Representations and warranties made by any person including dealers and representatives of Tabor Electronics Ltd., which are inconsistent or in conflict with the terms of this warranty (including but not limited to the limitations of the liability of Tabor Electronics Ltd. as set forth above), shall not be binding upon Tabor Electronics Ltd. unless reduced to writing and approved by an officer of Tabor Electronics Ltd.

Except as stated above, Tabor Electronics Ltd. makes no warranty, express or implied (either in fact or by operation of law), statutory or otherwise; and except to the extent stated above, Tabor Electronics Ltd. shall have no liability under any warranty, express or implied (either in fact or by operation of law), statutory or otherwise.

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Tabor Electronics, and shall not, without express written permission of Tabor Electronics, be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Tabor Electronics. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents, which specify procurement of products from Tabor Electronics.

FOR YOUR SAFETY

Before undertaking any troubleshooting, maintenance or exploratory procedure, read carefully the **WARNINGS** and **CAUTION** notices.

This equipment contains voltage hazardous to human life and safety, and is capable of inflicting personal injury.

If this instrument is to be powered from the AC line (mains) through an autotransformer, ensure the common connector is connected to the neutral (earth pole) of the power supply.

Before operating the unit, ensure the conductor (green wire) is connected to the ground (earth) conductor of the power outlet. Do not use a two-conductor extension cord or a three-prong/two-prong adapter. This will defeat the protective feature of the third conductor in the power cord.

Maintenance and calibration procedures sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures and heed warnings to avoid “live” circuits points.

Before operation this instrument:

1. Ensure the instrument is configured to operate on the voltage at the power source. See Installation Section.
2. Ensure the proper fuse is in place for the power source to operate.
3. Ensure all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

If the instrument:

- fails to operate satisfactorily
- shows visible damage
- has been stored under unfavorable conditions
- has sustained stress

Do not operate until performance is checked by qualified personnel.

Table of Contents

Chapter	Title	Page
1	Getting Started	1-1
	What's in This Chapter	1-4
	Conventions Used in this Manual	1-4
	Safety Symbols	1-4
	WX2182 Feature Highlights	1-5
	Introduction	1-5
	General	1-6
	Two Synchronized Channels.....	1-6
	Stable and Accurate Output Signals.....	1-6
	Signal Integrity	1-6
	DC or AC Coupled Outputs	1-6
	Versatile Run Modes	1-7
	Arbitrary Waveforms and Memory Segmentation	1-8
	Dynamic Segment / Sequence Control.....	1-8
	Built-in Waveform Gallery.....	1-8
	Wireless Waveforms	1-8
	Pulse Waveforms	1-9
	Local Operation.....	1-9
	Remote Operation.....	1-9
	Remote Calibration	1-9
	Manual Changes.....	1-10
	Safety Considerations	1-10
	Supplied Accessories.....	1-10

Specifications.....	1-11
Functional Description.....	1-11
Front Panel Connectors and Indicators	1-11
Main Output - Channels 1 and 2	1-11
SYNC Output	1-12
TRIG IN	1-12
USB	1-12
Front Panel Controls	1-12
Rear Panel Input & Output Connectors	1-14
Sample Clock In.....	1-15
Segment / Sequence Control In	1-15
Marker 1 / 2 Out.....	1-15
Instrument Synchronization.....	1-16
Event In	1-16
Ref In.....	1-16
LAN.....	1-16
USB	1-16
GPIB.....	1-17
AC Line In.....	1-17
AC Fuse.....	1-17
Run Modes	1-17
Continuous Run Mode.....	1-17
Arming the Generator in Continuous Run Mode.....	1-18
Triggered Run Mode	1-19
Trigger Run Mode Extensions	1-21
Delayed Trigger	1-21
Trigger Override.....	1-21
Internal Timer.....	1-22
Delay Timer	1-22
Counted Burst.....	1-22
Smart Trigger	1-22
Trigger Source	1-23
Trigger Input	1-23
Manual Button.....	1-23
Remote Command.....	1-23
Event Input.....	1-23
Internal Timer.....	1-24

Gated Run Mode	1-26
Output Type	1-27
Standard Waveforms.....	1-28
Arbitrary Waveforms.....	1-29
Sequenced Waveforms	1-30
Advanced Sequencing	1-32
Sequence Advance Mode	1-33
Sequence Advance Source.....	1-34
Modulated Waveforms	1-34
Modulation Off	1-34
AM	1-35
FM	1-35
Sweep.....	1-35
Pulse Waveforms	1-36
Multi-Instrument Synchronization	1-36
Output State.....	1-37
Programming the Model WX2182	1-37
2 Configuring the Instrument	2-1
Installation Overview	2-3
Unpacking and Initial Inspection.....	2-3
Safety Precautions	2-3
Performance Checks.....	2-4
Power Requirements.....	2-4
Grounding Requirements	2-4
Long Term Storage or Repackaging for Shipment	2-4
Preparation for Use	2-5
Installation.....	2-5
Installing Software Utilities	2-5
Controlling the Instrument from Remote.....	2-6
Connecting to a Remote interface	2-6
Selecting a Remote interface	2-7
GPIB Configuration.....	2-8
USB Configuration.....	2-8
LAN Configuration	2-11
Choosing a Static IP Address	2-12

3	Using the Instrument	3-1
	Overview	3-4
	Inter-Channel Dependency	3-4
	Output Termination	3-4
	Input / Output Protection	3-5
	Power On/Reset Defaults	3-5
	Controlling the WX2182	3-6
	WX2182 Front Panel Menus	3-8
	Pulse Menus	3-10
	Control Menus	3-12
	Enabling the Outputs.....	3-14
	Selecting a Function Shape	3-14
	Changing the Output Frequency	3-15
	Changing the Sample Clock Frequency	3-16
	Selecting an Output Couple	3-17
	Programming the Amplitude and Offset.....	3-18
	Programming the Output Power	3-19
	Selecting a Run Mode.....	3-21
	Continuous Run Mode.....	3-22
	Triggered Run Mode.....	3-23
	Using the Delayed Trigger	3-25
	Using the Built-in Auto-Trigger Generators.....	3-25
	Gated Run Mode	3-26
	Abort	3-27
	Using the Manual Trigger.....	3-28
	Using the SYNC Output	3-28
	Synchronizing Channel 1 and Channel 2	3-29
	Controlling Cross-Channel Propagation	3-30
	Using External Clock References.....	3-31
	Using an External SCLK Source	3-32
	Using an External Clock Reference Source	3-33
	Generating Standard Waveforms	3-35
	Sine Wave	3-36
	Triangle Wave.....	3-37
	Square Wave	3-37
	Ramp Wave	3-38
	Sinc Wave.....	3-39
	Gaussian Wave	3-40

Exponential Wave.....	3-41
DC Wave.....	3-42
Noise Wave	3-42
Standard Waveforms and Run Mode Options.....	3-43
Generating Arbitrary Waveforms.....	3-45
What Are Arbitrary Waveforms?.....	3-45
Generating Arbitrary Waveforms	3-46
Using the Dynamic Segment Control.....	3-48
Arbitrary Waveforms and Run Mode Options.....	3-49
Generating Sequenced Waveforms	3-51
What are Sequenced Waveforms?.....	3-52
Sequence Table Elements	3-55
Editing the Sequence Table.....	3-55
Selecting Sequence Advance Mode.....	3-56
Sequences and Run Mode Options.....	3-58
Using Advanced Sequencing	3-60
Using the Dynamic Sequence Control.....	3-61
Generating Modulated Waveforms.....	3-62
Off	3-63
AM.....	3-64
FM.....	3-65
Sweep.....	3-67
Modulated Waveforms and Run Mode Options	3-69
Generating Pulse Waveforms	3-70
Pulse Parameters	3-72
Understanding Pulse Parameters.....	3-72
Pulse Modes	3-74
Single Pulse Mode	3-75
Delayed Pulse Mode.....	3-76
Double Pulse Mode.....	3-77
Programming Pulse Polarity	3-78
Applying Linear Transitions	3-79
Programming the Amplitude Level Mode	3-81
Pulse Design Limitations.....	3-83
Settings Conflict Errors	3-84
Amplitude Errors	3-85
Pulse Timing Errors	3-85

Pulse Linear Transition Errors	3-85
Pulse Delay Errors	3-86
General Pulse Errors	3-86
Using Markers	3-87
Using Store/Recall	3-89
Storing Instrument Setups and Waveforms	3-89
Recalling Instrument Setups and Waveforms	3-91
4 Remote Programming Reference	4-1
What's in This Chapter	4-3
Introduction to SCPI	4-3
Command Format	4-4
Command Separator	4-4
The MIN and MAX Parameters	4-4
Querying Parameter Setting	4-5
Query Response Format	4-5
SCPI Command Terminator	4-5
IEEE-STD-488.2 Common Commands	4-5
SCPI Parameter Type	4-5
Numeric Parameters	4-5
Discrete Parameters	4-6
Boolean Parameters	4-6
Arbitrary Block Parameters	4-6
Binary Block Parameters	4-6
SCPI Syntax and Styles	4-6
WX2182 Commands	4-7
Channel & Group Control Commands	4-15
Run Mode Commands	4-19
Analog Output Control Commands	4-30
Marker Output Control Commands	4-40
Standard Waveforms Control Commands	4-44
Arbitrary Waveforms Control Commands	4-49

Sequenced Waveforms Control Commands.....	4-55
Advanced Sequencing Control Commands.....	4-61
Modulated Waveforms Global Control Commands.....	4-65
Modulation Control Commands.....	4-67
AM Programming.....	4-68
FM Programming.....	4-69
Sweep Modulation Programming.....	4-71
Pulse Waveform Programming.....	4-74
LAN System Configuration Commands.....	4-83
Store/Recall Commands.....	4-87
System Commands.....	4-90
Error Messages.....	4-91
IEEE-STD-488.2 Common Commands and Queries.....	4-94
5 Performance Checks.....	5-1
6 Adjustments and Firmware Update.....	6-1
Appendices	
A Specifications.....	A-1

Chapter 1

Getting Started

Title	Page
What's in This Chapter.....	1-4
Conventions Used in this Manual	1-4
Safety Symbols	1-4
WX2182 Feature Highlights	1-5
Introduction	1-5
General	1-6
Two Synchronized Channels	1-6
Stable and Accurate Output Signals	1-6
Signal Integrity	1-6
DC or AC Coupled Outputs.....	1-6
Versatile Run Modes.....	1-7
Arbitrary Waveforms and Memory Segmentation	1-8
Dynamic Segment / Sequence Control	1-8
Built-in Waveform Gallery	1-8
Wireless Waveforms	1-8
Pulse Waveforms.....	1-9
Local Operation.....	1-9
Remote Operation.....	1-9
Remote Calibration	1-9
Manual Changes.....	1-10
Safety Considerations.....	1-10
Supplied Accessories.....	1-10
Specifications.....	1-11
Functional Description	1-11
Front Panel Connectors and Indicators	1-11
Main Output - Channels 1 and 2.....	1-11
SYNC Output.....	1-12
TRIG IN.....	1-12
USB	1-12

Front Panel Controls	1-12
Rear Panel Input & Output Connectors	1-14
Sample Clock In	1-15
Segment / Sequence Control In	1-15
Marker 1 / 2 Out.....	1-15
Instrument Synchronization	1-16
Event In	1-16
Ref In.....	1-16
LAN.....	1-16
USB	1-16
GPIB	1-17
AC Line In.....	1-17
AC Fuse.....	1-17
Run Modes	1-17
Continuous Run Mode	1-17
Arming the Generator in Continuous Run Mode	1-18
Triggered Run Mode	1-19
Trigger Run Mode Extensions	1-21
Delayed Trigger	1-21
Trigger Override	1-21
Internal Timer	1-22
Delay Timer	1-22
Counted Burst.....	1-22
Smart Trigger.....	1-22
Trigger Source	1-23
Trigger Input	1-23
Manual Button	1-23
Remote Command	1-23
Event Input	1-23
Internal Timer	1-24
Gated Run Mode.....	1-26
Output Type	1-27
Standard Waveforms	1-28
Arbitrary Waveforms	1-29
Sequenced Waveforms.....	1-30
Advanced Sequencing.....	1-32
Sequence Advance Mode	1-33
Sequence Advance Source	1-34
Modulated Waveforms	1-34
Modulation Off	1-34
AM	1-35

FM	1-35
Sweep.....	1-35
Pulse Waveforms.....	1-36
Multi-Instrument Synchronization.....	1-36
Output State.....	1-37
Programming the Model WX2182.....	1-37

What's in This Chapter

This chapter contains a general description of the **Model WX2182 Waveform Generator**, including an overall functional description of the instrument. Additionally, the front and rear panel connectors and indicators are explained in detail.



NOTE

This manual is shared by both single and dual channel versions. Therefore, if you purchased the Model WX2181, please ignore all references to the second channel in this manual.

Conventions Used in this Manual

The following icons may appear in this manual:



NOTE

A Note contains information relating to the use of this product



TIP

A Tip containing recommendation relating to the use of a feature



CAUTION

A Caution contains information that should be followed to avoid personal damage to the instrument or the equipment connected to it.



WARNING

A Warning alerts you to a potential hazard. Failure to adhere to the statement in a WARNING message could result in personal injury.

Safety Symbols

The following safety symbols may appear in this manual and on this product:



Alternating current



Standby supply. Unit is not completely disconnected from ac mains when switch is off.

WX2182 Feature Highlights

- Dual output configuration with independent waveform control
- Tight phase offset control between channels (10 ps resolution)
- Operational in each of the following modes:
 - Function generator
 - Arbitrary waveform generator
 - Modulation generator
 - Sequence generator
 - Pulse generator
- 12 Bit vertical resolution
- 1 ppm clock stability
- Extremely low- phase noise-carrier
- 16 M waveform memory, optional 32 M waveform memory
- 2 Vp-p into 50Ω, double into open circuit
- Interrupted run modes such as, re-triggered and delayed trigger
- Complex sequences link and loop segments in user-definable order
- 4" high resolution color LCD display
- Ethernet, USB and GPIB interfaces
- Two-instrument synchronization, jitter-free and phase control
- Remote calibration without removing case covers

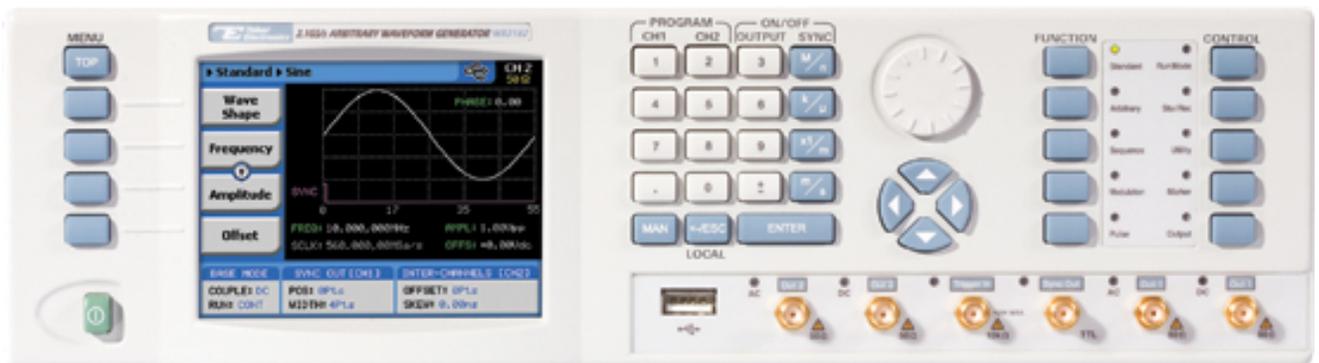


Figure 1-1, Model WX2182

Introduction

Detailed functional description is provided, following the general description of the features and functions available with the **Model WX2182**.

General

The **Model WX2182** is a dual-channel universal waveform source. In addition to its standard ability to generate arbitrary shapes, functions or modulation, it can also be used as a full-featured pulse generator, as well as a wireless signal source. The **WX2182** offers unmatched performance, even when compared to instruments designed to generate fewer types of signals. Its affordable footprint saves space and cost without compromising bandwidth and signal integrity. Cutting-edge technology is utilized to assure that this will be the only source needed for many years to come.

Two Synchronized Channels

The **WX2182** has two output channels, both of which can operate either independently, or synchronized to share the same sample clock source. As two separate channels, one has the advantage of having two separate instruments in one box, with each having the ability to be programmed to output different function shapes, amplitude levels and/or to operate in different run modes.

Alternatively, the advantage of having two synchronized channels is very significant in applications that require an accurate and controlled phase between the two channels. Many applications require X-Y modes and I&Q outputs and the **WX2182** is ideal for this usage.

Stable and Accurate Output Signals

As standard, the instrument is equipped with a frequency reference that has 1ppm accuracy and stability over a period of 1 year. An external frequency reference input is provided on the rear panel for applications requiring greater accuracy and stability.

Signal Integrity

As technology evolves and new devices are continuously developed, faster and more complex signals are needed to simulate and stimulate these new devices. The **WX2182** has the highest bandwidth in its class, enabling it to accurately duplicate and simulate high frequency test signals. With its wide sample clock generator range (up to 2.1 GS/s), 12-bit vertical resolution, 2 Vp-p and over 600 MHz output bandwidth, it is simple to create mathematical profiles, download the coordinates to the instrument and regenerate waveforms without compromising signal fidelity or system integrity.

DC or AC Coupled Outputs

The **WX2182** offers two output amplifiers: DC, which is output differentially and AC, which is single-ended. The DC path is available for applications where transitions and aberrations must be optimized, but bandwidth is limited. The AC path is available for applications requiring bandwidth and flatness for frequencies as high as 1,500 MHz.

Versatile Run Modes

Having a waveform generator that has such an enormous waveform creation capability without the ability to control how waveforms start and stop is unlikely to perform as desired in a real-life environment. For this purpose, the **WX2182** is equipped with a highly sophisticated mechanism that allows precise control over the start and stop timing, which is exactly what is required for interactive systems. When the instrument is operated on the bench, most applications require that the output is generated continuously or triggered from an external source, but as a system component and as part of a large array of other equipment, the waveform can be halted for a specified time, then operated for another period of time and stopped when it is no longer required. The enable/disable sequence is available when the **WX2182** is placed in armed remote operation only and the start and stop commands can be programmed to come through different inputs.

Besides armed operation, the waveform generator responds to various trigger sources such as: external trigger signal from the trigger input, button press on the front panel, external signal which is applied through the event input and finally, if none of the external stimuli are available, an internal trigger generator with a programmable trigger period can be utilized to generate repeated triggers.

As well as the above-described trigger facilities, the **WX2182** has two additional trigger modes that enhance its performance. The first is an override mode, where each trigger stops the running waveform and overrides the output to start over, and the second is a re-trigger mode, where the stop of the waveform triggers the next start after a predefined and programmable interval. While the first mode assures that every trigger starts a new cycle, the second mode assures that no new cycle is initiated before the previous cycle has been completed and a pre-programmed interval has lapsed before the next cycle is started.

Besides its trigger facilities, the **WX2182** can be gated to generate waveforms only when a specific level of the trigger input is reached. It also can be programmed to generate a counted burst of waveform cycles upon request, whether it comes from a trigger signal or from a remote command.

The **WX2182** also employs a delay circuit, where an external event triggers a delay which only after its programmed interval, the output is allowed to start generating waveforms.

Finally, to make sure no trigger slips away; the **WX2182** has a smart trigger detection that inhibits triggers if they are below or above a certain trigger pulse width and also holds off all triggers that are considered false, before the true signal appears and does the work.

Arbitrary Waveforms and Memory Segmentation

Waveform memory is the internal scratchpad where the waveforms reside. Larger memory banks provide for longer waveforms. One can use the entire memory for a single waveform or split the length to smaller segments. In this case, many waveforms can be stored in the same memory and replayed, one at a time, when recalled to the output. The memory segmentation feature may be combined with a sequence generator that can take different memory segments and link and loop them in any order as required for the specific application or test. The ability to loop waveform segments in a sequence can save a lot of memory and thus extend the capability of the generator to produce longer, more complex waveforms. Each of the **WX2182** channels can be programmed to have a unique setting of sequence steps and loops.

Dynamic Segment / Sequence Control

A control input is available on the **WX2182** rear panel that provides control over the replay of a specific memory segment. The control connector has 9 pins and hence allows replay of one of 256 waveform segments. A valid line must be asserted to validate segment change. Having the dynamic control feature, in effect, can serve as replacement of the sequence table where the real-time application can decide when and for how long a waveform will be generated. For much more complex applications, this same input may serve as a dynamic switch for complete sequences and thus create real-life scenarios for real-time applications.

Built-in Waveform Gallery

Care to use the instrument as a function generator? No need to calculate complex waveforms, as the **WX2182** does the work for you. Select the standard waveforms button and start generating any of ten waveforms that are pre-computed and available for immediate use.

Included are: sine, triangle, square, pulse, ramp, sinc and others. Remember that waveforms are created from sampled waveform points, and therefore some of the waveforms cannot be generated above certain frequencies, where the number of points is insufficient to draw a perfect shape. Nevertheless, by using advanced techniques, the **WX2182** generates standard sine and square waveforms at frequencies up to 250 MHz.

Wireless Waveforms

Wireless communication, with its continuous evolution, emerging standards, and increasing bandwidth and complexity is an area where traditional generators often require replacement or upgrading in order to keep up with modern applications. The **WX2182**, combined with the power of the optional wireless signal software package, creates the most flexible and powerful wireless signal generation tool available. Define and analyze virtually any test stimulus, whether it be at baseband, IF or RF frequencies, with a choice of analog or digital. Using the **WX2182** with the wireless signal tool, you can generate baseband I & Q, IF that are fed directly to an up-converter, or even RF signals.

Pulse Waveforms

Need to generate accurate and jitter-free pulses? Just set the main operating mode to pulse generator and the instrument will be transformed into a full-featured pulse generator. Need to control pulse transitions and placement? Just program each channel to output pulses with linear or fast transitions and control-edge placement with SCLK ps resolution. Further, if your application requires more than just a fixed duty cycle or programmable pulse width, then modulate and control your leading edge with any standard or arbitrary waveform shape. Combine all of these features with external pulse width control and you have an extremely versatile pulse generation tool. While using the pulse generator, do not forget that the **WX2182** is a digital instrument and as such, creates the pulses from a digital memory. Therefore, be sure to observe the limitations that have evolved in the creation of such an advanced instrument: while most of analog pulse generators can be emulated with the **WX2182**, one should observe the number of points that are required to generate the pulse shape, and take into consideration the time that is required to compute and output the waveform.

Local Operation

Operating the WX2182 from the front panel is intuitive and extremely easy. A large and user-friendly 4" back-lit color LCD display facilitates browsing through menus, updating parameters and displaying detailed waveform information. Combined with a numeric keypad, cursor position control and a knob, the front panel controls simplify the operation of this universal waveform source.

Remote Operation

Access speed is an increasingly important requirement for test systems. Ethernet, USB and GPIB interfaces are available so that the most suitable interface for the application may be selected. Remote control of instrument functions, parameters and waveform downloads is easily tailored to specific system environments, regardless of whether control is via a laptop computer or full-featured ATE system. IVI drivers and factory support will speed up system integration and minimize test development time and costs.

Remote Calibration

Normal calibration cycles in the industry range from one to three years, where instruments are sent to a service center, opened to allow access to trimmers, calibrated and certified for repeated usage. Leading-edge technology was employed on the **WX2182** to allow calibration from any **WX2182** remote interface such as USB, GPIB or LAN. Calibration factors are stored in a flash memory, thus eliminating the need to open instrument covers.

Manual Changes

Technical corrections to this manual (if any) are listed in the back of this manual on an enclosed MANUAL CHANGES sheet.

Safety Considerations

The **Model WX2182** has been manufactured according to international safety standards. The instrument meets IEC 61010-1, EN61010-1, CSA C22.2 No. 61010-1 and UL 61010-1 (Safety requirements for electrical equipment for measurement, control, and laboratory use – Part 1: General requirements). It has a metal chassis that is directly connected to earth via the chassis power supply cable (Safety Class I).

Only qualified, service-trained personal should remove instrument covers. Always disconnect the power cable and any external circuits before removing the instrument cover. Any adjustment, maintenance and repair of an opened, powered-on instrument must be performed by authorized service personal.

Do not use this product in any manner not specified by the manufacturer. The protective features of this product may be impaired if it is used in a manner not specified in the operation instructions.



WARNING

When the WX2182 is turned off with the front panel power switch, the instrument is placed in standby mode but is still connected to the mains. To disconnect the mains from the instrument, remove the power cord.

Do not remove instrument covers when operating the instrument or when the power cord is connected to the mains.

Only qualified, service-trained personal should remove instrument covers. Always disconnect the power cable and any external circuits before removing the instrument cover. Any adjustment, maintenance and repair of an opened, powered-on instrument must be performed by authorized service personal.

Do not use this product in any manner not specified by the manufacturer. The protective features of this product may be impaired if it is used in a manner not specified in the operation instructions.

Supplied Accessories

The instrument is supplied with a power cord and CD, which contains an electronic manual, IVI driver and supporting files. USB, LAN and synchronization cables are available upon request.

Specifications

Instrument specifications are listed in Appendix A. These specifications are the performance standards or limits against which the instrument is tested. Specifications apply under the following conditions: output terminated into 50 Ω after 30 minutes of warm up time, and within a temperature range of 20°C to 30°C. Specifications outside this range are degraded by 0.1% per °C.

Functional Description

A detailed functional description is given in the following paragraphs. The description is divided into logical groups: front panel input and output connectors, rear panel input and output connectors, operating modes, run modes, output type, output state, synchronization, and front panel indicators.

Front Panel Connectors and Indicators

The **Model WX2182** has six SMA connectors on its front panel: two for each main output, one used for accepting triggers and one for the SYNC output. Each connector on the front panel has a LED associated with it, indicating when the output or input is active (LED on), or when inactive (LED off). The function of each of the front panel connectors is described in the following paragraphs.

Main Output - Channels 1 and 2

There are two connectors for each output channel, marked Normal and Inverted. When using the DC couple mode, the output is generated differentially through these two connectors. The AC couple mode is single-ended and consequently, only the Normal connector outputs AC signals. The main output connectors generate standard waveforms to 250 MHz, arbitrary waveforms with 2.1 GS/s sampling rate, and sequenced waveforms that are made of arbitrary waveform segments. These outputs generate modulated and pulse waveforms, as well. Output source impedance is 50 Ω , therefore the cable connected to this output should be terminated with 50 Ω load resistance. For different load resistance, determine the actual amplitude from the following equation:

$$V_{\text{out}} = 2V_{\text{prog}} \left(\frac{50\Omega}{50\Omega + R_L} \right)$$

The output amplitude is doubled when the output impedance is above roughly 10 k Ω . Also, the output can be turned on and off. However, turning the output off stops the signal, but leaves low impedance on the output terminals.

SYNC Output

The SYNC output generates single or multiple TTL pulses for synchronizing other instruments (i.e., an oscilloscope) to the output waveform. The SYNC signal always appears at a fixed point relative to the waveform. The location of the sync pulse along the waveform is programmable. Since there is only one SYNC output, the output is associated with the channel 1 output, but can be changed to be sourced and synchronized to channel 2.

Note that the SYNC output is also used as a frequency marker when the **WX2182** is set to generate one of the modulation functions.

TRIG IN

In general, the trigger input is used for stimulating output waveforms at the main output connector(s). The trigger input is inactive when the generator is in continuous operating mode. When placed in trigger, gated or burst mode, the trigger input is made active and waits for the right condition to trigger the instrument. The trigger input is edge sensitive, i.e., it senses transitions from high to low or from low to high.

Trigger level and edge sensitivity are programmable for the trigger input. For example, if your trigger signal rides on a dc level, you can offset the trigger level to the same level as your trigger signal, thus assuring correct the threshold for the trigger signal. The trigger level is adjustable from -5V to +5V.

The trigger input is common to both channels. Therefore, if one of the **WX2182** channels is placed in trigger mode, the trigger input will affect this same channel. If both channels are placed in trigger mode the trigger input will affect both channels simultaneously.

USB

This connector accepts standard USB-1 disk-on-key memory sticks. The main purpose of this interface is to provide for external storage and download of setups and waveforms. This I/O cannot be used for controlling the instrument from remote.

Front Panel Controls

The front panel controls and keys are grouped in logical order to provide efficient and quick access to instrument functions and parameters. Refer to Figure 1-2 throughout the following description to understand the purpose and effect of each front panel control.

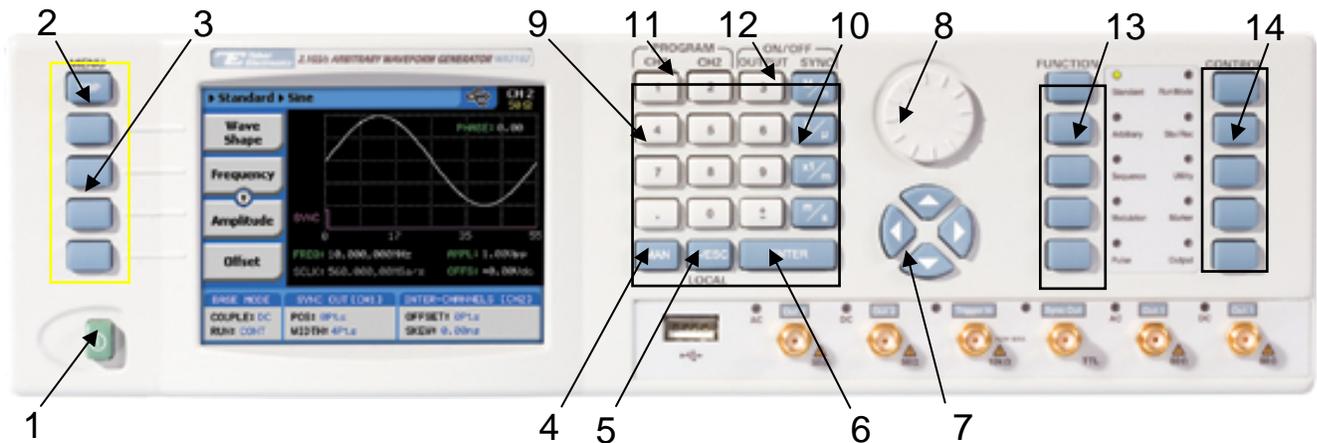


Figure 1-2, WX2182 Front Panel Controls



Note

The index in the following paragraphs point to the numbered arrows in Figure 1-2.

1. *Power Switch* – Toggles **WX2182** power ON and OFF
2. *Menu Top* – For certain functions, selects the root menu. This button is disabled during parameter editing
3. *Menu Soft Keys* – Select parameters to be audited. These buttons are disabled during parameter editing.
4. *MAN* – Manual trigger button, used in lieu of an external trigger signal.
5. *<-Esc (Local)* – Has two functions:
 - 1) When in edit mode, cancels edit operation, restores last value and returns to the main function screen
 - 2) When operating the **WX2182** from a remote interface, none of the front panel buttons are active except the Local button. When depressed, it restores control to front panel buttons
6. *Enter* – Has two functions:
 - 1) When multiple parameters are displayed on the screen, the cursor and the dial scroll through the parameters. Pressing Enter selects the parameter for edit. After the parameter has been modified, the Enter button locks in the new variable and releases the buttons for other operations
 - 2) When a parameter is modified, Enter can be used to replace the x1 suffix key
7. *Cursor UP, Down, Left and Right* – Has two functions:

- 1) When multiple parameters are displayed on the screen, the cursor and the dial scroll through the parameters
- 2) When a parameter is selected for editing, cursor buttons right or left move the cursor accordingly. Cursor buttons up or down modifies parameter value accordingly.
8. *Dial* – Has similar functionality as the cursor UP and Down keys.
9. *Numeral keypad* – These keys are used for modifying an edited parameter value.
10. *Parameter Suffixes (M/n, k/ μ , x1/m and m/s)* – These keys are used to place a suffix at the end of the parameter. They are also used for terminating an edit operation.
11. *Program CH1, CH2* – Use Program CH1 to modify the screen to display channel 1 parameters. Use Program CH2 to modify the screen to display channel 2 parameters. These keys can be used only when the **WX2182** is not in edit mode
12. *ON/OFF Output, Sync* – These keys can be used only when the **WX2182** is not in edit mode. The Output ON/OFF toggles output waveform, at the output connector, ON and OFF. The Sync ON/OFF toggles the sync waveform, at the SYNC output connector, ON and OFF
13. *Function* – These keys select one of 5 function menus that the **WX2182** can generate. The output functions are: Standard, Arbitrary, Sequenced, Modulated and Pulse. A LED lights next to the selected function.
14. *Control* – These keys select control menus that program the 8110A operating modes. The control menus are: Run Mode, Store/Recall, Utility, Markers and Output.

Rear Panel Input & Output Connectors

The **WX2182** has a number of connectors on its rear panel. These connectors are described below. Figure 1-3 shows rear panel plugs, indicators, connectors and other parts.



Figure 1-3, WX2182 Rear Panel

Sample Clock In

This SMB connector accepts an external signal that will replace the internal sample clock generator. This input accepts signals from 2 GHz to over 4 GHz, with an input power of 0dBm to 10dBm. The sample clock input is available for those applications requiring improved phase noise characteristics for the output signal. With a suitable source, the overall phase noise can be improved by a factor of up to 20dBc/Hz. The sample clock input is active only after selecting the external SCLK source option.



NOTE

The internal sample clock generator is sensitive to noise that might be injected through the Sample Clock input. Any signal that is connected to this input may impair the operation of the internal clock. Therefore, connect a cable to the Sample Clock In connector only if you intend to use it as an external clock source. For system applications, where cables are always connected to the Sample Clock In connector, make sure that the external source signal is turned off at all times when the internal sample clock source is in use.

Segment / Sequence Control In

This 9-pin connector accepts TTL signals. Pin 1 to 8 control bits, 0 to 7 and pin 9 accepts a valid signal. This connector is used for controlling segments or sequences dynamically, depending if the output generates arbitrary waveforms or sequences. A specific segment is selected by applying a binary code to the segment control input. The output is changed to the selected segment after a valid signal is asserted. The same works for sequences where a specific sequence is associated with a binary code and selected by asserting the valid signal.

Channels 1 and 2 have similar inputs and each channel can be controlled to have a unique set of waveform and sequences controlled from this connector.

Marker 1 / 2 Out

There are two markers available for each output channel. These are marked Marker 1 and Marker 2. The markers are generated differentially through SMB connectors. One may control marker position, width delay and amplitude. For bench operation, the display provides access to programming one marker transition however only when used remotely. Programmers may set multiple markers and program different marker properties for each transition instance.

Instrument Synchronization

The 9W4 combo D-sub connector accepts and arbitrates signals that are necessary to synchronize two model **WX2182**'s. Four of its pins are coaxial and are used for high-frequency signals, and the other five pins are used for low-frequency communication.

A special cable is required to connect between two instruments. For information on the connecting cable, contact your nearest Tabor dealer.

Event In

This BNC connector duplicates the operation of the front panel trigger input, except it is used for synchronizing **WX2182** operation with external events. The effect of the event input is shown in various tables of this chapter. The most common is to cause a sequence step to advance to another step.

The event input is level and edge sensitivity and can be programmed just as the trigger input for trigger level and trigger slope. The event input affects both channels simultaneously if they are programmed to sense transitions from this input.

Ref In

This BNC connector accepts signals within the range of 10 MHz to 100 MHz that reference the sample clock generator. This input is normally used for synchronizing system components to a single clock reference. The **WX2182** has to be programmed to reference frequency value and placed in external reference mode before it will use this input as reference.

LAN

This RG45 connector accepts standard Ethernet cable. Correct setting of the IP address is required to avoid conflicts with other instruments or equipment on the network. Information on how to change IP address and load instrument drivers to the computer is provided in the Installation chapter of this manual.

USB

This connector accepts standard USB-2 cable. The connection to the host computer is automatic and does not require any address setting from within the **WX2182**. The first time the **WX2182** is connected to the computer, it will request the driver file. This file is located on the CD which is supplied with the instrument. Information how to install the driver is provided in the Installation chapter of this manual.

GPIB

This 24-pin connector accepts standard GPIB cable. The GPIB address is configured using the front panel Utility menu. The **WX2182** conforms to the IEEE-488.2 standard. Programming protocol is SCPI version 1993.0. GPIB cables are available separately from your Tabor dealer.

AC Line In

This 3-prong AC LINE connector accepts AC line voltage. The **WX2182** senses the line voltage and sets the appropriate range automatically. Therefore, the traditional line voltage selector is not available on the rear panel. To avoid potentially hazardous situations, always connect the center pin to mains ground using the line cord that is supplied with the instrument.

AC Fuse

The AC fuse protects the **WX2182** from excessive current. Always replace the fuse with the exact type and rating as printed on the rear panel. The fuse value is T1.25AH/250V. If the fuse blows again after replacement, we strongly recommend that you refer your instrument immediately to the nearest Tabor service center.

Run Modes

The **WX2182** can be programmed to operate in one of three basic run modes: Continuous, Triggered and Gated. There are features associated with each basic run modes, such as: arming the output for an event to enable generation, delayed trigger, smart trigger and more. The **WX2182** can also be prepared to accept triggers from various sources, such as: front panel trigger input, rear panel event input, an internal trigger generator and more. On top, the generator can be programmed to respond differently to trigger in a way that each trigger can override preceding triggered cycles or launch a continuous trigger burst where the waveform stop triggers a new waveform start after a pre-programmed interval.

Summary of all run modes, trigger sources and trigger features is given below.

Continuous Run Mode

Bench operation usually requires that a continuous waveform is available at the output terminals when the instrument is powered up and the output is turned on. On the other hand, for system applications that tolerate signals only at a specific time frame, the **WX2182** can be armed from remote to generate waveforms only after it receives an enable command, and then aborted when the signal is no longer required. Table 1-1 summarizes the conditions in which the **WX2182** can operate when set to continuous run mode. Armed operation is described below.

Arming the Generator in Continuous Run Mode

Arming the **WX2182** is an operation that is normally carried out when the generator is operated from remote. For this reason, only a remote command can modify the arm option to Armed. When armed, the output can be enabled using valid events that are sensed in one of the front panel trigger input, the rear panel event input or a remote enable command. Once enabled, the waveform can be stopped by a remote abort signal only.

Table 1-1 summarizes the various controls for each output function of which the **WX2182** can be operated when set to continuous run mode. The various controls are explained below.

Waveform – basic output function that the **WX2182** can generate. There are five output functions available: Standard, Arbitrary, Sequenced (including advance sequencing), Modulated and Pulse.

Advance mode – affects the generator in sequenced and advanced sequencing only.

Arm Options – bench operation normally defaults to self-armed where the output generates waveforms immediately after turning it on. Arming the **WX2182** places the outputs in a wait-for-valid-enable signal before waveforms are generated through the output connectors.

Idle Waveform – defines the shape of the waveform when the generator is self-armed or when armed but has not been enabled yet.

Enable Signal – defines the source of the enable signal. The BUS option disables the event input and only a remote command will enable the output. Event defines the event input as the source for the enable signal. Only one source is active at a time.

Abort Signal – defines the source of the abort signal. In this case, only BUS will cause the signal to stop.

Wave Loops – attributed to the sequence modes only, it defines how many times a segment will loop in a specific sequence setting.

Seq Loops – attributed to the sequenced waveforms only, it defines how many times a sequence will loop in a specific advanced sequence setting.

Jump Flag – attributed to sequence functions only, it defines if a segment or sequence will advance to the next step or wait for an external event before the jump.

Jump Signal – defines the source of the event that will cause a segment to jump to the next step in a specific sequence setting.

Table 1-1, Arming the WX2182 in Continuous Run Mode

Waveform	Advance Mode	Arm Options	Idle Waveform	Enable Signal	Abort Signal	Wave Loops	Seq Loops	Jump Flag	Jump Signal
Standard	-	Self Armed	Wave	- (*)	-	-	-	-	-
	-	Armed	DC	BUS Event	BUS	-	-	-	-
Arbitrary	-	Self Armed	Wave	-	-	-	-	-	-
	-	Armed	DC	BUS Event	BUS	-	-	-	-
Sequenced	Auto	Self Armed	Sequence	-	-	1-1M	-	Bit (0 1)	Event
	-	Armed	Wave	BUS Event	BUS	1-1M	-	Bit (0 1)	Event
	Once	Armed	Wave	BUS Event	BUS	1-1M	1-1M	Bit (0 1)	-
	Stepped	Armed	Wave	BUS Event	BUS	-	-	-	Event
Advance Sequence	Auto	Self Armed	-	-	-	1-1M	-	Bit (0 1)	Event
	-	Armed	Sequence	BUS Event	BUS	1-1M	-	Bit (0 1)	Event
	Once	Armed	Sequence	BUS Event	BUS	1-1M	1-1M	Bit (0 1)	-
	Stepped	Armed	Sequence	BUS Event	BUS	-	-	-	Event
Modulated	-	Self Armed	-	-	-	-	-	-	-
	-	Armed	Wave	BUS Event	BUS	-	-	-	-
Pulse	-	Self Armed	-	-	-	-	-	-	-
	-	Armed	Wave	BUS Event	BUS	-	-	-	-

(*) defines not relevant for this mode

Triggered Run Mode

In triggered mode, the **Model WX2182** circuits are always armed to generate one output waveform. The trigger circuit is sensitive to transitions at the trigger input. Select between positive, negative or either transitions to trigger the instrument. You may also program the trigger level to the desired threshold level. When triggered, the generator outputs one waveform cycle and remains idle at the last point of the waveform.

The **Model WX2182** can be triggered from a number of sources:

- 1) Rear panel connector, designated as TRIG IN,
- 2) Front panel button marked as MAN TRIG (second function to the Enter button), and
- 3) Bus commands that are applied to the instrument from any interface, LAN, USB or GPIB.

Descriptions of the various trigger source options are detailed in the following paragraphs.

The trigger signal, whether it comes from an external source or from an interface command, is routed through electrical circuits. These circuits cause a small delay known as system delay. System delay cannot be eliminated completely. System delay is a factor that must be considered when applying a trigger signal. It defines the time that will lapse from a valid trigger edge or software command to the instant that the output reacts.

Table 1-2 summarizes the various controls for each output function of which the **WX2182** can be operated, when set to triggered run mode. The various controls are explained below.

Waveform – basic output function that the **WX2182** can generate. There are five output functions available: Standard, Arbitrary,

Sequenced (including advance sequencing), Modulated and Pulse.

Advance mode – affects the generator in sequenced and advanced sequencing only.

Arm Options – bench operation normally defaults to self armed where the output generate waveforms immediately after turning it on. Arming the **WX2182** places the outputs in a wait-for-valid-enable signal before waveforms are generated through the output connectors.

Idle Waveform – defines the shape of the waveform when the generator is self-armed or when armed but has not been enabled yet.

Initiate Signal – defines the source from where a trigger is expected to initiate a waveform cycle. F.P defines the front panel MAN button as a trigger source. The BUS option disables the trigger input and only a remote command will enable the output. Trigger defines the trigger input as the source for the trigger signal. Only one source is active at a time.

Abort Signal – defines the source of the abort signal. In this case, only BUS will cause the signal to stop.

Wave Loops – for standard and arbitrary waveforms, this field defines a loop counter (burst). For sequence modes only, it defines how many times a segment will loop in a specific sequence setting.

Seq Loops – attributed to the sequenced waveforms only, it defines how many times a sequence will loop in a specific advanced sequence setting.

Jump Flag – attributed to sequence functions only, it defines if a segment or sequence will advance to the next step or wait for an external event before the jump.

Jump Signal – defines the source of the event that will cause a segment to jump to the next step in a specific sequence setting.

Smart Trig – defines if smart trigger controls can be applied to the active trigger function

Table 1-2, WX2182 Triggered Run Mode Controls

Waveform	Advance Mode	Arm Options	Idle Waveform	Initiate Signal	Abort Signal	Wave Loops	Seq Loops	Jump Flag	Jump Signal	Smart Trig
Standard	-	Self Armed	-(*)	-	-	-	-	-	-	-
		Armed	DC	F.P. BUS Trigger	BUS	1-1M	-	-	-	Yes
Arbitrary	-	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. BUS Trigger	BUS	1-1M	-	-	-	Yes
Sequenced	Auto	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. BUS Trigger	BUS	1-1M	-	Bit (0 1)	Event	Yes
	Once	Armed	DC	F.P. BUS Trigger	BUS	1-1M	1-1M	Bit (0 1)	Event	-
	Stepped	Armed	DC	F.P. BUS Trigger	BUS	-	-	-	Event	Yes
Advanced Sequence	Auto	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. BUS Trigger	BUS	1-1M	-	Bit (0 1)	Event	Yes
	Once	Armed	DC	F.P. BUS Trigger	BUS	1-1M	1-1M	Bit (0 1)	Event	-
	Stepped	Armed	DC	F.P. BUS Trigger	BUS	-	-	-	Event	Yes
Modulated	-	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. BUS Trigger	BUS	1-1M	-	-	-	Yes
Pulse	-	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. BUS Trigger	BUS	1-1M	-	-	-	Yes

(*) defines not relevant for this mode

Trigger Run Mode Extensions

Trigger operation is available to assure that waveforms start only when a valid trigger is sensed at the trigger input connector. So it is with most waveform generators. However, the **WX2182** provides further refinement of this function in a way that the trigger circuit can receive triggers from multiple sources, arbitrate and delegate the signal to the main trigger circuit and also delay the start of the waveform by a pre-defined period. This is to make sure events are not wasted and waveforms re-played only when they are absolutely required in the system. The various trigger-run mode extensions are described below.

Delayed Trigger

The delayed trigger function is exactly the same as the trigger mode, except a programmable delay circuit inhibits the generation of the output waveform for a pre-determined interval following a valid trigger event. The programmed delay time defines the time that will lapse from a valid trigger (hardware or software) to output. The delay is programmable in steps of sample clock period and is can be set from 0 to 8e6 sample clock periods. Delayed trigger can be used in conjunction with external trigger, front panel manual trigger, or remote trigger command. It has no effect on the internal trigger timer, nor does it affect the event input.

Trigger Override

Normal trigger sequence requires that a waveform completes its cycle before the generator can be triggered to generate another waveform. Some applications, however, cannot wait for the end of the waveform, but must initiate another trigger cycle. The **WX2182** features an override mode that ignores the output and upon trigger, initiates a fresh output waveform, whether the last one has been completed or not. Note that the trigger override mode operates on

single segments only; it does not affect sequences and/or advanced sequence waveforms. Also note that the override trigger must precede the end of the signal by at least 64 sample clock periods.

Internal Timer

The internal timer generator operates as a free-running asynchronous trigger generator. It may be used for applications that require periodical and constant generation of output cycles, or to replace external trigger devices. The internal trigger generator is programmed in units of time through the range of 100 ns to 20 seconds. Note: in order to prevent errors, the period of the internal generator must be larger than the period of the output waveform.

Delay Timer

Contrary to the trigger override mode that was described before, certain applications cannot tolerate new cycles before the last one comes to a halt. The **WX2182** features a special re-trigger mode that is very similar to the internal trigger generator where the output is self-triggered by an internal trigger generator, but the new waveform starts only after a programmed delay interval, and therefore assures that triggers are spaced equally and never override active sequences. The delay value is programmed in units ranging from 152 to 8e6 sample clock periods.

Counted Burst

Counted burst is an extension of the trigger run mode. It allows generation of a counted number of output cycles, which are triggered by single trigger event. The burst counter can be used in conjunction with all waveform functions that the **WX2182** generates. The burst counter is programmed from 1 to 1,000,000.

Smart Trigger

Smart trigger is an additional extension of the trigger capability, where it narrows down to a specific pulse event. The trigger circuit can detect: a pulse having a pulse width larger than a programmed time value (<time), a pulse having a pulse width smaller than a programmed time value (>time), or a pulse having a pulse width between two limits (<>time).

An additional feature of the smart trigger is the holdoff function where the output is held idle after the first trigger and starts a waveform cycle only with the first valid trigger after a holdoff interval has lapsed.

Trigger Source

The Model **WX2182** can be stimulated to produce waveform functions from a number of trigger sources. These are described in the following paragraphs.

Summary of trigger source options and trigger features are listed in Tables 1-3 and 1-4, identifying legal run modes, trigger sources and trigger features and listing possible setting conflicts.

Trigger Input

When selecting the External trigger source, the front panel TRIG IN connector becomes active and every valid signal that is applied to this input is stimulating the **WX2182** to generate a new waveform cycle. When the external trigger source is active, all other sources are disabled, except the MAN front panel button. The characteristics of the trigger input are listed in Appendix A. The trigger input is sensitive to transitions and may be programmed to react on positive, negative or both positive and negative transitions. It can also be programmed to a specific trigger levels setting from -5 V to 5 V.

Manual Button

Alternately, if an external signal is not available, the front panel MAN button may also be used to trigger the instrument. This button is active only when EXT trigger option is selected.

Remote Command

When selecting Bus as a trigger source, the front panel TRIG IN connector and MAN button are disabled and only trigger commands from a remote interface are accepted by the instrument. In this case, the event input is also disabled. Make sure that the appropriate trigger source is selected if you mix remote and local operation.

Event Input

The event input is a rear-panel connector that duplicates functionality of the front panel trigger input, but can be used for detecting events or advancing sequence steps. For most applications, this input should not be used as a second trigger input. One of the main applications for this input is to serve as an enable port for armed operation in continuous run mode.

Similar to the front panel trigger input, the event input is sensitive to transitions and may be programmed to react on positive or negative transitions. It can also be programmed to a specific trigger levels setting from -5 V to 5 V.

Internal Timer

The internal timer is normally used when an external source trigger is not available and an application requires triggers at constant intervals. The internal trigger generator can be programmed for start-to-start trigger intervals, using time units and for stop-to-start trigger intervals, using sample clock period units.

When one of the internal timers is activated, all external and remote triggers are blocked to prevent interference to the internal timer from external devices.

Table 1-3, Run Modes and Trigger Source Options Summary

Run Mode	Trigger Option	Status
Continuous (Armed)	External – TRIG IN	Disabled
	External – EVENT IN	Active
	Internal	Disabled
	Front panel MAN button	Active
	Remote command	Active
Triggered	External – TRIG IN	Active
	External – EVENT IN	Disabled
	Internal	Disabled
	Front panel MAN button	Active
	Remote command	Active
Gated	External – TRIG IN	Active
	External – EVENT IN	Disabled
	Internal	Disabled
	Front panel MAN button	Active
	Remote command	Disabled

Table 1-4, Trigger Sources and Trigger Features Options Summary

Trigger Source	Trigger Feature	Status
TRIG IN	Self armed / Armed Delayed trigger Burst counter Internal timer Internal delay (re-trigger) Normal / Override <>time pulse width detector Holdoff	Disabled Active Active Disabled Disabled Active Active Active
EVENT IN	Self armed / Armed Delayed trigger Burst counter Internal timer Internal delay (re-trigger) Normal / Override <>time pulse width detector Holdoff	Active Disabled Disabled Disabled Disabled Disabled Disabled Disabled
Internal	Self armed / Armed Delayed trigger Burst counter Internal timer Internal delay (re-trigger) Normal / Override <>time pulse width detector Holdoff	Disabled Disabled Active Active Active Disabled Disabled Disabled
Bus	Self armed / Armed Delayed trigger Burst counter Internal timer Internal delay (re-trigger) Normal / Override <>time pulse width detector Holdoff	Active Active Active Disabled Disabled Active Active Active
MAN	Self armed / Armed Delayed trigger Burst counter Internal timer Internal delay (re-trigger) Normal / Override <>time pulse width detector Holdoff	Active Active Active Disabled Disabled Active Disabled Disabled

Gated Run Mode

In gated mode, the **WX2182** generates output waveforms on a stable gate level between two gate transitions. The only input that can be used in conjunction with this run mode is the front-panel trigger input connector. Also, the front panel MAN button can be used for the same purpose manually, but all other trigger entries are blocked for this function. The gate opens on the first trigger transition and closes on the second transition. Gate level and transition slopes are programmable. Trigger delay and re-trigger do not apply to the gated run mode.

Table 1-5 summarizes the various controls for each output function of which the **WX2182** can be operated when set to gated run mode. The various controls are explained below.

Table 1-5, WX2182 Gated Run Mode Controls

Waveform	Advance Mode	Arm Options	Idle Waveform	Initiate Signal	Abort Signal	Wave Loops	Seq Loops	Jump Flag	Jump Signal	Smart Trig
Standard	-	Self Armed	-(*)	-	-	-	-	-	-	-
		Armed	DC	F.P. Trigger	BUS	-	-	-	-	Yes
Arbitrary	-	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. Trigger	BUS	-	-	-	-	Yes
Sequenced	Auto	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. Trigger	BUS	1-1M	-	Bit (0 1)	Event	Yes
	Once	Armed	-	-	-	-	-	-	-	-
	Stepped	Armed	-	-	-	-	-	-	-	Yes
Advanced Sequence	Auto	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. Trigger	BUS	1-1M	1-1M	Bit (0 1)	Event	Yes
	Once	Armed	-	-	-	-	-	-	-	-
	Stepped	Armed	-	-	-	-	-	-	Event	Yes
Modulated	-	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. Trigger	BUS	1-1M	-	-	-	Yes
Pulse	-	Self Armed	-	-	-	-	-	-	-	-
		Armed	DC	F.P. Trigger	BUS	1-1M	-	-	-	Yes

(*) defines not relevant for this mode

Waveform – basic output function that the **WX2182** can generate. There are five output functions available: Standard, Arbitrary, Sequenced (including advance sequencing), Modulated and Pulse.

Advance mode – affects the generator in sequenced and advanced sequencing only.

Arm Options – bench operation normally defaults to self-armed when the output generates waveforms immediately after turning it on. Arming the **WX2182** places the outputs in a wait-for-valid-enable signal before waveforms are generated through the output connectors. Self-armed is not optional for gate operation.

Idle Waveform – defines the shape of the waveform when the generator is armed, but has not been enabled yet.

Initiate Signal – defines the source from where a gating signal is expected to initiate an output. F.P defines the front panel MAN button as a manual gating source.

Abort Signal – defines the source of the abort signal. In this case, only BUS will cause the signal to stop.

Wave Loops – for standard and arbitrary waveforms, this field defines a loop counter (burst). For sequence modes only, it defines how many times a segment will loop in a specific sequence setting.

Seq Loops – attributed to the sequenced waveforms only, it defines how many time a sequence will loop in a specific advanced sequence setting.

Jump Flag – attributed to sequence functions only, it defines if a segment or sequence will advance to the next step or wait for an external event before the jump.

Jump Signal – defines the source of the event that will cause a segment to jump to the next step in a specific sequence setting.

Smart Trig – defines if smart trigger controls can be applied to the active trigger function

Output Type

The Model **WX2182** can output various types of waveforms, including: Standard, Arbitrary, Sequenced, Modulated and Pulse. The various output types are described in the following paragraphs.

Standard Waveforms

An array of built-in standard waveforms is available when the **WX2182** is placed in its standard waveforms mode. The waveforms are calculated mathematically from known equations and converted to waveform coordinates that are then downloaded to the working memory. Unlike analog function generators that use electrical circuits to produce waveform shapes, the **WX2182** must compute its waveform coordinates every time a new function is selected or every time that parameters of the function change.

The **WX2182** can produce 11 standard waveforms: sine, triangle, square, ramp and pulse, sinc, gaussian and exponential pulses, DC and Pseudo-random noise. Some of the waveform parameters can be modified, such as: start phase for sine and triangle, duty cycle for square, rise and fall times for pulses, etc. The standard waveforms are the most commonly used wave shapes and therefore, were collected to a library of standard waveforms that can be used without the need to do off-product computation and use remote devices to download waveform coordinates.

The repetition rate of the standard waveforms is given in units of Hz. Since each channel has its own clock source, different waveforms, frequencies and run modes can be generated from its two outputs. On the other hand, when a common sample clock feed is selected, the two outputs must share the same run mode, but can still generate different waveforms and a unique set of parameters for each channel without interference between the channels. When synchronization between channels is turned on, minimal skew of the waveform starting edges is maintained between the two channels.

Figure 1-4 shows typical display for the standard waveforms function.

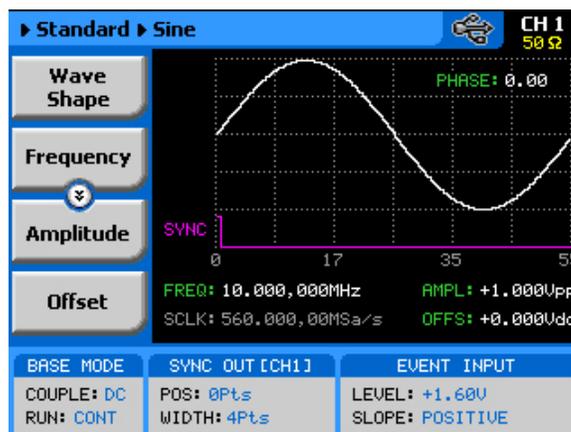


Figure 1-4, Typical WX2182 Standard Waveforms Display

Arbitrary Waveforms

One of the main functions of the **WX2182** is generating real-life waveforms. These are normally not sine waves and squares, but user specific waveforms. Generating such waveforms requires external utilities such as MatLAB or even spreadsheets, but having the program alone is not enough for the **WX2182**. Once the waveform is computed and defined, it must be converted to coordinates and then to a format, which the instrument can accept.

Arbitrary waveforms are stored as digital XY coordinates in a special memory, normally referred to as working memory. Each coordinate is referred to as waveform point, or waveform sample. The waveform is better defined if it has many waveform points. For example: with only 8 points, a sine waveform will hardly resemble the shape of a sine wave and will look more like an up and down staircase, but with 100 points, the same sine waveform will look almost perfect.

The final shape of the waveform is produced by a DAC (Digital to Analog Converter). The waveform samples are clocked to the DAC at a rate defined by the sample clock frequency. The output of the DAC converts the digital data to analog levels and passes on the signal to the output amplifier. The shape of the function is more or less the same as it comes out of the DAC, except it could be amplified or attenuated, depending on the required amplitude level.

The size of the working memory is limited to the way the hardware was designed. The **WX2182** has 16 Meg points available as standard (32 Meg point optional) to build one or more waveforms. There is no need to use the entire memory for only one waveform, as the memory can be divided into smaller segments and loaded with different waveforms. The generator can be then programmed to output one segment at a time.

The **Model WX2182** has separate arbitrary waveform memories for each channel and each channel can be loaded with different waveforms. Channels are not limited by the number of segments and by the shape of the waveforms.

Figure 1-5 shows a typical display for the arbitrary waveform function.

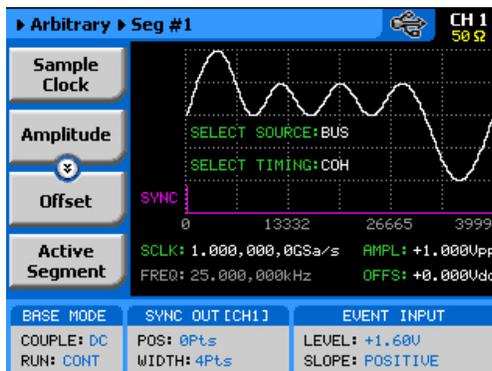


Figure 1-5, Typical WX2182 Arbitrary Waveforms Display

Sequenced Waveforms

The sequence generator is a very powerful tool that lets you link and loop segments in any way you desire. The **Model WX2182** has two separate sequence generators – one for each channel. Each sequence generator is dedicated to its own channel. Figure 1-6 shows a typical display for the sequenced waveforms function.

The sequence circuit is useful for generating long waveforms with repeated sections. The repeated waveform has to be programmed once and the repeater will loop on this segment as many times as selected. When in sequenced mode, there is no time gap between linked or looped segments. Sequence tables must be loaded to the generator before sequenced waveforms can be generated. The data for the sequence table is first prepared on an external platform and then downloaded to the generator using external utilities such as MatLab.

As a simple example of a sequenced waveform, look at Figures 1-7 through 1-9. The waveforms shown in these figures were placed in memory segments 1, 2 and 3, respectively. The sequence generator takes these three waveforms links and loops them in a predefined order to generate the waveform shown in Figure 1-10.

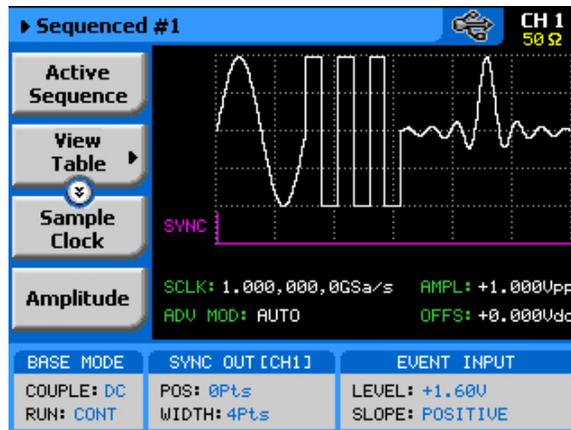


Figure 1-6, Typical WX2182 Sequenced Waveforms Display

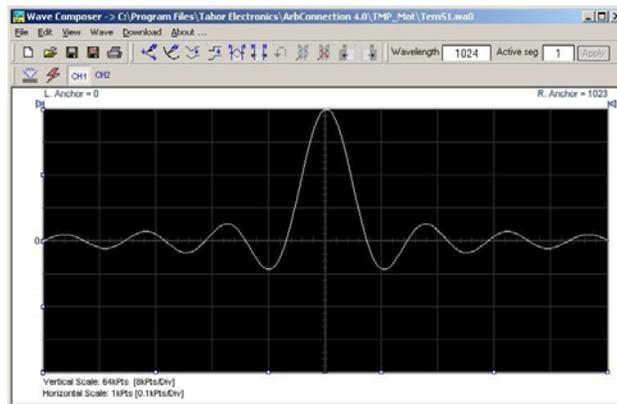


Figure 1-7, Segment 1 Waveform – Sinc

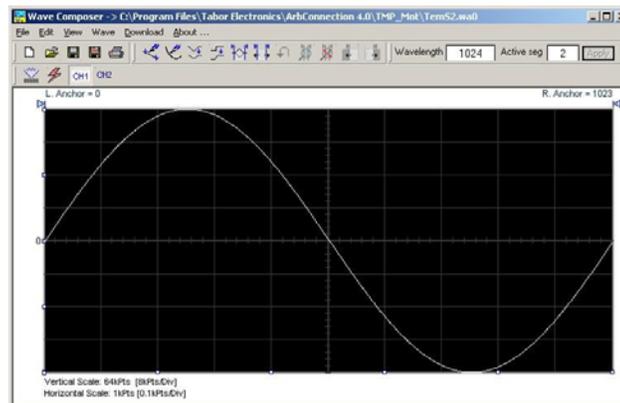


Figure 1-8, Segment 2 Waveform - Sine

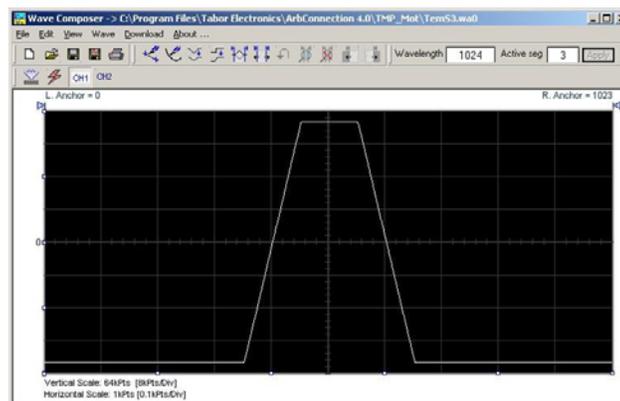


Figure 1-9, Segment 3 Waveform - Pulse

The following sequence was made of segment 2 repeated twice, segment 1 repeated four times, and segment 3 repeated two times.

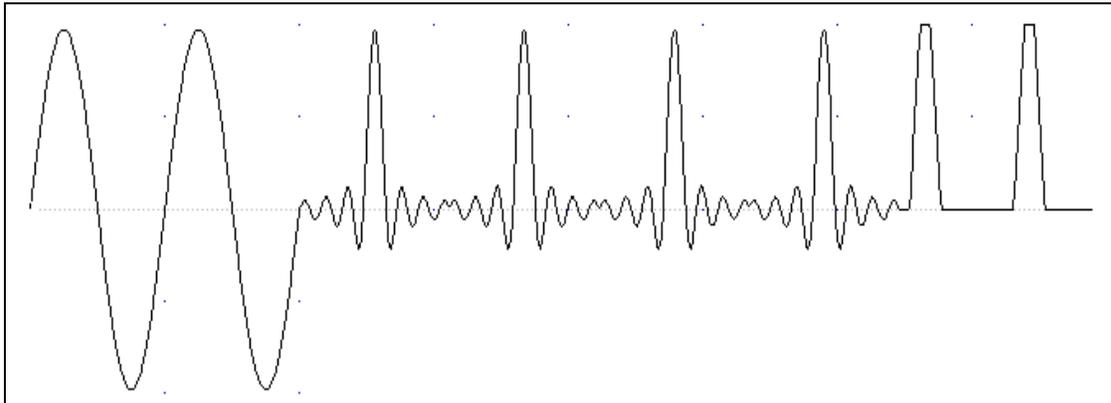


Figure 1-10, Sequenced Waveform

Figure 1-11 shows a typical front panel entry for a simple sequence table.

Sequenced #1 Table			
Step	Segment Number	Repeat Count	Jump Flag
1	4	2	1
2	8	4	0
3	10	8	0
4	12	11	0
5	2	1	0

SCLK: 1.000,000,000Sa/s AMPL: +1.000Vpp
 ADV MOD: AUTO OFFS: +0.000Vdc

BASE MODE	SYNC OUT [CH1]	EVENT INPUT
COUPLE: DC	POS: 0Pts	LEVEL: +1.60V
RUN: CONT	WIDTH: 4Pts	SLOPE: POSITIVE

Figure 1-11, Typical Display of a Sequence Table

Advanced Sequencing

Advanced sequencing is an extension of the sequencer functionality. It describes a function that is capable of sequencing complete sequences and therefore creating very complex scenarios that otherwise would have required extremely large memory banks. For example, a sequence of initiating communication between ground station and airborne vehicle requires repetition of a certain sequence of transmissions, and then the message itself is embedded in a separate transmission sequence. Such a complex

communication scheme is easily achieved with the advanced sequencing technique that has been employed by the **WX2182**. Information how to build sequences and generate advanced sequences is given in Chapter 3.

Sequence Advance Mode

As shown above, sequences are built as a simple table, defining link, segment, loops and advance bits. When placed in sequenced mode, the output is changed from step-to-step in ascending order. The term Sequence Advance Modes defines what is causing the instrument to step through the table rows. There are three basic advance modes that can be selected for the sequence mode: Auto, Once and Stepped. The various advance mode options are summarized separately for each run mode option in **Error! Reference source not found.**, **Error! Reference source not found.** and **Error! Reference source not found.**. These modes are explained in the following paragraphs.

Auto Advance Mode

Auto advance sequence is the mode used when the sequence is expected to run continuously from the first step in the sequence table to the last, and then resume the same sequence automatically from its first step. There are no interruptions between steps and no interruptions between the last and the first step of the sequence. When auto mode is selected, the **WX2182** can also be armed to start only when an enable signal is established.

Once Advance Mode

The Once sequence advance is the mode used when the sequence is expected to advance on trigger events only. The trigger source is selectable from an external, front panel MAN button, or a remote command. The sequence will run upon valid initiation signal and will stop and wait for another trigger to commence with another cycle. Jump bits can be placed in various sequence steps to allow dwelling on a specific waveform segment and the next step will start only after a valid jump signal is asserted.

The Once advance mode has a repeat counter for applications requiring a counted number of sequences. In this case, the counter can be programmed to generate 1 to 1,000,000 sequences automatically and then wait for a fresh trigger event to repeat this scenario.

Stepped Advance mode

Stepped advance sequence is the mode used when the sequence is expected to advance on specific events only. This advance mode operates in conjunction with all Run Modes, as listed in Tables 1-1, 1-2 and 1-5. When stepped advance mode is selected, the generator steps through sequence steps on valid events only. After the last step in the sequence table, the generator advances to the first row and repeats the sequence automatically.

Sequence Advance Source

As explained above, the Once and Stepped sequence advance modes require a stimulus signal to advance to the next step in the sequence table. There are a number of inputs where the **WX2182** can be programmed to wait for an event that implies go-to-next-step instruction, including: Front panel MAN button, Front panel TRIG IN connector, Rear panel EVENT IN connector, or a software command that is asserted to the generator through one of its interface options. Table 1-1, 1-2 and 1-5 list all advance source options for each of the basic run modes: Continuous, Triggered and Gated.

Modulated Waveforms

Modulated waveforms are computed mathematically and downloaded to the arbitrary waveform memory and generated at the output connector as an arbitrary waveform. The **WX2182** has a library of three most common and popular modulation schemes: FM, AM and Sweep. Other modulation schemes such as I&Q, PSK and QAM can be designed on an external utility and downloaded to the **WX2182** as arbitrary waveforms. The accuracy, stability and noise-free properties of the dual-channel **WX2182** generator will replay these waveforms with very little distortion or phase noise modulation.

Figure 1-12 shows a typical display for the modulated waveform function. General description of all modulation functions is given in the following.

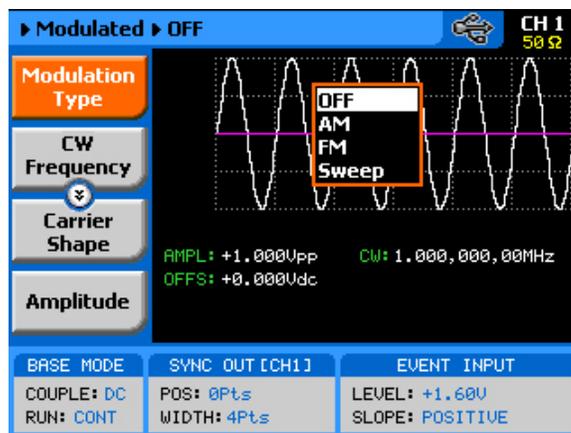


Figure 1-12, Typical WX2182 Modulated Waveform Display

Modulation Off

In modulation OFF, the output generates continuous Carrier Waveform frequency. The carrier waveform is sinewave and its frequency can be programmed using the CW Frequency menu. The value programmed for the CW Frequency parameter is used for all other modulation functions.

AM

The AM function enables amplitude modulation of a carrier waveform (CW). The carrier waveform is sinewave and is modulated by an internal waveform, normally referred to as an envelope waveform. The envelope waveform can be selected from sine, triangle, square or ramp shapes.

FM

The FM function allows frequency modulation of a carrier waveform (CW). The carrier waveform is sinewave and is modulated by an internal waveform, normally referred to as modulating waveform. The modulating waveform can be selected from sine, triangle or square waveforms.

Sweep

Sweep modulation allows carrier waveform (CW) to sweep from one frequency, defined by the sweep start parameter to another frequency, defined by the sweep stop parameter. Note that CW is sinewave only. The start and stop frequencies can be programmed throughout the entire frequency range of the instrument.

Pulse Waveforms

The pulse generator function transforms the instrument into a pulse generator with the capability to generate pulses, exactly as they would be generated by a stand-alone pulse generator instrument. However, one should not forget that the **WX2182** is a digital instrument and therefore the pulses are computed and placed in the waveform memory and then replayed at the output as arbitrary waveforms. When using this pulse function, one could program all pulse parameters in units of time (seconds) just as it would have been done on an analog instrument, but as a digital instrument, some of the parameters may take time to be computed and placed at the output connector.

All pulse parameters are programmable, including: period, pulse width, rise and fall times, delay, polarity and more. As a dual channel instrument, you may program different pulse settings for each channel, operate each channel separately or synchronize the two channels so that both outputs transition at the same time. Operating instructions for the pulse generator are given in Chapter 3.

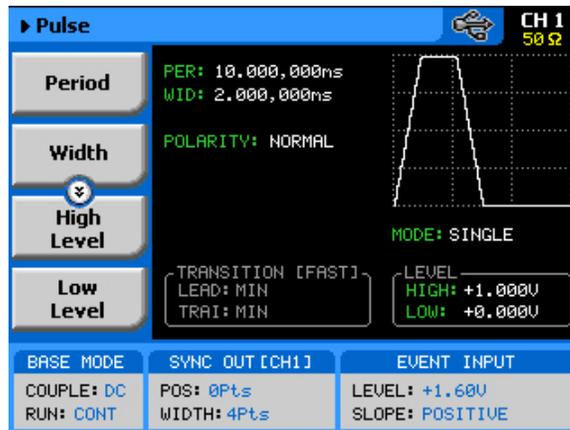


Figure 1-13, Typical WX2182 Pulse Generator Display

Multi-Instrument Synchronization

Applications that require more than two channels present a problem, because most of the instruments that are available on the market normally have at a maximum two output channels. With the built-in synchronization feature and with a simple synchronization cable and LAN connections, you can synchronize two **WX2182** units to create a fully synchronized four-channel system, without the slightest degradation of performance of individual instruments and with complete control over the start phase of each of the synchronized channels. Information on how to synchronize **WX2182** instruments is given in Chapter 3.

Output State

The main outputs can be turned on or off. However, the internal circuit is left connected to the output connector and so the impedance on this output remains low. If you do not intend to use a specific output, always remove the cables from this connector to prevent accidental application of external signals to the output circuit. For application safety reason, when the instrument is powered up, the outputs are always off. For the same reason, when front panel settings are recalled from a stored setup, the outputs are always off.

Programming the Model WX2182

Some of the **WX2182** functionality can be operated from the front panel and is mostly done with built-in libraries of waveforms. However, most applications require that waveforms are downloaded from a host computer and therefore, remote operation is essential for this class of instrument. Programming the **WX2182** requires that the appropriate software utilities be installed in the computer and the rest is a matter of practice and knowledge of the language in use. There are other system considerations, such as address selection, that have to be settled before programming the instrument. These topics are discussed in later chapters.

Low level programming of the **Model WX2182** is done using SCPI commands. Programming aspects are covered in Chapters 4. High-level drivers like IVI drivers are beyond the scope of this manual. Contact your Tabor representative for more information about high level drivers for the **Model WX2182**.

This page was intentionally left blank

Chapter 2

Configuring the Instrument

Title	Page
Installation Overview	2-3
Unpacking and Initial Inspection	2-3
Safety Precautions	2-3
Performance Checks	2-4
Power Requirements	2-4
Grounding Requirements	2-4
Long Term Storage or Repackaging for Shipment	2-4
Preparation for Use	2-5
Installation	2-5
Installing Software Utilities	2-5
Controlling the Instrument from Remote	2-6
Connecting to a Remote interface	2-6
Selecting a Remote interface	2-7
GPIB Configuration	2-8
USB Configuration	2-8
LAN Configuration	2-11
Choosing a Static IP Address	2-12

Installation Overview

This chapter contains information and instructions necessary to prepare the **Model WX2182** for operation. Details are provided for initial inspection, grounding safety requirements, repackaging instructions for storage or shipment, installation information and Ethernet address configuration.

Unpacking and Initial Inspection

Unpacking and handling of the generator requires standard precautions and procedures applicable to handling of all sensitive electronic equipment. The contents of all shipping containers should be gone through to be sure that all accessories are included and checked against the packing slip to determine that the shipment is complete.

Safety Precautions



CAUTION

This product is intended for use by qualified persons who are familiar with the safety precautions required to avoid possible injury. Read the operating information carefully before using the product.



WARNING

For maximum safety, do not touch the product, test cables, or any other instrument parts while power is applied to the circuit under test. ALWAYS remove power from the entire test system before connecting cables or jumpers, installing or removing cards from the computer, or making internal changes such as changing the module address.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always handle the instrument with dry hands.



WARNING

Always keep the lid closed when power is applied to the device under test conditions. Carefully read the Safety Precautions instructions that are supplied with your test fixtures. Any adjustment, maintenance and repair of an opened, powered-on instrument must be performed by authorized service personnel.

Performance Checks

The instrument has been inspected for mechanical and electrical performance before shipment from the factory. It is free of physical defects and in perfect electrical order. Check the instrument for possible damage in transit and perform the electrical procedures outlined in the section entitled Unpacking and Initial Inspection.

Power Requirements

The waveform generator may be operated from a wide range of mains voltage from 100 to 240 Vac. Voltage selection is automatic and does not require switch setting. The instrument operates over the power mains frequency range of 50 to 60Hz. Always verify that the operating power mains voltage is the same as that specified on the rear panel. The instruments power consumption is 150VA max.

The **WX2182** should be operated from a power source with neutral or near ground (earth potential). The instrument is not intended for operation from two phases of a multi-phase ac system or across the legs of a single-phase, three-wire ac power system. Crest factor (ratio of peak voltage to rms.) should be typically within the range of 1.3 to 1.6 at 10% of the nominal rms. mains voltage.

Grounding Requirements

To ensure the safety of operating personnel, the U.S. O.S.H.A. (Occupational Safety and Health) requirement and good engineering practice mandate that the instrument panel and enclosure be "earth" grounded. Although BNC housings are isolated from the front panel, the metal part is connected to earth ground.



WARNING

Do not attempt to float the output from ground, as it may damage the Model WX2182 and your equipment.

Long Term Storage or Repackaging for Shipment

If the instrument is to be stored for a long period of time or shipped to a service center, proceed as directed below. If repacking procedures are not clear to you or, if you have questions, contact your nearest **Tabor** Representative, or the **Tabor** Customer Service Department.

1. Repack the instrument using the wrappings, packing material and accessories originally shipped with the unit. If the original container is not available, purchase similar replacement materials.
2. Be sure the carton is well-sealed with strong tape or metal straps.
3. Mark the carton with the model and serial number. If it is to be shipped, show sending and return addresses on two sides of the box.



NOTE

If the instrument is to be shipped to Tabor for calibration or repair, attach a tag to the instrument, identifying the owner. Note the problem, symptoms, and service or repair desired. Record the model and serial number of the instrument. Show the RMA (Returned Materials Authorization) order as well as the date and method of shipment. **ALWAYS OBTAIN AN RMA NUMBER FROM THE FACTORY BEFORE SHIPPING THE WX2182 TO TABOR.**

Preparation for Use

Preparation for use includes removing the instrument from the container box, installing the software and connecting the cables to its input and output connectors.

Installation

If the intention is to mount the instrument in a rack, it must be installed in a way that clears air passage to its cooling fans. For inspection and normal bench operation, place the instrument on the bench so it is clear of any obstructions to the rear fan, to ensure proper airflow.



CAUTION

Using the WX2182 without proper airflow will result in damage to the instrument.

Installing Software Utilities

The **WX2182** is supplied with a CD that contains the following programs: IVI Driver, USB driver and some other utilities to aid you with the operation of the instrument. For bench operation, all that you need from the CD is this manual. However, it is recommended that you stow away the CD in a safe place in case you want to use the **WX2182** from a host computer or a system in the future.

The *IVI driver* is a useful utility that provides standard communication and commands structure to control the **WX2182** from remote. Programming examples are also available to expedite your software development. The IVI driver comes free with the **WX2182**. However, you'll need the IVI engine and visa32.dll run time utilities to be able to use the IVI driver. The additional utilities can be downloaded for free from **Tabor's** web site – www.taborelec.com.

The *USB driver* is required if you intend to connect the **WX2182** to a host computer on a USB bus. Information how to connect the USB cable and how to load the software is given in this chapter.

Controlling the Instrument from Remote

In general, the **WX2182** can be controlled from remote, using one of the following interfaces: USB, Ethernet or GPIB. Remote interface cables are not supplied with the instrument, so if you plan on using one of the remote programming options, make sure you have a suitable cable to connect to your host computer. The following paragraphs describe how to connect and configure the **WX2182** to operate from remote. The description is given for computers fitted with Windows XP, but installing software on other Windows versions is quite similar.

Connecting to a Remote interface

You can connect your **Tabor WX2182** to GPIB, USB, or LAN adapters, depending on the application and requirements from your system. Installing interface adapters on your computer are not described in this manual, since the installation procedures for these adapters change frequently. Follow the instructions supplied with your particular adapter. Before proceeding with the remote interface installation, install an adapter card and follow the instructions as follows:

GPIB Connection

Direct connection between a host computer and a single device with GPIB is not recommended, since GPIB adapters are usually expensive and not really required for direct connection. Use a GPIB connection in cases where download speed is critical to the system or when you already have a GPIB system in place and you are adding the **WX2182** as a GPIB device. The GPIB port is connected with a special 24-wire cable. Refer interconnection issues to your GPIB supplier. After you connect the **WX2182** to the GPIB port, proceed to the GPIB Configuration section in this chapter for instructions how to select a GPIB address.

USB Connection

Direct connection between a single-host computer and a single device with USB is recommended, as this does not require any specific considerations or device configurations. Just connect your **Tabor WX2182** to your PC using a standard USB cable and the interface will self-configure. After you connect the **WX2182** to the USB port, proceed to the USB Configuration section in this chapter for instructions how to install the USB driver.

LAN Connection

Direct connection between a single-host computer and a single device with 10/100/1000 BaseT is possible, but you must use a special cable that has its transmit and receive lines crossed. If your site is already wired, connect the **WX2182** via twisted-pair Ethernet cable. Be sure to use twisted-pair wires designed for 10/100/1000 BaseT network use (phone cables will not work). Refer interconnection issues to your network administrator. After you connect the **WX2182** to the LAN port, proceed to the LAN Configuration section in this chapter for instructions how to set up LAN parameters.

Selecting a Remote interface

The **WX2182** is supplied by the factory with the active remote interface set to USB. If you intend to use USB connection, all you need to do is connect your USB cable and proceed with the USB Configuration instructions as given in this chapter to install the USB driver and configure the USB port (first connection only). If you already used your instrument in various platforms and want to re-select your interface, you need to access the Select Interface screen as shown in **Error! Reference source not found..** To access this screen, press the Utility key in the Control group, then select the Remote Interface soft key and then the Select Interface soft key button.

Use the cursor keys left and right to point to the required interface option, then press Enter. The new interface will initialize and the icon at the top will be updated and will flag the active interface option.

The interface icon is always displayed at the top of the screen, so if you are not sure which of the interfaces is selected, compare the following icons to what you have on the screen:



Designates GPIB interface is selected and active. GPIB configuration is required to communicate with your PC.



Designates USB interface is selected and active. First connection requires USB configuration and software driver installation to communicate with your PC.



Designates LAN interface is selected and active. LAN configuration is required to communicate with your PC.

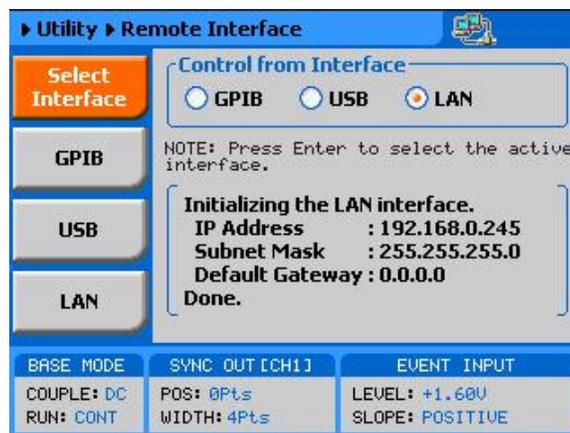


Figure 2-1, Selecting a Remote Interface

GPIB Configuration

GPIB configuration requires an address setting only. If you intend to use more than one instrument on the bus, you have to make sure each device has a unique address setting. GPIB address is programmed from the front panel Utility menu as shown in Figure 2-2. To access this screen, press the Utility control button, then press the Remote Interface soft key button and then select the GPIB soft key button. The display will be updated with the current GPIB address. The default address is 4. To modify the address, press the Enter key and use the dial or keypad to select the new address. Press Enter for the **WX2182** to accept the new address setting.



Configuring your GPIB address setting does not automatically select the GPIB as your active remote interface. Setting a remote interface is done from the Select interface menu. Information how to select and Interface is given earlier in this chapter.



Figure 2-2, GPIB Configuration Screen

USB Configuration

The USB requires no front panel configuration parameters. Following the simple installation steps as shown later in this chapter, just connect your Tabor **WX2182** to your PC using a standard USB cable and the interface will self-configure. The first time you connect the generator to your PC, the new hardware will be detected and the message, as shown in **Error! Reference source not found.**, will appear. After a few seconds, the message, as shown in **Error! Reference source not found.**, will appear.



Figure 2-3, USB Device Detected, 1st Message



Figure 2-4, USB Device Detected, 2nd Message

Immediately thereafter, the Found New Hardware Wizard will open, as shown in **Error! Reference source not found.** Select the Install the software automatically (Recommended) option and click on next. Note that NI I/O library 15.0 or later must be installed on your computer for the driver to install automatically. When the new driver has been detected and installed, expect to see the following dialog box on the computer screen:



Figure 2-5, Found New Hardware Wizard

Error! Reference source not found. shows that the Tabor **WX2182** USB Waveform Generator has been found and the software driver installed. To make sure your USB port and the Tabor WX2182 configured correctly, compare your Device Manager to the example in **Error! Reference source not found.**



Figure 2-6, New Hardware Found and Software installed

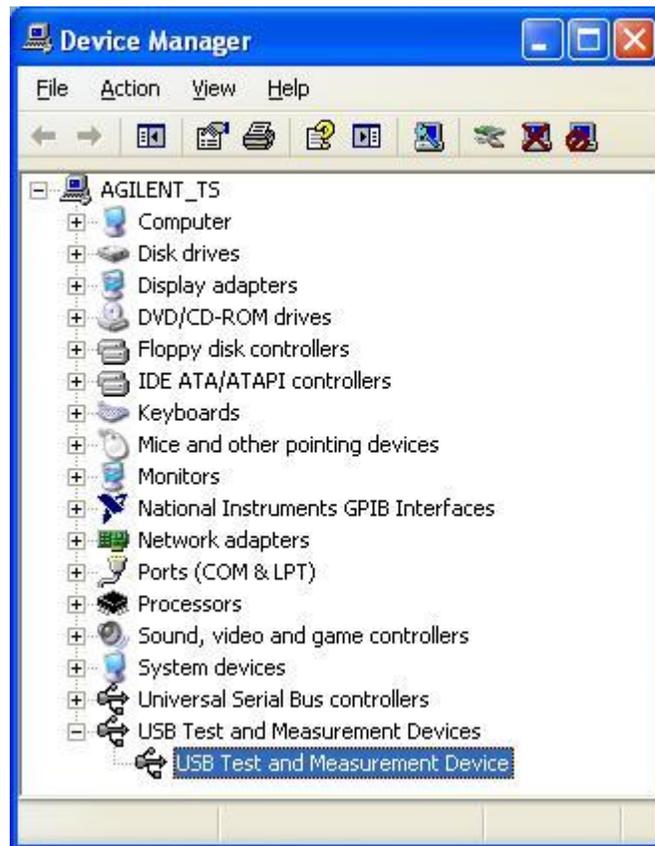


Figure 2-7, Model WX2182 Configured for USB Operation

Figure 2-8 shows that the **Tabor WX2182** USB Waveform Generator has been found and the software driver installed. However, the process does not end at this point, but continues to assign a logical port address to the USB driver. After you click on Finish, the Found New Hardware message appears. However, in this case it found a USB serial port, as shown in Figure 2-8.

**Note**

Configuring your USB setting does not automatically select the USB as your active remote interface. Setting a remote interface is done from the Select Interface menu. Information how to select and Interface is given earlier in this chapter.

LAN Configuration

There are several parameters that you may have to set, in order to establish network communications using the LAN interface. Primarily, you'll need to establish an IP address. You may need to contact your network administrator for help in establishing communications with the LAN interface. To change LAN configuration, you need to access the LAN screen, as shown in Figure 2-8.

To access this screen, press the Utility control button, then press the Remote Interface soft key button and select the LAN soft key button. The display will be updated with the current LAN settings.

Note: there are some parameters that are shown on the display that cannot be accessed or modified: Physical Address and Host Name. These parameters are set in the factory and are unique for this specific product. The only parameters that can be modified are the IP Address, the Subnet mask and the Default gateway. Correct setting of these parameters is essential for correct interfacing with the LAN network. Description of the LAN settings and information on how to change them is given in the following.

**Note**

Configuring your LAN setting does not automatically update LAN parameters or select the LAN as your active remote interface. Setting a remote interface is done from the Select interface menu. LAN parameters will be updated only after re-selecting the LAN interface from the Select Interface menu. Information how to select and Interface is given earlier in the chapter.

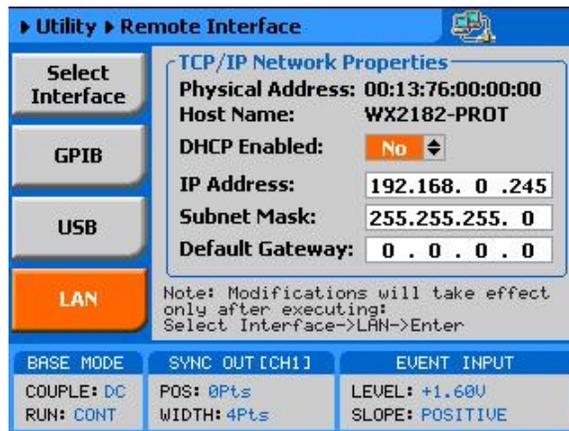


Figure 2-8, LAN Configuration Screen

There are three LAN parameters in this screen that can be modified and adjusted specifically to match your network setting, as described below. Consult your network administrator for the setting that will best suit your application.

- **IP address** - The unique, computer-readable address of a device on your network. An IP address typically is represented as four decimal numbers separated by periods (for example, 192.160.0.233). Refer to the next section: Choosing a Static IP Address.
- **Subnet mask** - A code that helps the network device determine whether another device is on the same network or a different network.
- **Gateway IP** - The IP address of a device that acts as a gateway, which is a connection between two networks. If your network does not have a gateway, set this parameter to 0.0.0.0.

Choosing a Static IP Address

For a Network Administered by a Network Administrator

If you are adding the Ethernet device to an existing Ethernet network, you must choose IP addresses carefully. Contact your network administrator to obtain an appropriate static IP address for your Ethernet device. Also have the network administrator assign the proper subnet mask and gateway IP.

For a Network without a Network Administrator

If you are assembling your own small Ethernet network, you can choose your own IP addresses. The format of the IP addresses is determined by the subnet mask. You should use the same subnet mask as the computer you are using with your Ethernet device. If your subnet mask is 255.255.255.0, the first three numbers in every IP address on the network must be the same. If your subnet mask is 255.255.0.0, only the first two numbers in the IP addresses on the network must match.

For either subnet mask, numbers between 1 and 254 are valid choices for the last number of the IP address. Numbers between 0 and 255 are valid for the third number of the IP address, but this number must be the same as other devices on your network if your subnet mask is 255.255.255.0.

Table 2-1 shows examples of valid and invalid IP addresses for a network using subnet mask 255.255.255.0. All valid IP addresses contain the same first three numbers. The IP addresses in this table are for example purposes only. If you are setting up your own network, you probably do not have a gateway, so you should set these values to 0.0.0.0.

Table 2-1, Valid and Invalid IP Addresses for Subnet Mask 255.255.255.0

IP Address	Comment
123.234.45.211	Valid.
123.234.45.213	Valid. The first three numbers match the previous IP address. The fourth number must be a unique number in the range of 1 to 254.
123.202.45.214	Invalid. Second number does not match the previous IP addresses. The first three numbers must match on all IP addresses with subnet mask 255.255.255.0.
123.234.45.0	Invalid. The first three numbers are valid but the fourth number cannot be 0.
123.234.45.255	Invalid. The first three numbers are valid but the fourth number cannot be 255.



TIP

To find out the network settings for your computer, perform the following steps:

- For Windows 98/Me/2000/XP
 1. Open a DOS prompt.
 2. Type IPCONFIG.
 3. Press <Enter>.

If you need more information, you can run ipconfig with the /all option by typing IPCONFIG /all at the DOS prompt. This shows you all of the settings for the computer. Make sure you use the settings for the LAN adapter you are using to communicate with the LAN device.

Chapter 3

Using the Instrument

Title	Page
Overview	3-4
Inter-Channel Dependency	3-4
Output Termination	3-4
Input / Output Protection	3-5
Power On/Reset Defaults	3-5
Controlling the WX2182	3-6
WX2182 Front Panel Menus	3-8
Pulse Menus	3-10
Control Menus	3-12
Enabling the Outputs	3-14
Selecting a Function Shape	3-14
Changing the Output Frequency	3-15
Changing the Sample Clock Frequency	3-16
Selecting an Output Couple	3-17
Programming the Amplitude and Offset	3-18
Programming the Output Power	3-19
Selecting a Run Mode	3-21
Continuous Run Mode	3-22
Triggered Run Mode	3-23
Using the Delayed Trigger	3-25
Using the Built-in Auto-Trigger Generators	3-25
Gated Run Mode	3-26
Abort	3-27
Using the Manual Trigger	3-28
Using the SYNC Output	3-28
Synchronizing Channel 1 and Channel 2	3-29
Controlling Cross-Channel Propagation	3-30
Using External Clock References	3-31
Using an External SCLK Source	3-32
Using an External Clock Reference Source	3-33

Generating Standard Waveforms	3-35
Sine Wave	3-36
Triangle Wave	3-37
Square Wave	3-37
Ramp Wave	3-38
Sinc Wave	3-39
Gaussian Wave	3-40
Exponential Wave	3-41
DC Wave	3-42
Noise Wave	3-42
Standard Waveforms and Run Mode Options	3-43
Generating Arbitrary Waveforms	3-45
What Are Arbitrary Waveforms?	3-45
Generating Arbitrary Waveforms	3-46
Using the Dynamic Segment Control	3-48
Arbitrary Waveforms and Run Mode Options	3-49
Generating Sequenced Waveforms	3-51
What are Sequenced Waveforms?	3-52
Sequence Table Elements	3-55
Editing the Sequence Table	3-55
Selecting Sequence Advance Mode	3-56
Sequences and Run Mode Options	3-58
Using Advanced Sequencing	3-60
Using the Dynamic Sequence Control	3-61
Generating Modulated Waveforms	3-62
Off	3-63
AM	3-64
FM	3-65
Sweep	3-67
Modulated Waveforms and Run Mode Options	3-69
Generating Pulse Waveforms	3-70
Pulse Parameters	3-72
Understanding Pulse Parameters	3-72
Pulse Modes	3-74
Single Pulse Mode	3-75
Delayed Pulse Mode	3-76
Double Pulse Mode	3-77
Programming Pulse Polarity	3-78
Applying Linear Transitions	3-79
Programming the Amplitude Level Mode	3-81
Pulse Design Limitations	3-83

Settings Conflict Errors	3-84
Amplitude Errors	3-85
Pulse Timing Errors	3-85
Pulse Linear Transition Errors	3-85
Pulse Delay Errors	3-86
General Pulse Errors	3-86
Using Markers	3-87
Using Store/Recall	3-89
Storing Instrument Setups and Waveforms	3-89
Recalling Instrument Setups and Waveforms	3-91

Overview

This chapter contains information about how to operate the **Tabor WX2182**. Operation is divided into two general categories: basic bench operation, and remote operation (GPIB, USB and ENET). Basic bench operation, which is covered in this section, describes how to operate the arbitrary waveform generator using front panel sequences.

The following paragraphs describe the various modes of operation and give examples of how to program the **Model WX2182**. The manual is organized by instrument function, and instructions are given in each paragraph on how to use this function from the front panel.

Inter-Channel Dependency

The **WX2182** has two completely independent output channels. Each channel can be programmed to output a unique set of functions and parameters, which can be generated using separate run modes. As each channel is completely separate, there is no influence from one channel on its adjacent channel. There are a few controls that are shared by the two channels including: trigger and event inputs, sync output and remote interface connections.

On the other hand, there are many applications that require two (or more) channels. These are normally expected to share output frequency, sample clock and retain a controllable phase dependency. In this case, the **WX2182** can be placed in a common sample clock feed mode and transform its operation to a dual channel generator where run mode and output function are shared, but each channel remains independent to generate different waveforms and amplitudes.

Output Termination

During use, output connectors must be properly terminated to minimize signal reflection or power loss due to impedance mismatch. Proper termination is also required for accurate amplitude levels at the output connectors. Use 50 Ω cables and terminate the main and SYNC cables with terminating resistors. Always place the 50 Ω termination at the far end of the cables.

The **WX2182** has two output connectors for each channel, marked "Normal" and "Inverted". If single-ended output is required, the other output must be terminated with a 50 Ω plug termination, right at the output connector. The DC is generated differentially, but the AC output path is available through the Normal output only as a single-ended signal and therefore, termination on the other output is not a requirement.

Note that the display reading of the amplitude level is calibrated to show the actual level on the load, when the load impedance is roughly 50 Ω . In cases where the load has different impedance, the display will indicate a reading that does not match the actual amplitude level on the load.

Input / Output Protection

The **Model WX2182** provides protection for the internal circuitry that is connected to input and output connectors. Refer to the specifications in Appendix A to determine the level of protection associated with each input or output connector.



WARNING

The outputs can only be connected to resistive loads. Connecting the WX2182 to inductive or capacitive loads may damage the output and void the warranty on the instrument.

Power On/Reset Defaults

The **WX2182** utilizes non-volatile memory backup that automatically stores the last setup before the generator has been turned off. Every time you turn on the instrument, the non-volatile memory updates the front panel setting with modes, parameters and waveforms from its last setting with only one exception. For safety reasons, the outputs remain off even if they were turned on before powering down the **WX2182**.

After power on, the instrument displays information messages and updates the display with the last setup information. The **WX2182** can always be reset to its default values. Information on how to restore default parameters is given below.

If you are not yet fully familiar with front panel operation of the **WX2182**, you may find yourself locked into a "dead-end" situation where nothing operates the way it should. The fastest way to restore the generator to a known state is by resetting the instrument to factory defaults.

As seen below in Figure 3-1 you can reset parameters to factory defaults as follows:

1. Press the Utilities control key
2. Press the Factory Rests soft key
3. Select Yes or No in the pop-up dialog box

Table 3-1 summarizes factory defaults for the most common parameters. A complete list of all parameters and their defaults, as well as their maximum and minimum values is given in the Programming Reference chapter.

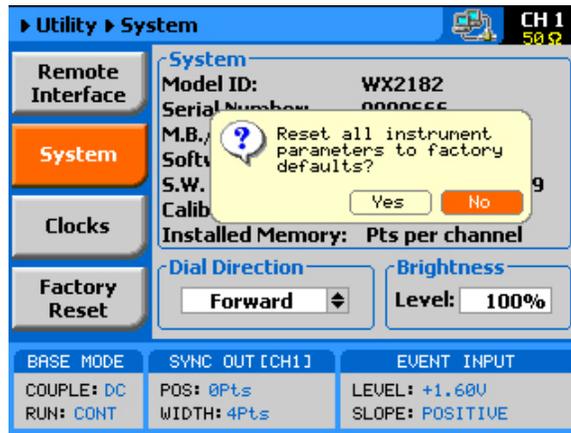


Figure 3-1, Reset WX2182 to Factory Defaults

Table 3-1, Default Conditions after Reset

Function / Parameter	Default
Outputs State	Off
Output Couple Path	DC
SYNC State	Off
Operating Mode	Continuous
Active Channel	1
Marker Output State	Off
Output Function	Standard
Output Function Shape	Sine
Standard Wave Frequency	10 MHz
User Wave Sample Clock	1 GSa/s
Sample Clock Feed	Separate
Sample Clock Source & Reference	Internal
Amplitude	0.5 V
Trigger Slope:	Positive
Trigger Level:	1.6 V
Trigger Source:	External

Controlling the WX2182

Controlling **WX2182** function, modes and parameters is simply a matter of pressing once or twice on the appropriate button as described in the following paragraphs. Refer to Figure 3-2 throughout this description.

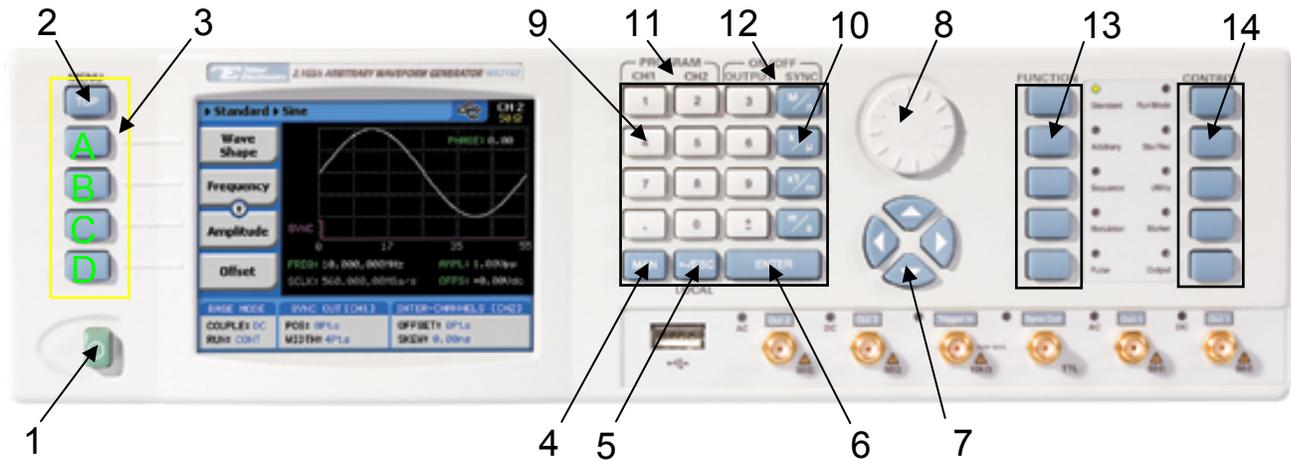


Figure 3-2, WX2182 Front Panel Operation



Note

The index in the following paragraphs point to the numbered arrows in Figure 1-2.

1. **Power Switch** – Toggles **WX2182** power ON and OFF
2. **Menu Top** – For certain functions, selects the root menu. This button is disabled during parameter editing
3. **Menu Soft Keys** – These select parameter to be audited. These buttons are disabled during parameter editing
4. **MAN** – Manual trigger button, used in lieu of an external trigger signal
5. **<Esc> / (Local)** – Has two functions:
 - 1) When in edit mode, cancels edit operation, restore last value and returns to the main function screen
 - 2) When operating the **WX2182** from a remote interface, none of the front panel buttons are active except the Local button. When depressed, it restores control to front panel buttons
6. **Enter** – Has two functions:
 - 1) When multiple parameters are displayed on the screen, the cursor and the dial scroll through the parameters. Pressing Enter selects the parameter for edit. After the parameter has been modified, the Enter button locks in the new variable and releases the buttons for other operations
 - 2) When a parameter is modified, Enter can be used to replace the x1 suffix key

7. **Cursor UP, Down, Left and Right** – Has two functions:
 - 1) When multiple parameters are displayed on the screen, the cursor and the dial scroll through the parameters.
 - 2) When parameter is selected for editing, cursor buttons right or left move the cursor accordingly. Cursor buttons up or down modifies parameter value accordingly.
8. **Dial** – Has similar functionality as the cursor UP and Down keys.
9. **Numerical keypad** – These keys are used for modifying an edited parameter value.
10. **Parameter Suffixes** (*M/n, k/ μ , x1/m and m/s*) – These keys are used to place suffix at the end of the parameter. They are also used for terminating an edit operation.
11. **Program CH1, CH2** – Use Program CH1 to modify the screen to display channel 1 parameters. Use Program CH2 to modify the screen to display channel 2 parameters. These keys can be used only when the **WX2182** is not in edit mode.
12. **ON/OFF Output, Sync** – These keys can be used only when the **WX2182** is not in edit mode. The Output ON/OFF toggles output waveform, at the output connector, ON and OFF. The Sync ON/OFF toggles the sync waveform, at the SYNC output connector, ON and OFF.
13. **Function** – These keys select one of 5 function menus that the **WX2182** can generate. The output functions are: Standard, Arbitrary, Sequenced, Modulated and Pulse. An LED lights next to the selected function.
14. **Control** – These keys select control menus that program the **8110A** operating modes. The control menus are: Run Mode, Store/Recall, Utility, Markers and Output.

WX2182 Front Panel Menus

The **WX2182** has over 150 parameters that control functions, modes, waveforms and auxiliary functions and an enormous combination of these parameters to define an appropriate function for a specific application. Due to the complexity of the product, the functions were divided into logical groups and sub-groups and access to these groups is provided using the soft key menus.

On the right side of the instrument there are two groups of buttons: Function and Control. The function buttons select one of five waveforms to be generated at the output connectors and cause the display to show parameters that are associated with the output function.

The other group is marked Control. These buttons control operating features and auxiliary functions that are complementary to the Function buttons.

On the left, there is a group of five soft-key buttons. These are used for accessing a specific parameter associated with the output function.

Tables 3-2 and 3-3 list all menus that are accessible from the Function group and Table 3-3 lists all menus that are accessible from the Control group. Short explanation of the various menus is also given. Note that the descriptions in these tables are given to provide a general understanding of what is available in terms of operating the instrument. For detailed instructions, check the appropriate section of the manual.

Table 3-2, Front Panel Function Menus

Soft Key	Function Menu	2 nd Level Menu	3 rd Level Menu	Notes
Top	Standard			
A		Wave Shape	Waveform list	Select from a wave shapes list
B		Frequency	Value	Programs standard waveform frequency
C		Amplitude	Value	Programs output amplitude
C (*)		Power	Value	Available for AC coupled output path only
D		Offset	Value	Programs output amplitude offset
D (*)		Phase	Value	Parameters depend on selected shape
↓D (**)		Reset Parameters		Resets parameters for this waveform only
Top	Arbitrary			
A		Sample Clock	Value	Programs sample clock frequency
B		Amplitude	Value	Programs output amplitude
C (*)		Power	Value	Available for AC coupled output path only
C		Offset	Value	Programs output amplitude offset
D		Active Segment	Value	Selects the active arbitrary waveform segment
↓D		Jump Event	BUS / External	Selects which source will cause segment transitions
↓D		Jump Timing	Coherent / Immediate	Defines how segments transition
↓D		Wave Composer	Waveform studio	Provides access to the waveform composer
↓D		Delete Segments	Value	
Top	Sequenced			
A		Active Sequence	String	View and select the active sequence name
B		View Table	Table view and edit	Displays current sequence step, and properties
C		Sample Clock	Value	Programs the sequence sample clock
D		Amplitude	Value	Programs the waveform amplitude
↓D (*)		Power	Value	Available for AC coupled output path only
↓D		Offset	Value	Programs the waveform offset
		Config	Seq. Configuration	Opens a new set of configuration menus.
	Config			
A		Sequence Type	Normal / Advanced	Selects between normal or advanced sequencing
B		Advance Mode	Auto / Once / Step	Selects the advance mode
C(*)		Once Count	Value	Sequence loop counter for the once advance mode
C		Select Source	BUS / External	Defines the source that will select a sequence
D		Select Timing	Coherent / Immediate	Defines how the sequence is switched
↓D		Jump Event	BUS / Event	Selects the source to detect a jump event of a step

(*) (C) Denotes conditional menu, not always shown. Available in conjunction with a specific mode only

(**) ↓D Denotes you have to scroll down to access the menu. Scroll using the arrows up or down or the dial.

Table 3-2, Front Panel Waveform Menus (continued)

Soft Key	Function Menu	2 nd Level Menu	3 rd Level Menu	Notes
Top	Modulated			
A	OFF	Modulation Type	OFF/AM/FM/Sweep	Select from a wave shapes list
B		CW Frequency	Value	Programs the modulation carrier frequency
C		Amplitude	Value	Programs output amplitude
C (*)		Power	Value	Available for AC coupled output path only
D		Offset	Value	Programs output amplitude offset
A	AM	Modulation Type	OFF/AM/FM/Sweep	Select from a wave shapes list
B		Modulation Shape	Sine/tri/squ/ramp	Programs the modulating waveform shape
C		Modulation Depth	Value	Programs the modulation depth
D		Modulation Freq	Value	Programs the modulating frequency
↓D (**)		CW Frequency	Value	Programs the modulation carrier frequency
↓D		Amplitude	Value	Programs output amplitude
↓D		Power	Value	Available for AC coupled output path only
↓D		Offset	Value	Programs output amplitude offset
↓D		Phase	Value	Parameters depend on selected shape
A	FM	Modulation Type	OFF/AM/FM/Sweep	Select from a wave shapes list
B		Modulation Shape	Sine/tri/squ/ramp	Programs the modulating waveform shape
C		CW Frequency	Value	Programs the modulation carrier frequency
D		Freq. Deviation	Value	Programs FM frequency deviation
↓D		Modulation Freq	Value	Programs the modulating frequency
↓D		Marker	Value	Programs marker frequency position
↓D		Amplitude	Value	Programs output amplitude
↓D		Power	Value	Available for AC coupled output path only
↓D		Offset	Value	Programs output amplitude offset
↓D		Phase	Value	Parameters depend on selected shape
A	Sweep	Modulation Type	OFF/AM/FM/Sweep	Select from a wave shapes list
B		Direction	Up/Down	Selects the sweep direction
C		Sweep Type	Linear/Logarithmic	Selects the sweep step
D		Start Frequency	Value	Programs the start frequency
↓D		Stop Frequency	Value	Programs the stop frequency
↓D		Sweep Time	Value	Programs the sweep time
↓D		Marker	Value	Programs marker frequency position
↓D		Carrier Shape	Sine/Triangle/Square	Selects the shape of the carrier waveform
↓D		Amplitude	Value	Programs output amplitude
↓D		Power	Value	Available for AC coupled output path only
↓D		Offset	Value	Programs output amplitude offset

(*) (C) Denotes conditional menu, not always shown. Available in conjunction with a specific mode only

(**) ↓D Denotes you have to scroll down to access the menu. Scroll using the arrows up or down or the dial.

Pulse Menus

The menus that are described in Table 3-2 are somewhat different than the pulse menus as they are relatively straightforward as each menu controls a separate, single parameter. There is a slight difference when it comes to operating a pulse generator; simple pulse generation requires just a few parameters such as: period,

pulse width, and hi and low levels however, it gets complicated when the application requires transition times, pulse delays and different level control. For this purpose, the start-up menu for the pulse function is the simplest and provides access to the commonly used parameters, but as you select more complex modes, other menus are automatically turned on, allowing access to mode parameters. The default menus after reset are given in Table 3-2, followed by the rest of the menus that are revealed after turning on specific features of the pulse function.

The following table is presented not to show you how to use the pulse generator, but to give you a general overview of all menus available for this function. A detailed description on the pulse function is given later in this chapter.

Table 3-3, Front Panel Pulse Function Menus

Soft Key	Function Menu	2 nd Level Menu	3 rd Level Menu	Notes
Top	Pulse			
A		Period	Value	Programs pulse repetition rate
B		Width	Value	Programs the pulse width
C		High Level	Value	Programs the pulse high level
D		Low Level	Value	Programs the pulse low level
↓D (*)		Config	Pulse Configuration	Opens a new set of configuration menus.
	Config			
A		Pulse Parameters	Time / Percent	Pulse parameter settings in time or percent of period
B		Pulse Mode	Single / Delayed / Double	Programs pulse mode
C		Polarity	Normal / Complemented / Inverted	Selects pulse polarity
D		Transition Type	Fast / Linear	Programs pulse transitions
↓D		Level Control	High / Low / Amplitude / Offset / Positive / Negative	Defines how the pulse levels are programmed
	Revealed			
C(*)	Delayed	Delay	Value	Programs delay for the delayed pulse mode
C(*)	Double	Delay	Value	Programs delay for the double pulse mode
↓D (*)	Linear	Leading Edge	Value	Programs rise time for the linear transition type
↓D (*)	Linear	Trailing Edge	Value	Programs fall time for the linear transition type
C(*)	Amp/Offs	Amplitude	Value	Programs amplitude for the level control mode
↓D (*)	Amp/Offset	Offset	Value	Programs offset for the level control mode

(*) (C) Denotes conditional menu, not always shown. Available in conjunction with a specific mode only

(**) ↓D Denotes you have to scroll down to access the menu. Scroll using the arrows up or down or the dial.

Control Menus

The Control menu buttons, unlike the Function menu buttons, display menus and parameters that modify the output to various run modes, turns the outputs on and off, programs markers and provides access to utility functions. You may also use these buttons to store and recall instrument settings and waveforms.

Table 3-4 lists all menus that are accessible from the Control group. A short explanation of the various menus is also given. Note that the descriptions in these tables are provided to give you a general overview of what is available in terms of operating the instrument. For detailed instructions, check the appropriate section of the manual.

Table 3-4, Front Panel Control Menus

Soft Key	Control Menu	2 nd Level Menu	3 rd Level Menu	Notes
	Run Mode			
A		Continuous	Enable Mode	Selects between Self Armed and Armed
			Enable Source	Selects between BUS, Event or Trigger inputs
			Event Input Level	Programs the event threshold level
			Event Input Slope	Selects Positive, Negative or, Either transition
B		Trigger	Trigger Mode	Selects between Normal and Override
			Trigger Source	Selects between BUS, Event or Trigger inputs
			Trigger Level	Programs the trigger threshold level
			Trigger Delay	Programs the delayed trigger and re-trigger timer
			Trigger Timer	Programs the internal timer period
			Trigger Count	Programs the burst counter value
			Smart Trigger >time	Programs the more than pulse period value
			Smart Trigger <time	Programs the less than pulse period value
			Trigger Hold off	Programs trigger hold off time
C		Gated	Gated Level	Programs the gate threshold level
			Gated Slope	Selects Positive or Negative levels
	Sto/Rec			
		Store	Target	Toggles between internal and USB
			Memory Cell	Selects the active memory cell
			Store	Defines what will be stored
		Recall	Target	Selects the source to recall setups
			Memory Cell	Selects the active memory cell
	Utility			
A		Remote Interface	Select Interface	Provides access to interface setup: GPIB / USB / LAN
			GPIB	GPIB address setting
			USB	No parameter setting
			LAN	Programs LAN IP address, subnet mask and gateway
B		System	Dial Direction	Programs forward or backward rotation
			Brightness	Programs display brightness

(*) (C) Denotes conditional menu, not always shown. Available in conjunction with a specific mode only

(**) ↓D Denotes you have to scroll down to access the menu. Scroll using the arrows up or down or the dial

Table 3-4, Front Panel Control Menus (continued)

Soft Key	Control Menu	2 nd Level Menu	3 rd Level Menu	Notes
C		Clocks		
			Sample Clock Feed	Programs separate or common feed
			Ext. SCLK Freq.	Prepares the external sample frequency range
			CH1 Source	Selects between Internal and External source
			CH1 Divider	Programs a dividing ratio for the external clock
			CH2 Divider	Grayed out. Selection is automatic, depending on the Sample Clock Feed setting
			Ref Clock Source	Selects between Internal and External source
			Ref Clock Ext. Freq.	Prepares the external reference frequency range
D			Factory Reset	Resets all instrument parameters to factory defaults
A	Marker		State	Toggles marker outputs on and off
		CH1 – Marker 1/2	Delay	Programs the marker delay value
			Pos.	Programs the marker position value
			Width	Programs the marker width value
			High	Programs the marker high level value
			Low	Programs the marker low level value
B		CH2 – Marker 1/2	Delay	Programs the marker delay value
			Pos.	Programs the marker position value
			Width	Programs the marker width value
			High	Programs the marker high level value
			Low	Programs the marker low level value
C		Apply		Updates the marker memory with the above settings
A	Output	Main Output	Output CH1	Toggles the main output ON and OFF
			Output CH2	Toggles the main output ON and OFF
			Output Couple CH1	Selects between DC and AC path
			Output Couple CH2	Selects between DC and AC path
B		SYNC Output	State	Toggles the SYNC output ON and OFF
			Source	Selects between CH1 and CH2
			Type	Selects between Pulse and WCOM
			Position	Programs the SYNC position value
			Width	Programs the SYNC width value
C		X-Channel	Offset CH2->CH1	Programs CH2 2 offset value referenced to CH1
			Skew CH2->CH1	Programs CH2 2 skew value referenced to CH1
D		X-Instr.	Role	Selects between Master and Slave
			State	Turns couple state on and off
			Offset	Programs an offset between two coupled instruments

Enabling the Outputs

For safety reasons, the main outputs default setting is OFF. The outputs can be turned on and off using either the hot keys, or the Output Menu. Please see Figure 3-3 and disable or enable the main outputs using the procedure described below. The same procedure can be used for enabling and disabling the SYNC output.

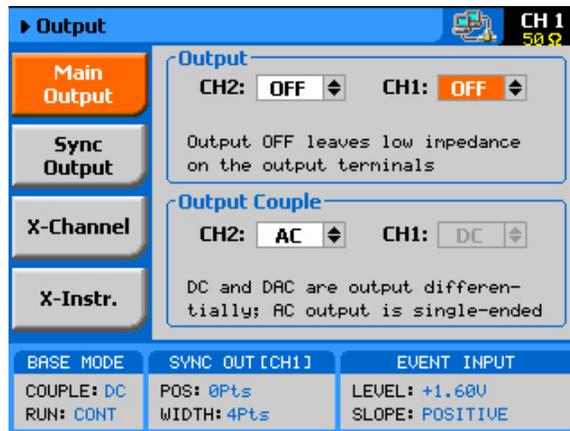


Figure 3-3, Enabling and Disabling the Outputs

1. Press the Output button in the Control group buttons. Observe the Output display, as it appears in Figure 3-3.
2. Use the dial or arrow keys to access the required field, which will appear orange.
3. To edit the field press Enter. The edited field will turn white with orange borders
4. Use the dial or arrow keys to change the field
5. Press Enter again to lock in the setting

Alternately, the outputs can be turned on and off using the hot-key buttons as marked above the keypad.

1. While not editing any parameter, select the channel you want to turn on using the PROGRAM CH1 or CH2 keys
2. Press ON/OFF OUTPUT or SYNC to toggle main and sync output on and off

Selecting a Function Shape

There are five function shapes that the **WX2182** can produce: Standard, Arbitrary, Sequenced, Modulated and Pulse. The standard, modulated and pulse waveforms are computed from equations and tables that are built into the program, but for the arbitrary and sequenced functions, waveform coordinates must first be loaded into its working memory. To generate one of the function types, simply press one of the Function buttons on the right side of the product. The display will change to display parameters that are associated with the selected function. For standard, modulated and

pulse functions, the output will immediately generate the selected function. Arbitrary and sequenced waveforms will be generated only after waveform coordinates have been downloaded to the working memory.



Note

**The picture in the WX2182 LCD display is an icon only.
The actual output waveform may look entirely different.**

Changing the Output Frequency

You should be careful not to confuse waveform frequency with sample clock frequency. Frequency applies to standard waveforms only and controls waveform frequency at the output connector. The sample clock frequency parameter is valid for arbitrary and sequenced waveforms only, and defines the frequency of the generator clocks data points.

Pulse waveform period is measured in units of seconds. Standard waveform frequency is measured in units of Hz and Arbitrary waveform sample clock frequency is measured in units of Sa/s (samples per second). The frequency of a given arbitrary waveform at the output connector is dependent on sample clock frequency, the number of data points, and other specific waveform definitions.

The frequency of the output waveform will change only if a standard waveform is generated. First, select a standard waveform as described earlier and then proceed with frequency modification.

Please see Figure 3-4 and modify frequency using the following procedure:

1. Press the Frequency soft key to select the frequency parameter.
2. Use the numeric keypad to program the new frequency value.
3. Press M/n , k/μ , $x1/m$ or m/s to terminate the modification process.

Alternately, you can modify the frequency value with the dial and arrow keys, but then the termination of the process is by pressing Enter only.

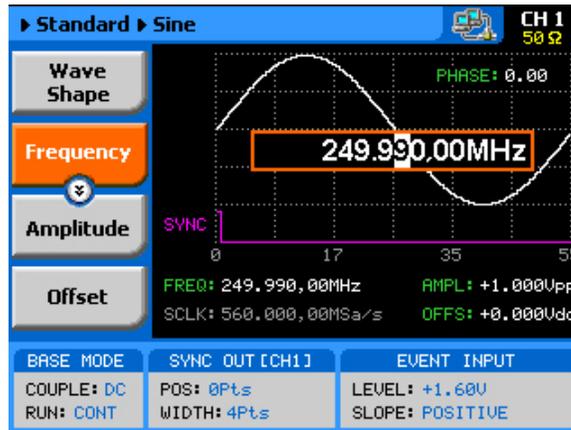


Figure 3-4, Modifying the Output Frequency



Note

If you use the dial or arrow keys to modify the frequency parameter, the output is updated immediately, as soon as you modify the parameter. The final value will be locked in as soon as you press Enter. If you choose to leave the old value, press Cancel to terminate the process and discard of any change made to this parameter.

Changing the Sample Clock Frequency

The frequency of the sample clock will affect the output waveform only if arbitrary or sequenced waveforms are generated. First, select an arbitrary waveform as described earlier and then proceed with sample clock frequency modification.

Please see Figure 3-5 to modify the sample clock using the following procedure:

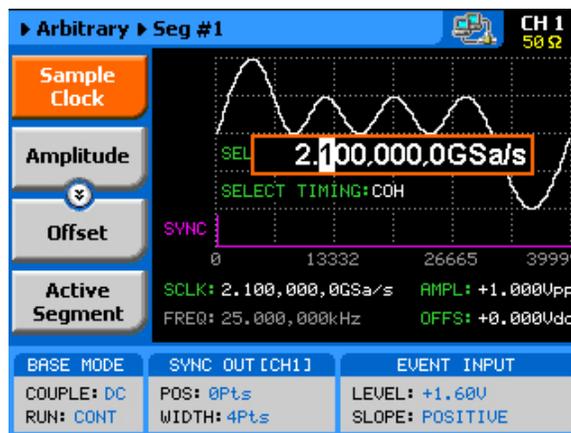


Figure 3-5, Modifying the Sample Clock Frequency

1. Press the Sample Clock soft key to select the Sample Clock parameter.
2. Use the numeric keypad to dial the new sample clock frequency value.
3. Press “M/n”, “k/μ”, “x1/m” or “m/s” to terminate the modification process. To select GSa/s enter the value in MSa/s (i.e. 2000 MSa/s will program 2 GSa/s).

Alternately, you can modify the sample clock frequency value with the dial and arrow keys, but then the termination of the process is by pressing Enter only.



If you use the dial or arrow keys to modify the sample clock frequency parameter, the output is updated immediately, as soon as you modify the parameter. The final value will be locked in as soon as you press Enter.

If you choose to leave the old value, press Cancel to terminate the process and to discard of any change made to this parameter.

Selecting an Output Couple

The **WX2182** provides two different output stages that can be selected for different applications. The amplified DC path has lower transition times, but higher amplitudes, and can be used for applications requiring dc-coupled moderate bandwidth of up to 600 MHz. The AC-coupled path has an equalizing filter that extends its bandwidth to over 1.0 GHz. The DC paths generate differential outputs: normal and inverted, but the AC path is generated as a single-ended output.

You can modify the output couple path (see Figure 3-6) using the following procedure. Note that each channel can be programmed to a different setting.

1. Press the Output button in the Control group buttons. Observe the Output display, as appears in Figure 3-6.
2. Use the dial or arrow keys to access the required field, which will appear orange.
3. To edit the field, press Enter. The edited field will turn white with orange borders.
4. Use the dial or arrow keys to change the field.
5. Press Enter again to lock in the setting.

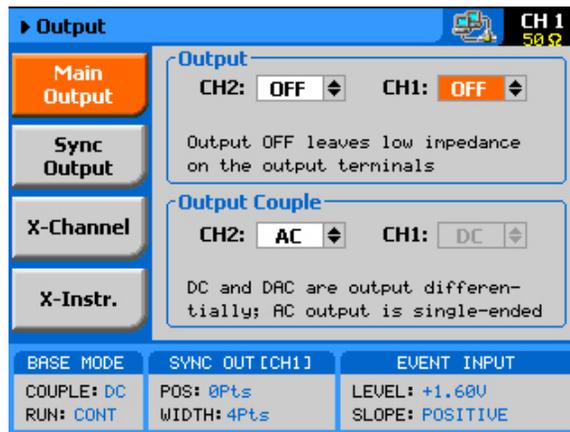


Figure 3-6, Selecting an Output Couple Path

Programming the Amplitude and Offset

Output amplitude and offset can be programmed independently and separately for each channel. The active channel is displayed on the upper right corner of the LCD display.

When the display shows **CH 1** on the upper right corner, you are currently programming channel 1 parameters. Keypads “1” and “2” are used as hot keys for channel selection. When not editing any parameter, press key “2” to program channel 2 parameters.

When the display shows **CH 2** on the upper right corner, you can proceed with channel 2 programming.

The amplitude and offset parameters are duplicated in multiple screens. When changed for a specific function shape, the new value is updated on all screens, regardless of the selected function shape. Figure 3-7 shows an example of how to program the amplitude for channel 1. The same procedure can be used for channel 2 and for the offset parameter. Note that the example is given for a standard waveform function, but the same procedure will be used for all other functions.

1. Press the Standard button in the Function group.
2. Press Enter to edit the Amplitude value.
3. Use the numeric keypad to program the new value.
4. Press “m” for mV, or “x1” for volts to select the suffix letter.
5. Press Enter to lock in the value.

Alternately, you can modify the amplitude value with the dial and arrow keys, but then the process must be terminated by pressing Enter.

Offset is programmed the same way as amplitude, except select Offset from the soft key menus to access the offset parameter. Using the DC output path, the amplitude and offset values are programmed in units of volts.



Note

If you use the dial or arrow keys to modify the amplitude or offset parameters, the output is updated immediately, as soon as you modify the parameter. The final value will be locked in as soon as you press Enter.

If you choose to leave the old value, press Cancel to terminate the process and to discard of any change made to this parameter.

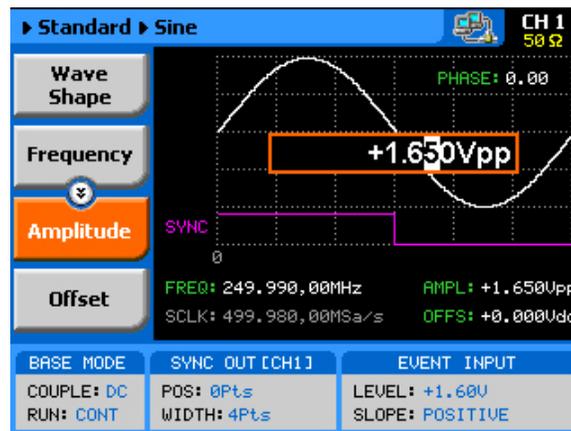


Figure 3-7, Programming Channel 1 Amplitude Example

Programming the Output Power

As explained above, the amplitude and offset are parameters that are associated with the DC output couple paths. When using the AC output couple path, the output is programmed in units of power (dBm). However, note that the power level is correct for sine waveforms only; all other waveforms can still use the ac path and power setting but the power value will correspond to an equivalent sine waveform only.

Output power can be programmed independently for each channel. The active channel is displayed on the upper right corner of the LCD display.

When the display shows **CH 1** on the upper right corner, you are currently programming channel 1 parameters. Keypads “1” and “2” are used as hot keys for channel selection. While not editing any parameter, press key “2” to program channel 2 parameters.

When the display shows **CH 2** on the upper right corner, you can proceed with channel 2 programming.

The power parameter is duplicated in multiple screens. When changed for a specific function shape, the new value is updated on all screens, regardless of the selected function shape. Figure 3-8 shows an example how to program the power level for channel 1. The same procedure can be used for channel 2 power parameter. Note that the example is given for a standard waveform function, but the same procedure will be used for all other functions.

1. Change the output couple path to AC, as shown in Figure 3-6.
2. Select the Power soft key.
3. Press Enter to edit the power value.
4. Use the numeric keypad to program the new value.
5. Press “x1” or Enter to lock in the value.

Alternately, you can modify the power value with the dial and arrow keys, but then the termination of the process is by pressing Enter.



Note

If you use the dial or arrow keys to modify the amplitude or offset parameters, the output is updated immediately, as soon as you modify the parameter. The final value will be locked in as soon as you press Enter.

If you choose to leave the old value, press Cancel to terminate the process and discard any change made to this parameter

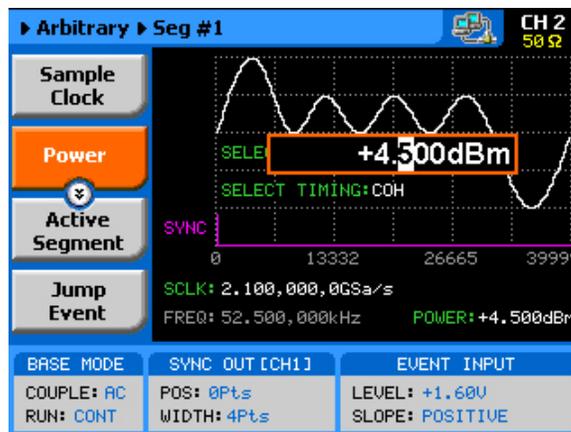


Figure 3-8, Programming Channel 1 Power Example

Selecting a Run Mode

The **Model WX2182** offers four run modes: Continuous, Triggered and Gated.

The selected waveform is repeated continuously, when the instrument is set to operate in Continuous mode. The continuous output can be armed to turn on and off using an Event input and a remote interface, consequently controlling the timing of the waveform from external sources. The operating mode defaults to continuous and self-armed mode after reset. The continuous signal can be aborted at any time, using a remote command.

Triggered, Gated, and Burst modes require an external signal to initiate output cycles. In some cases, an internal trigger generator is available to generate the required trigger stimuli, without the need to connect to external devices. Figure 3-9 shows the run mode options screen. Press the Run Mode key in the Control group and then select the required run mode option using one of the soft keys on the left of the screen.

Descriptions of the various run modes and the parameters associated with each run mode are given in the following paragraphs.



Note

A selected run mode option applies to all of the available function shapes. For Separate SCLK feed mode, each channel can be programmed to a different run mode option. For Common SCLK feed mode, where both channels are synchronized, selecting a specific run mode option for one channel automatically updates the mode to match the other channel.



Figure 3-9, The Typical Run Mode Display (Continuous Mode Shown)

Continuous Run Mode

The continuous run mode is useful for applications that require continuous generation of waveforms. The continuous run mode is the factory default setting, so every time the instrument defaults to this mode.

Using the continuous run mode, the **WX2182** generates waveforms at its output terminals without control when the waveform starts or stops. This is a normal requirement for most applications, however, some test routines require precise control over waveform timing and in this case the instrument has two enable modes: Self-Armed and Armed.

The self-armed is the standard continuous mode that is widely used and is customary on most waveform generators. This mode does not require special handling, as the output will commence with waveform generation as soon as the output is turned on. The Armed mode needs an event signal to begin waveform generation.

Description of the various controls in the Continuous Run Mode display is given below. Refer to Figure 3.9 throughout this description. To access the required parameters, use the dial or the up/down buttons. When the selected parameter is highlighted, press the enter key and use the up/down buttons to select the required option. Press Enter to complete the action and lock the selected mode.

Enable mode – defines if the generator will be self-armed or armed to commence with waveform generation. Control signals are disabled during self-armed operation, so waveforms are generated continuously at the output terminals as soon as the output function is selected and the output is turned on.

When selecting the Armed mode, the generator goes into the idle state, where the output resides on either a dc level, waveform segment, or certain sequence, depending on the selected output function. The generator will transition from idle to waveform generation immediately upon receipt of an enable signal, and will cease waveform generation immediately after receipt of an abort signal. Table 1-1 in Chapter 1 lists the idle waveform for the various output functions as well as the source options of the enable and abort signals.

Enable Source – this parameter affects the generator only when placed in Armed mode. It defines from where the **WX2182** is expected to receive the enable signal. It has three options: BUS – a remote command from the host computer, EVENT – a valid signal at the rear-panel event input, and TRIG – a valid signal at the front-panel trigger input. Note that the parameters for the event input are programmed from the continuous menu and therefore, it is highly recommended that the continuous armed mode be used in conjunction with the event input. The trigger input parameters are programmed from the trigger run mode display and so it is less convenient to use this input with the continuous armed run mode.

Triggered Run Mode

Event Input Control – this group is used for programming the threshold level and the edge sensitivity for the rear-panel event input. The threshold level is programmable from -5 V to 5 V and the slope can be selected from positive, negative or either transitions.

In Triggered mode, the output remains at a DC level and waits for a valid trigger event to initiate an output cycle. Each time a trigger occurs, the **WX2182** generates one complete output waveform. At the end of the output cycle, the output resumes position at a DC level that is equal to the amplitude of the first point of the waveform.

The instrument may be triggered from one of the following sources: front panel TRIG IN, front panel Manual button, rear panel event input and a remote command such as *TRG. When placed in EXT (external) trigger source, remote commands are ignored and the instrument monitors the TRIG IN connector or the MAN TRIG control. When in BUS, the hardware inputs are ignored and only remote commands can trigger the instrument. Once initiated, the waveform can be left alone to complete its output cycle or aborted using a remote command. Table 1-2 in Chapter 1 lists the idle waveform for the various output functions as well as the source options of the initiate and abort signals.

Description of the various controls in the Triggered Run Mode display is given below. Refer to Figure 3.10 throughout this description. To access the required parameters, use the dial or the up/down buttons. When the selected parameter is highlighted, press the enter key and use the up/down buttons to select the required option. Press Enter to complete the action and to lock the selected mode.

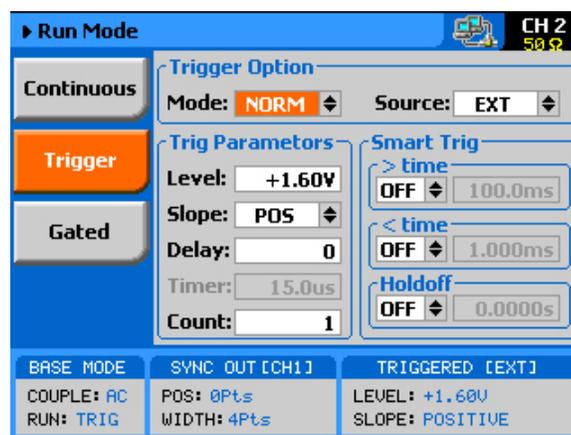


Figure 3-10, Trigger Run Mode Parameters

Trigger Options – has two fields: Mode and Source. These two fields are explained below.

Mode – the mode field selects between NORM and OVER. NORM defines the normal trigger sequence where every trigger generates a waveform cycle however, triggers are ignored for the duration of the output waveform. OVER defines a trigger override mode where triggers are accepted, regardless if the waveform has been completed or not, and a new cycle initiated.

Source – defines for the instrument from where it should expect to receive the trigger signal. Only one source for a trigger signal is legal and therefore, all other inputs are disabled automatically. The source options are: EXT, BUT, INT and EVENT.

EXT enables the front panel trigger input, BUS enables remote commands, INT turns on one of the internal timed auto-triggers and EVENT enables the rear panel event input. Additional description of the internal timed auto-trigger generators is given below.

Trigger Parameters – has five fields: Level, Slope, Delay, Timer and Count. These fields are explained below.

Level – use this field to program the threshold level for the trigger input. This adjustment is necessary if your trigger signal is riding on a dc offset, positive or negative. The level is programmable from -5 V to 5 V.

Slope – defines edge sensitivity for the trigger input. The trigger input can be programmed to trigger on the rising, trailing or even both edges.

Delay – “0” setting defines no delay, any other number turns on the delayed trigger function. The delay field is used for the delayed trigger function, when the instrument is using external triggers but it is also used for the delayed auto-trigger function when the instrument is programmed to its internal trigger timer. The delayed trigger function is explained in detail in the following section.

Timer – programs the period of the internal timed auto-trigger generator. Additional information is given below.

Count – defines how many cycles will execute from a single trigger event. The counter can be programmed to generate a burst of 1 to 1,000,000 output cycles

Smart Trig – has three fields: >time, <time and Holdoff. The smart trigger filter can zoom in on a certain pulse widths featuring only values below, above or in-between to be regarded as valid trigger signals. The smart trigger fields are explained below.

>time – use this field to program the “more than” pulse width time that will pass through the filter as a valid trigger event. OFF disables this filter.

<time – use this field to program the “less than” pulse width time that will pass through the filter as a valid trigger event. OFF disables this filter.

Note that if both filters are ON, the smart trigger will consider pulse width values “less than” and “more than” as a gate entry for legal trigger events.

Holdoff – use this field to program a holdoff period where first trigger disables the input for the programmed holdoff value and only then allows entry to a legal trigger event.

Using the Delayed Trigger

The delayed trigger function, when enabled, delays the start of the output waveform for a pre-determined period following a valid trigger. The delay time value is programmed in units of sample clock periods from 0 to 8,000,000 samples. When the delay value is set to “0”, the delayed trigger function is turned off.

Note that even with the delay set to OFF, the output is always delayed from the trigger signal by a value that is specified as “system delay”. The system delay is normally small, but should always be considered as part of the overall delay period. Refer to Appendix A for the system delay specification. Also note that the delayed trigger function operates in conjunction with external trigger inputs only.

Using the Built-in Auto-Trigger Generators

The correct way of using the **WX2182** in applications that require synchronization between system components is in conjunction with external trigger events. In this case, another component in the system generates a trigger signal, either hardware or software that stimulates the output of the generator exactly at the time that the signal is required in the loop. In addition, the **WX2182** can be used as a system administrator that generates stimulating signals to the rest of the system and for this purpose, the instrument has a built-in timer that generates internal triggers at pre-determined intervals. The built-in trigger generator has no reference from the main sample clock and therefore, the clock is asynchronous with the output waveform. In fact, there are two built-in auto-trigger generators within the **WX2182** that each behave differently, but both are derived from the same trigger generator circuit. These are: *Timed* internal trigger generator and *Delayed* internal trigger generator.

Timed Internal Trigger Generator – generates equally spaced periodical and asynchronous triggers. The Timer field in the Trigger Run Mode displays programs on the timer interval in units of seconds ranging from 100 ns to 20 seconds. When programmed to this mode, all other inputs to the trigger circuit are disabled to prevent interference from external devices. The timer interval is

measured from waveform start to waveform start and therefore, the period of the internal timer value must be larger than the period of the output signal.

Delayed Internal Trigger Generator – this function is similar to the timed internal trigger generator in the way that it generates periodical and asynchronous triggers that are equally spaced, however, the delay is programmed in units of sample clock periods and measured between waveforms. Using the delayed internal trigger generator, there is no need to worry about waveform period vs. delay period because the delay is always measured from the end of one waveform to the start of the next one. There is also another advantage when using this function, because although the trigger generator is asynchronous with the output waveform, the delay is synchronous and therefore there is no jitter of ± 1 sample clock period due to the digital error common to all other systems. The delayed internal trigger generator can be programmed from 152 sample clock periods to 8,000,000 sample clock periods, provided that the numbers are integers and divisible by 8.

Gated Run Mode

In gated mode, the output remains at a DC level and waits for a valid gate event to initiate an output cycle. Each time a gate opens the **WX2182** generates output waveforms. When the gate closes, the output completes the waveform and resumes position at a DC level that is equal to the amplitude of the first point of the waveform.

The instrument may be gated from one of the following sources: front panel TRIG IN, front panel Manual button, or rear panel event input. Once initiated, the waveform can be left alone to complete its output cycle or aborted using a remote command. Table 1-3 in Chapter 1 lists the idle waveforms for the various output functions, as well as the source options of the initiate and abort signals.

Description of the various controls in the Gated Run Mode display is given below. Refer to Figure 3.11 throughout this description. To access the required parameters, use the dial or the up/down buttons. When the selected parameter is highlighted, press the enter key and use the up/down buttons to select the required option. Press Enter to complete the action and lock the selected mode.

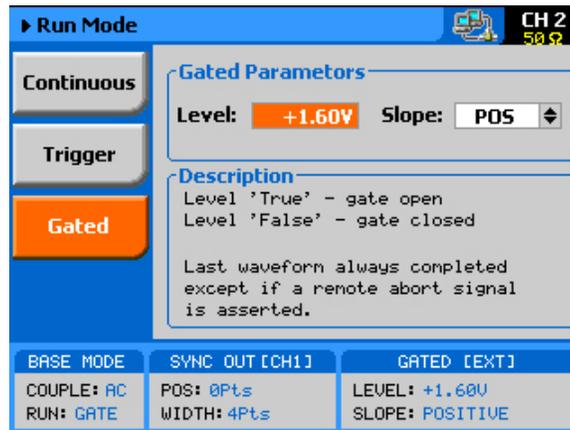


Figure 3-11, Gated Run Mode Parameters

Gated Parameters – has two fields: Level and Slope. These fields are explained as follows:

Level – use this field to program the threshold level for the trigger input. This adjustment is necessary if your gating signal is riding on a dc offset, positive or negative. The level is programmable from -5 V to 5 V.

Slope – defines polarity of the gate. The trigger input can be programmed to gate on positive levels or on negative levels. Note that the positive and negative slope definition does not apply to absolute levels, but to relative levels. For example, if the trigger level is set at 1 V and the slope is set to positive, any level at the trigger input that is above 1 V is considered true (gate open) and anything below 1 V is considered false (gate closed).

Abort

The abort button appears only in continuous run mode and when the Enable Mode is set to Armed and the Enable Source is either Event or EVENT or TRIG. The function of the abort soft key is to stop the waveform at a specific time. The waveform can be aborted using a remote command as well, but then the enable source must be set to BUS.

The Abort button and the Continuous Run Mode display that makes this button operational is shown in Figure 3-12. Place the instrument in Continuous run mode, select Armed as the Enable Source and select EVENT as the source for the enable signal. The generator will commence with waveform generation immediately after a valid event signal is applied to the Event input. The waveform will stop at the output immediately after you press the Abort soft key.

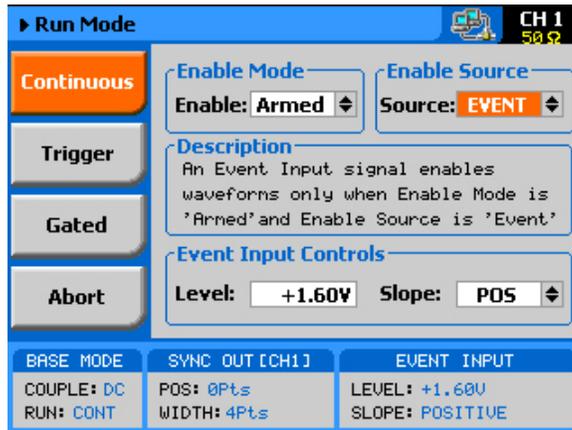


Figure 3-12, Typical Continuous Run Mode Display with the Abort Soft Key

Using the Manual Trigger

The manual trigger allows you to trigger or gate the **WX2182** directly from the front panel. This button is active only when the generator is programmed to accept trigger stimuli from an external trigger source. In triggered run mode, a single push on the button initiates an output waveform. In gate run mode, the output generates waveforms as long as you press and hold the MAN button. The waveforms will cease to generate immediately after you release the button.

Using the SYNC Output

For safety reasons, every time you toggle the power to the **WX2182** OFF and ON, the SYNC output defaults to OFF. If you want to use the SYNC output, you must turn it on immediately after you power up the generator. You can turn the SYNC on using the ON/OFF SYNC hot key as was explained earlier in this chapter or you can do it from the Outputs menu shown in Figure 3-13. To access the SYNC output menus press the Output button in the Control group on the right of the instrument and then select the SYNC OUTPUT soft key.

The SYNC output has parameters that you can modify: State, Source, Type, Position and Width. The functions of these parameters are explained below.

State – controls the state of the SYNC output ON and OFF. When the SYCN output is turned on, the LED next to the output terminal is lit, indicating that a SYNC signal is present at this output. OFF turns off the light, but leaves a low impedance path from the output terminal.

Source – selects the channel from where the SYNC output is derived, CH1 or CH2. Single channel versions do not have this control.

Type – defines the shape of the SYNC waveform. There are two options to select from this field: Pulse or WCOM. The pulse has a

minimum width of 4 waveform points and its position along the waveform can be adjusted, as well as its width. The WCOM type SYNC output (waveform Complete) has a fixed width that cannot be modified, nor moved from its original position.

Position – applied to the pulse type only. This parameter defines the position of the SYNC pulse along the output waveform. The position is programmed in units of waveform points (or sample clock periods). Placement resolution is 4 points. As default, the sync signal is positioned at the beginning of the waveform.

Width – applies to the pulse type only. This parameter can modify the width of the SYNC pulse from a minimum of 4 waveform points to the maximum length of the waveform in increments of 4 points.

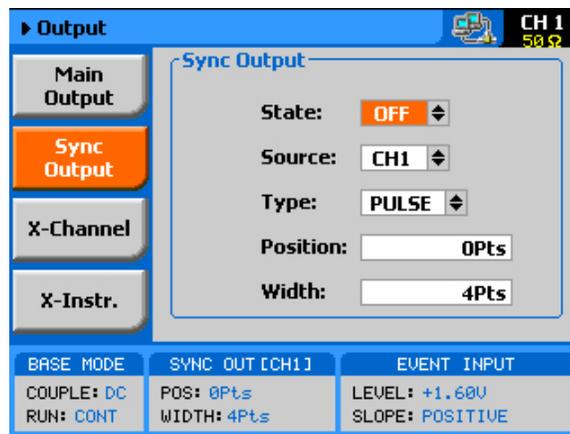


Figure 3-13, SYNC and Filter Parameters

Synchronizing Channel 1 and Channel 2

The model **WX2182** comes with two channels, each of which can be operated as a stand-alone waveform generator. There are very few circuits and controls that are shared by the two channels, namely: display, remote interfaces, external sample clock and trigger input connectors and the SYNC output. In addition, each channel can be programmed to operate uniquely in terms of functions, modes and parameters. For example, channel 1 can generate continuous sequences of arbitrary waveforms and channel 2 can generate triggered pulse patterns. There are no limitations how one channel is programmed, compared to the other channel, as long as the connectors that are shared by the channels do not interfere in the way they are used.

The two channels can be synchronized to operate from a single sample clock source and in this case, the output frequency is identical and the generator provides a tight relationship between phase offset and waveform start. Still, while synchronized, the two channels can still generate different waveform functions, amplitudes and dc offsets and the same run mode option can be selected for both.

Synchronizing the two channels requires a single operation – modifying the SCLK Feed from separate to common. This is done from the Utility ->Clock ->Sample Clock Feed field as shown in Figure 3-14. When the selected parameter is highlighted, press the enter key and use the up/down buttons to select the required option. Press Enter to complete the action and to lock the selected mode.

The cross-channel parameters that control phase offset and skew are discussed in the following paragraphs. There are other parameters in this display that relate to the EXT SCLK Source and Divider and the external reference clock; these are discussed later in the relevant sections of this chapter. Notice, however, that when the Common SCLK Feed is selected, access to CH2 parameters are denied because there is only one sample clock source left to control in this mode.

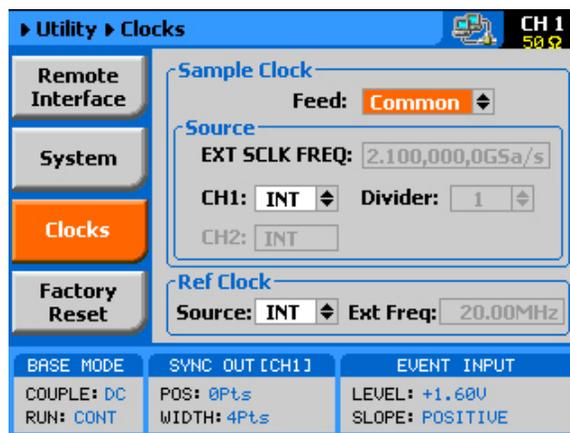


Figure 3-14, Modifying the SCLK Feed to Common

Controlling Cross-Channel Propagation

Cross-channel propagation is relevant only after the two channels have been synchronized and are fed from the same sample clock source. To access the Cross-Channel Propagation menu, press the Output key in the Function group and then press the X-CHANNEL soft key button. The display, as shown in **Error! Reference source not found.**, now provides access to the synchronization parameters. If you did not synchronize the two channels, this display will be grayed out and you will have no access to the fields. Use the up/down buttons to highlight the required parameter and then press Enter. Modify the parameter and press Enter again to complete the action and to lock the selected value. There are two parameters that you can modify from this display: Offset CH2 ->CH1 and Skew CH2 ->CH1. These parameters are explained below.

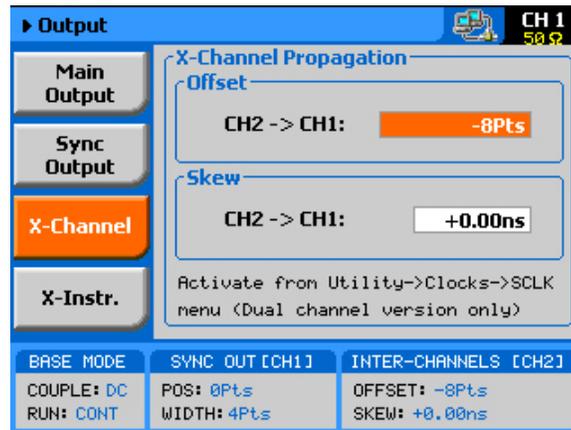


Figure 3-15, Controlling Cross-Channel Propagation

Offset CH2 -> CH1 – with channel 1 as reference, this allows programming of an offset value in units of waveform points (or sample clock periods). The CH2 -> offset can be programmed from 0 to the \pm full length of the output waveform.

Skew CH2 -> CH1 – with channel 1 as reference, it defines the skew between the channels in units of ns. The skew is programmable from 0 ns to ± 3 ns with increments of 10 ps.

Using External Clock References

In cases where synchronization to other instruments in a system is required, you have two options: use an external clock source for the reference clock or replace the internal sample clock generator entirely with an external clock generator. Either way, this is a major twist in the **WX2182** basic operation because, if for any reason, you leave one or both parameters selected from an external source and do not apply the necessary signal to the input, the operation of the generator will be impeded without visual references that something is wrong.

The SCLK and the reference clock source menus were placed in the Utility menu, as shown in Figure 3-16. Change these settings only if you are absolutely sure that another reference source is available at the appropriate inputs. Note that the sample display shows that all clocks are internal and therefore, some of the fields that are associated with the external references are grayed out.

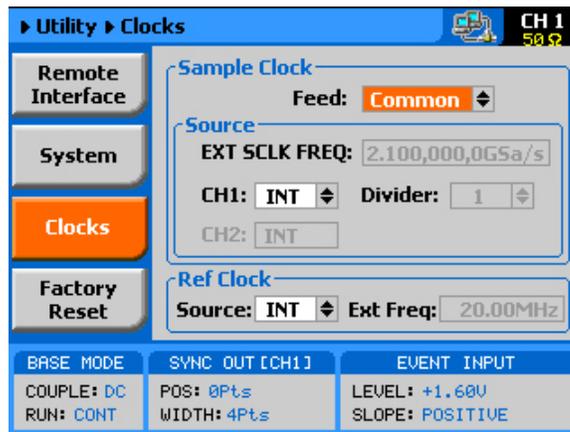


Figure 3-16, Modifying the SCLK and 10MHz Clock Source

Using an External SCLK Source

The SCLK input is useful for applications requiring improved phase noise or clock stability. Normally, by using a near-perfect source, the phase noise of the **WX2182** can typically be improved by a factor of >20 dBc/Hz. The external sample clock input is an SMA connector that is located on the rear panel. It accepts signals within the frequency range of 2,000 MHz to 4,200 MHz. There is only one input that can be used for one channel or another and by both channels simultaneously. Note that the channels do not have to be synchronized to use a single external clock feed.

As was described before and shown in Figure 3-16, access the External Sample Clock parameters from the Utility menu. When the selected parameter is highlighted, press the enter key and use the up/down buttons to select the required option. Press Enter to complete the action and to lock the selected mode.

As shown in **Error! Reference source not found.**, there are three parameters that can be accessed in the Sample Clock Source group: EXT SCLK FREQ and CH1 Source and Divider. These are explained below.

EXT SCLK FREQ – this field becomes active only after you select an external source feed to one of the channels. This field is necessary for the instrument to establish a frequency range for the internal phase lock loops and therefore must be programmed near or exactly as the external source frequency. Figure 3-17 shows an example of a setup that provides external feed to channel 1 with an external frequency of 4.000,000 GHz.

CH1 Source – use this field to select between INT (internal) or EXT (external) sample clock feeds. Updating the EXT SCLK FREQ field with the external frequency value is necessary for the external sample clock feed function to operate correctly.

CH1 Divider – since there is only one input for the external sample clock, feeding the same frequency to both channels is somewhat

limiting if different frequencies need to be generated from each channel. The divider field accepts values in the form of 2^n , from 1 to 256, that will divide the external sample clock frequency before it is applied to the internal circuits.

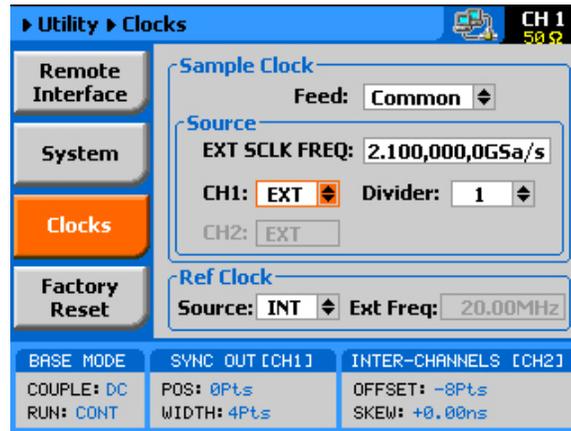


Figure 3-17, Using an External Sample Clock Example

Using an External Clock Reference Source

The External Reference input is useful for applications requiring synchronization to other components in a system, and can be used to improve clock stability and accuracy, but it does not necessarily improve phase noise. The external reference input is a BNC connector that is located on the rear panel. It accepts signals within the frequency range of 10 MHz to 100 MHz. There is only one input that feeds both sample clock generators simultaneously. Note that the channels do not have to be synchronized to use the external reference feed.

As was described before and shown in Figure 3-16, access the External Reference Clock parameters from the Utility menu. When the selected parameter is highlighted, press the enter key and use the up/down buttons to select the required option. Press Enter to complete the action and to lock the selected mode.

As shown in Figure 3-18, there are two parameters that can be accessed in the Reference Clock group: Source and EXT FREQ. These are explained below.

Source – use this field to select between INT (internal) or EXT (external) reference clock feeds. Note that updating the EXT FREQ field with the external frequency value is necessary for the external reference clock feed function to operate correctly.

EXT FREQ – this field becomes active only after you select an external reference feed. This field is necessary for the instrument to establish a frequency range for the internal phase lock loops and therefore must be programmed near or exactly as the external reference source frequency. Figure 3-18 shows an example of a

setup that provides external feed frequency of 100 MHz.

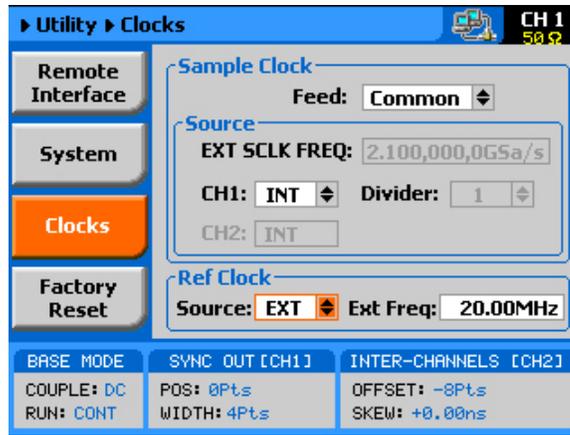


Figure 3-18, Using an External Sample Clock Example



TIP

The internal reference frequency is 100 MHz and therefore, any lower frequency that will be used as an external reference will degrade the phase noise of the output signal. It is therefore recommended that frequencies near 100 MHz be used as reference.

Generating Standard Waveforms

The majority of applications require the use of common waveforms such as: sinusoidal, triangular and square. In fact, these are the only waveforms that function generators can produce and therefore, one should expect that these waveforms be available even in a complex generator such as this. The **WX2182**, being a completely digital instrument, has a library of built-in waveforms that allow generation of these basic waveforms, plus many more.

By default, the **WX2182** is programmed to generate standard waveforms so when you rest the generator, it will commence with generating a standard sine waveform as soon as the output is turned on. Besides the standard sine waveform, the instrument has a built-in library of waveforms referred to as Standard Waveforms. The meaning of this term is that these waveforms have standard characteristics, commonly associated with these waveforms. For example, sine waveform has known spectral and power distribution that could be compared to published mathematical equations. The quality of the generator determines the proximity of the waveform generation to its pure mathematical expression.

Figure 3-19 shows a list of waveforms that the instrument can generate, however, don't forget that the waveforms are generated digitally from either lookup tables or formulated from standard equations and therefore, each time a new waveform is selected, expect to have a slight delay between the time the waveform was selected to when it is being generated at the output connector.

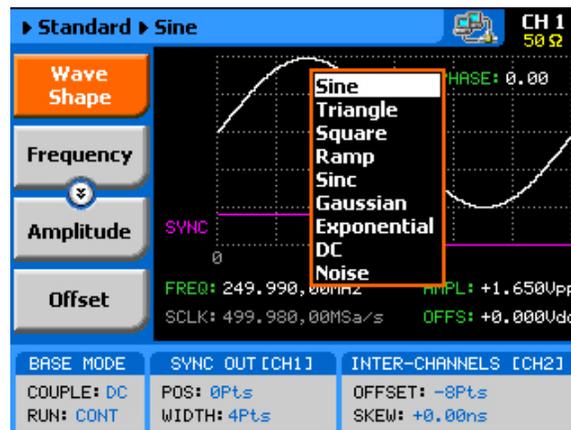


Figure 3-19, Built-in Standard Waveforms Menu

The **WX2182** has a library of 9 standard waveforms: Sine, Triangle, Square, Ramp, Sinc, Gaussian, Exponential, DC and Noise. Some of the parameters for these waveforms can be modified to fine-tune the waveforms for specific applications. For example, changing the sine start phase of the 2nd channel can create a 2-phase sine system. The standard waveforms and the parameters that can be modified are summarized in the following paragraphs.

Sine Wave

The sine waveform is the most commonly used waveform. The waveform is generated from a lookup table that has 1000 points and as a result, the sine waveform is generated with 1000-point accuracy up to about a frequency setting of 250kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 250kHz, the number of points is automatically reduced up to a point where filters are switched in to reconstruct the waveform. The technique of generating sine waves above a certain frequency is not within the scope of this manual, however, one should remember that above certain frequencies the waveform loses purity and quality because the number of points that are available to construct the waveform are inversely proportional to the output frequency. This statement is true for all standard waveforms and is the reason for limiting the upper frequency of certain waveforms.

There are certain menus that provide access to sine waveform parameters. These are:

Frequency – programs the frequency of the sine waveform. Note that at low frequencies (up to about 500 kHz), when you modify the frequency parameter, the output responds with coherent change. However, at higher frequencies, the waveform has to be re-computed every time and therefore, when you modify the frequency, the output wanders until the waveform is re-computed and restored to full accuracy.

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section of this chapter. Note that setting the amplitude parameter in this menu overrides amplitude settings in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset settings in all other menus.

Phase – sets the start phase of the output waveform. You will not be able to see any change in the waveform if you generate a continuous sine waveform. However, if you place the generator in triggered run mode, the output will start the sine wave generation from a point defined by the Phase parameter. The start phase is programmed in units of degree.

Reset Parameters – Resets the sine wave parameters to their original factory defaults.

Triangle Wave

The triangle waveform is a commonly used waveform. The waveform is generated from a lookup table that has 8000 points and as a result, the triangle waveform is generated with 8000-point accuracy up to about a frequency setting of 500 kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 500 kHz, the number of points is automatically reduced. The triangular waveform is reasonable up to about 40 MHz, where 10 points are available to generate its shape. As the number of points further decrease, the shape becomes distorted to a point where it is no longer usable.

There are specific menus providing access to triangle waveform parameters. These are:

Frequency – programs the frequency of the triangle waveform. Note that at low frequencies (up to about 500 kHz), when you modify the frequency parameter, the output responds with coherent change. However, at higher frequencies, the waveform has to be recomputed every time and therefore, when you modify the frequency, the output wanders until the waveform is recomputed and then restored to full accuracy.

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the amplitude parameter in this menu overrides amplitude setting in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset setting in all other menus.

Phase – sets the start phase of the output waveform. You will not be able to see any change in the waveform if you generate a continuous triangular waveform. However, if you place the generator in triggered run mode, the output will start the triangle wave generation from a point defined by the Phase parameter. The start phase is programmed in units of degree.

Reset Parameters – Resets the triangular wave parameters to their original factory defaults.

Square Wave

The square waveform is a commonly used waveform. The waveform is generated from a lookup table that has 8000 points and as a result, the square waveform is generated with 8000-point accuracy up to about a frequency setting of 500 kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 500 kHz, the number of points is automatically reduced.

There are specific menus that provide access to square waveform parameters. These are:

Frequency – programs the frequency of the square waveform. Note that at low frequencies (up to about 500 kHz), when you modify the frequency parameter, the output responds with coherent change. However, at higher frequencies, the waveform has to be recomputed every time and therefore, when you modify the frequency, the output wanders until the waveform is recomputed and then restored to full accuracy.

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the amplitude parameter in this menu overrides amplitude settings in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset settings in all other menus.

Duty Cycle – programs the square wave duty cycle (pulse width to period ratio). The duty cycle is programmed as a percent of the period. The default value is 50%.

Reset Parameters – Resets the square wave parameters to their original factory defaults.

Ramp Wave

The ramp waveform is a special instance of the triangular waveform with a slight difference: the ramp can be adjusted for its rise and fall times. The ramp waveform is a very common waveform and is required for numerous applications. However, not being a true ramp generator, the ramp parameters are computed and programmed as a percent of the ramp period. The waveform is computed every time a parameter is modified. 8000 points are allocated for the ramp shape up to about a frequency setting of 500 kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 500 kHz, the number of points is automatically reduced. The ramp waveform is reasonable up to about 40 MHz, where 100 points are available to generate its shape. As the number of points decrease further, the resolution of the parameters is lost to a point where it is no longer usable.

There are specific menus that provide access to ramp waveform parameters. These are:

Frequency – programs the frequency of the ramp waveform. Note that at low frequencies (up to about 500 kHz), when you modify the frequency parameter, the output responds with coherent change. However, at higher frequencies, the waveform has to be

recomputed every time and therefore, when you modify the frequency, the output wanders until the waveform is recomputed and then restored to full accuracy.

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the amplitude parameter in this menu overrides amplitude settings in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset settings in all other menus.

Delay – sets the delay time for the ramp start. The delay is programmed as a percent of the ramp period.

Rise – programs the ramp rise time. The rise time is programmed as percent of the ramp period.

Fall – programs the ramp fall time. The fall time is programmed as a percent of the ramp period.

Note that the sum of the delay, rise and fall times cannot exceed 100%. If the sum is less than 100%, the end of the ramp will remain at a dc level until the completion of the period.

Reset Parameters – Resets the ramp wave parameters to their original factory defaults.

Sinc Wave

The sinc pulse (sine x/x) waveform is a very common waveform and is required in many applications. However, not being a true pulse generator, the sinc pulse parameters are recomputed every time a parameter is changed. 8000 points are allocated for the sinc pulse shape, up to about a frequency setting of 500 kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 500 kHz, the number of points is automatically reduced. The sinc pulse waveform is reasonable up to about 40 MHz, where 100 points are available to generate its shape. As the number of points further decrease, the shape of the pulse is deteriorated to a point where it is no longer usable.

There are specific menus that provide access to sinc pulse waveform parameters. These are:

Frequency – programs the frequency of the sinc waveform. Note that at low frequencies (up to about 500 kHz), when you modify the frequency parameter, the output responds with coherent change. However, at higher frequencies, the waveform has to be recomputed every time and therefore, when you modify the frequency, the output wanders until the waveform is recomputed and then restored to full accuracy.

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the amplitude parameter in this menu overrides amplitude settings in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset settings in all other menus.

#Cycles – sets the number of “0” crossing cycles for the sinc function. Note that the default value is 4. Changing the value to a different number requires recalculation of the waveform and may take a few seconds until the waveform is computed and generated at the output connector.

Reset Parameters – Resets the sinc pulse wave parameters to their original factory defaults.

Gaussian Wave

The gaussian pulse waveform is useful in many applications. The gaussian pulse parameters are re-computed every time a parameter is changed. 8000 points are allocated for the gaussian pulse shape, up to about frequency setting of 500 kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 500 kHz, the number of points is automatically reduced. The gaussian pulse waveform is reasonable up to about 40 MHz, where 100 points are available to generate its shape. As the number of points decrease further, the shape of the pulse is deteriorated to a point where it is no longer usable.

There are specific menus that provide access to gaussian pulse waveform parameters. These are:

Frequency – programs the frequency of the sinc waveform. Note that at low frequencies (up to about 500 kHz), when you modify the frequency parameter, the output responds with coherent change. However, at higher frequencies, the waveform has to be recomputed every time and therefore, when you modify the frequency, the output wanders until the waveform is recomputed and then restored to full accuracy.

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the amplitude parameter in this menu overrides amplitude settings in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and

Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset settings in all other menus.

Exponent – sets the exponent factor for the gaussian function. Changing the default exponent value to a different number requires recalculation of the waveform and may take a few seconds until the waveform is computed and generated at the output connector.

Reset Parameters – Resets the gaussian pulse wave parameters to their original factory defaults.

Exponential Wave

The exponential pulse waveform is useful in applications simulating capacitor charge or discharge. Not being a true pulse generator, the exponential pulse parameters are recomputed every time a parameter is changed. 8000 points are allocated for the exponential pulse shape up to about frequency setting of 500 kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 500 kHz, the number of points is automatically reduced. The exponential pulse waveform is reasonable up to about 40MHz, where 100 points are available to generate its shape. As the number of points decrease further, the shape of the pulse is deteriorated to a point where it is no longer usable.

There are specific menus that provide access to sinc pulse waveform parameters. These are:

Frequency – programs the frequency of the sinc waveform. Note that at low frequencies (up to about 500 kHz), when you modify the frequency parameter, the output responds with coherent change. However, at higher frequencies, the waveform has to be recomputed every time and therefore, when you modify the frequency, the output wanders until the waveform is recomputed and then restored to full accuracy.

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the amplitude parameter in this menu overrides amplitude settings in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset settings in all other menus.

Exponent – sets the exponent factor for the exponential function. Setting the exponent to a negative value inverts the exponential function. Changing the default exponent value to a different number requires recalculation of the waveform and it may take a few seconds until the waveform is computed and generated at the output connector.

Reset Parameters – Resets the exponential pulse wave parameters to their original factory defaults.

DC Wave

The DC waveform is a useful application simply requiring an accurate DC level.

There are specific menus that provide access to the DC waveform parameters. These are:

DC Level – programs the level of the DC output function. The amplitude is programmed in units of volts and generated continuously at the output connector in way similar to the way a power supply generates its output. Note however, that the amplitude is calibrated when the output is terminated into 50Ω load impedance.

Reset Parameters – Resets the DC amplitude parameter to its original factory default.

Noise Wave

The noise waveform is useful in applications requiring generation of simple noise. The spectral spread of the noise is pseudo-random and is limited in its bandwidth by the bandwidth parameter. The noise parameters are recomputed every time a parameter is changed. 8000 points are allocated for the noise shape up to about a frequency setting of 500 kHz (output frequency = sample clock frequency / number of points). As frequency is increased above 500 kHz, the number of points is automatically reduced. The noise waveform is reasonable up to about 4 MHz, where 1000 points are available to generate its shape. As the number of points decrease further, the shape of the noise is deteriorated to a point where it is no longer usable.

There are specific menus that provide access to noise waveform parameters. These are:

Amplitude – programs the amplitude of the output waveform. Note that amplitude and offsets can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the amplitude parameter in this menu overrides amplitude settings in all other menus.

Offset – programs the offset of the output waveform. Note that offset and amplitude can be programmed freely within the specified amplitude window, as explained in the Programming Amplitude and Offset section in this chapter. Note that setting the offset parameter in this menu overrides offset settings in all other menus.

Bandwidth – sets the sample clock rate, which generates the noise. It also serves as a simple tool to limit the bandwidth of the noise to a known value.

Note that while generating noise, keep in mind that the noise is

generated in a certain memory size and is repeated over and over until the function is disabled. Therefore, the noise is not really random, in the purest meaning of the word.

Reset Parameters – Resets the gaussian pulse wave parameters to their original factory defaults.

Standard Waveforms and Run Mode Options

Run Mode options define if the standard waveforms will be generated continuously, triggered, or gated. Refer to the Selecting Run Modes section of this manual to learn more about these functions. Table 3-5 provides information on the standard waveform function in conjunction with the run mode options. This table is useful, as it summarizes all the controls that start and stop the waveforms. The Glossary defines the terms used in this table.

Table 3-5, Standard Waveforms in Various Run Mode Options

Run Mode	Waveform	Arm Options	Idle Waveform	Enable Signal	Abort Signal	Initiate Signal	Wave Loops	Smart Trig
Continuous	Standard	Self Armed	Wave	- (*)	-	-	-	-
		Armed	DC	BUS Event	BUS	-	-	-
Triggered	Standard	Self Armed	-	-	-	-	-	-
		Armed	DC	-	BUS	F.P. BUS Trigger	1-1M	Yes
Gated	Standard	Self Armed	-	-	-	-	-	-
		Armed	DC	-	BUS	F.P. Trigger	-	-

- (*) – Not Relevant

Glossary of Terms

Run Mode – defines basic instrument run mode options:

Continuous – waveform is generated continuously.

Triggered – output waits for trigger, waveform is generated once.

Gated – output waits for gating signal, waveform is generated as long as the gating signal is true

Waveform – standard, built-in library of standard waveforms.

Arm Options – defines if a waveform is self-enabled or requires a control signal to initiate.

Self Armed – the output does not require a control signal to generate waveforms.

Armed – a control signal is required to enable waveform generation.

Idle Waveform – defines the state of the output waveform before an event (enable, trigger or gate) initiates a waveform.

DC – first waveform point.

Wave – first waveform in a sequence.

Enable Signal – defines the source, from where an enable signal is expected. Affects the output only when Arm Option is set to Armed.

BUS – a remote command enables the output.

Event – a transition at the event input enables the output.

Abort Signal – defines the source from where an abort signal is expected.

BUS – a remote command aborts all output activities. This signal does not affect the generator when set to operate in self-armed mode.

Initiate Signal – defines the wait for the trigger entry port to initiate a waveform. Relevant for trigger and gated run modes only.

F.P. – a front panel push button is used to initiate a waveform or a sequence.

BUS – a remote command initiates a waveform or a sequence. Selecting this option automatically disables front panel operation.

Trigger – a valid signal at the trigger input initiates a waveform or a sequence.

Wave Loops – defines how many times the waveform repeats after a valid Initiate Signal.

Smart Trigger – defines if smart trigger features are available for a specific function.

Generating Arbitrary Waveforms

In general, the **Model WX2182** cannot create arbitrary waveforms by itself. If you want to use arbitrary waveforms, you must first load them into the instrument. The **WX2182** is supplied with waveform creation and editing software, called **ArbConnection**. Figure 3-20 shows an example of a waveform that was created with an external utility. Once the waveform is created on the screen, downloading it to the **WX2182** is just a click of a mouse away.

Detailed information on the structure of the arbitrary waveform and the commands that are needed to download arbitrary waveforms to the **WX2182** are given in the programming chapter of this manual. Information in this Chapter will give you a general idea of what arbitrary waveforms are all about.

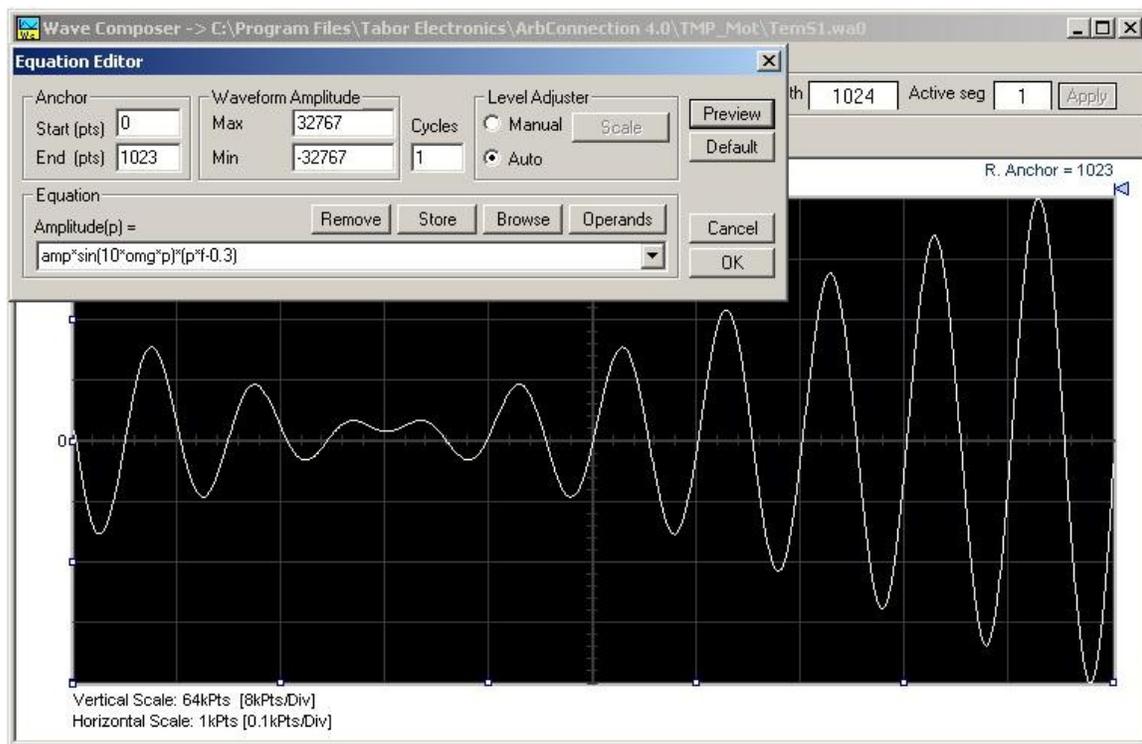


Figure 3-20, Wave Composer Tool Example for Generating Arbitrary Waveforms

What Are Arbitrary Waveforms?

Arbitrary waveforms are generated from digital data points, which are stored in a working memory. The working memory is connected to a digital-to-analog converter (DAC) and a sample clock generator clocks the data points, one at a time, to the output circuit. In slow motion, the output generates a waveform that resembles the look of a staircase. In reality, the DAC is generating amplitude hops that depend on bit arrangement and sample clock speed.

The working memory has two major properties: vertical resolution and memory depth.

Vertical Resolution – This term defines the precision along the vertical axis of which data points can be placed and generated by the DAC. The **WX2182** uses 12-bit DAC's to generate arbitrary waveforms. Converting 12 bits to precision shows that each data point can be placed along the vertical axis with a precision of 1/4,096.

Memory Depth – Defines how many data points can be stored for a single waveform cycle. The **WX2182** has a 16,000,000 basic waveform memory capacity and 32,000,000 waveform memory, as an option.

Having such large memory capacity is an advantage. Modern applications in the telecommunications industry require simulation of long waveforms without repeatable segments. The only way to create such waveforms is having sufficient memory depth. On the other hand, if you do not need to use very long waveforms but must have many other waveforms stored in your working memory, the **WX2182** lets you divide the memory bank to smaller segments and load different waveforms into each segment.

Generating Arbitrary Waveforms

Downloading waveforms to the **WX2182** and managing arbitrary memory are explained in the programming section of this manual. This section assumes that you have already downloaded waveforms and want the instrument to output these waveforms.

Refer to Figure 3-21 and use the following description to learn how to output arbitrary waveforms, as well as how to program arbitrary waveform parameters. To access the Arbitrary display, press on the Arbitrary button in the Function group. The output will immediately resume with arbitrary waveform generation and the display will be updated with arbitrary waveform parameters, as shown in Figure 3-21.

Note the channel you are currently programming and make sure the icon on the upper right corner agrees with your required programming sequence. Use the following procedure to modify the parameters that are associated with the arbitrary waveform function:

1. Press the soft key next to the required parameter to display the edit field.
2. Punch in the value using the numeric keypad. Be careful not to exceed parameter limits while you key the numbers.
3. Select and press a suffix.
4. Press Enter to lock in the new value.

Alternately, after you display the edit field, you may use the dial and/or the arrow keys to modify the field, then press Enter to lock in the new value. If you didn't make programming errors and didn't make any mistakes while downloading your waveform segment(s), then the output should generate your desired waveform.

There are four parameters that are available for programming in this window: Sample Clock, Amplitude, Offset, Active Segment, Jump Event, Jump Timing, Wave Composer and Delete Segments. These parameters are explained as follows:

Sample Clock – Defines the sample clock frequency for the arbitrary waveform. Information how to modify the sample clock is given later in this chapter.

Amplitude – Defines the amplitude of the arbitrary waveform. Note that regardless of the amplitude setting, the vertical resolution of the generated waveform is always 12 bits. Note that this parameter is replaced by the power parameter, when the output coupling is reverted to AC, and the units change from volts to dBm.

Offset – defines the offset value of the arbitrary waveform. Note that this parameter is eliminated when the output coupling is reverted to AC.

Active Segment – Defines which of the segments in the working memory is currently active at the output connector. As was discussed earlier, the working memory can be divided to 16k segments and different waveforms loaded in each segment. Any segment is available at the output connector, only if it has been selected to be the active segment. The segment selection field lets you select any segment, regardless if it contains waveform data or not, so be careful when you select a segment number, as it may be empty and no output will be generated.

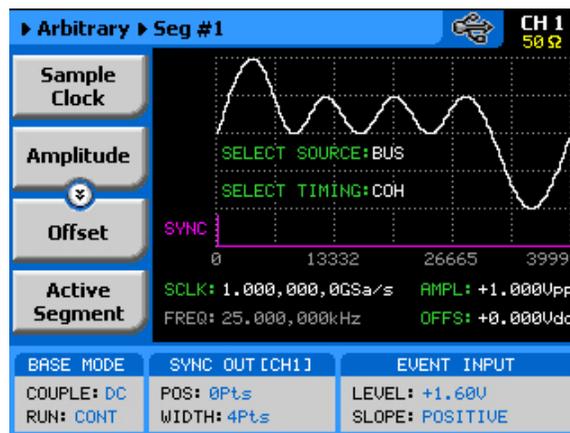


Figure 3-21, Arbitrary Parameters Display Example

Jump Event – selects between remote command, which is the default option and the rear-panel segment control connector. In case the external control is selected and signals are not hooked-up to the connector, the output automatically assumes that the first segment in the table is selected. Information how to use the external control input is given following this section.

Jump Timing – When a new waveform segment is selected, the generator is presented with a choice: switch at the end of the

segment – coherent switch, or switch immediately without waiting for the segment to complete. The jump-timing menu provides access to this selection. Coherent is the default choice.

Wave Composer – opens a new display that allows creation of simple arbitrary waveforms from the front panel. The Wave Composer display is shown in Figure 3-22.

Delete Segments – Allows distractive removal of all segments from the memory. In fact, this command does not erase the memory but only removes the table that defines start and stop addresses for each segment location. If you have recorded your segment sizes you can always redefine the segment table, which will restore the original waveforms in each segment. There is, however, no way back to the original waveforms if you perform a new download action after deleting the segment table.

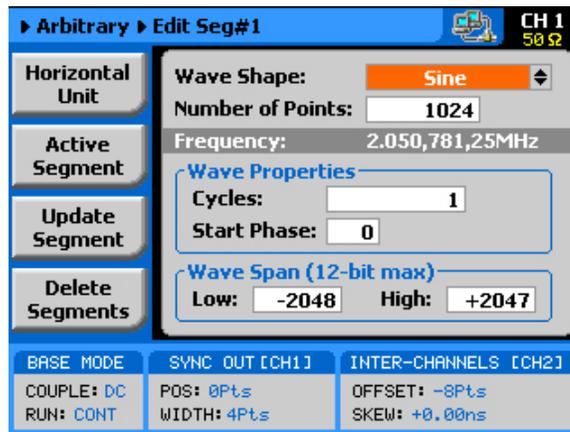


Figure 3-22, The Wave Composer Display

Using the Dynamic Segment Control

A control input is available on the **WX2182** rear panel that provides control over the replay of a specific memory segment. The control connector has 9 pins and therefore, allows replay of one of 256 waveform segments. A valid line must be asserted to validate segment change. Having the dynamic control feature, in effect, can serve as replacement of the sequence table where the real-time application can decide when and for how long a waveform will be generated.

The dynamic control input accepts TTL level signals. Bit 1 is connected to pin 1; it weighs 2^0 binary (decimal 1) and bit 8 is connected to pin 8 and weighs 2^8 binary (decimal 128) so if all lines are low, the output generates segment number 1 (the firmware counts the segments from 0 to 255) and if all line are high, the output generates segment 256. Any combination from 0 to 255 can be produced at the inputs of this connector but the output will change only when a valid signal is asserted at pin 9 of the same connector. Figure 3-23 shows a typical example of external

segment control; the first valid transition selects segment 37, the second selects segment 57 and the third transitions selects segment 194.

Two dynamic control inputs are available on the rear panel, one for channel 1 and one for channel 2, and each channel can be modified to have a specific output segment. Note however, that if you intend to synchronize the outputs, the waveforms that are selected with this control must have exactly the same length.

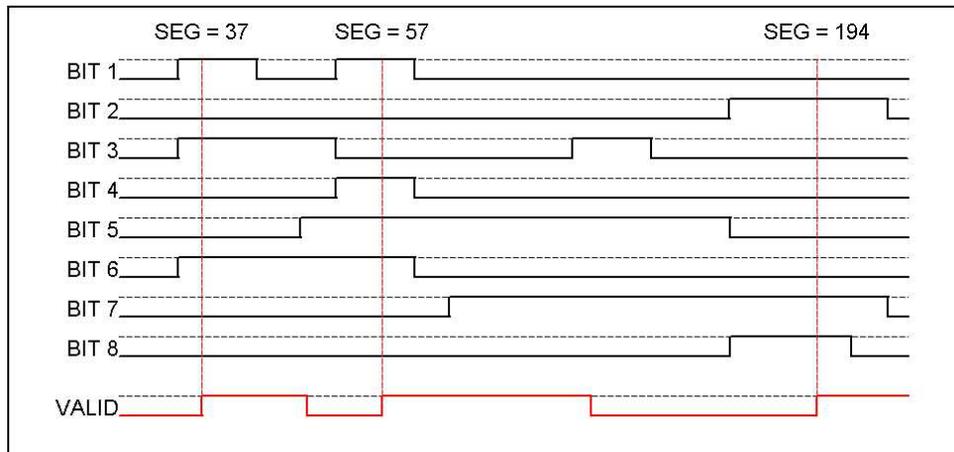


Figure 3-23, Typical Dynamic Control Scenario

Arbitrary Waveforms and Run Mode Options

Run Mode options define if the arbitrary waveforms will be generated continuously, triggered, or gated. Refer to the Selecting Run Modes section of this manual to learn more about these functions. Table 3-6 provides information on the arbitrary waveform function in conjunction with the run mode options. This table is useful, as it summarizes all the controls that start and stop the waveforms. The Glossary defines the terms that were used in this table.

Table 3-6, Arbitrary Waveforms in Various Run Mode Options

Run Mode	Waveform	Arm Options	Idle Waveform	Enable Signal	Abort Signal	Initiate Signal	Wave Loops	Smart Trig
Continuous	Arbitrary	Self Armed	Wave	- (*)	-	-	-	-
		Armed	DC	BUS Event	BUS	-	-	-
Triggered	Arbitrary	Self Armed	-	-	-	-	-	-
		Armed	DC	-	BUS	F.P. BUS Trigger	1-1M	Yes
Gated	Arbitrary	Self Armed	-	-	-	-	-	-
		Armed	DC	-	BUS	F.P. Trigger	-	-

- (*) – Not Relevant

Glossary of Terms

Run Mode – defines basic instrument run mode options:

Continuous – waveform is generated continuously.

Triggered – output waits for trigger, waveform is generated once.

Gated – output waits for gating signal, waveform is generated as long as the gating signal is true.

Waveform – arbitrary waveform, waveform coordinates must be downloaded to the instrument to generate these waveforms.

Arm Options – defines if a waveform is self-enabled or requires a control signal to initiate.

Self Armed – the output does not require a control signal to generate waveforms.

Armed – a control signal is required to enable waveform generation.

Idle Waveform – defines the state of the output waveform before an event (enable, trigger or gate) initiates a waveform.

DC – first waveform point.

Wave – first waveform in a sequence.

Enable Signal – defines the source from where an enable signal is expected. Affects the output only when Arm Option is set to Armed.

BUS – a remote command enables the output.

Event – a transition at the event input enables the output.

Abort Signal – defines the source from where an abort signal is expected.

BUS – a remote command aborts all output activities. This signal does not affect the generator when set to operate in self-armed mode.

Initiate Signal – defines the wait for trigger entry port to initiate a waveform. Relevant for trigger and gated run modes only.

F.P. – a front panel push button is used to initiate a waveform or a sequence.

BUS – a remote command initiates a waveform or a sequence. Selecting this option automatically disables front panel operation.

Trigger – a valid signal at the trigger input initiates a waveform or a sequence.

Wave Loops – defines how many times the waveform repeats after a valid Initiate Signal.

Smart Trigger – defines if smart trigger features are available for a specific function.

Generating Sequenced Waveforms

In general, the **Model WX2182** cannot create sequenced waveforms by itself. If you want to use sequenced waveforms, you must first load them into the instrument. The **WX2182** is supplied with a waveform creation and editing utility. Besides waveform creation, this utility has instrument control features and sequence table generator panel. To generate a sequence, you must first download waveforms to the instrument, generate a sequence table and download the sequence table to the instrument. Sequences are easily generated using the Waveform Studio as demonstrated in Figure 3-24 and displayed on the **WX2182** as shown in Figure 3-25. Note that different sequences can be generated for each channel.

Detailed information on the structure of the arbitrary waveform and the commands that are needed to download arbitrary waveforms to the **WX2182** is given in the Programming Reference Chapter. There, you can also find information how to create and download sequence tables using SCPI programming commands. Information in this chapter will give you a general idea what sequenced waveforms are all about.

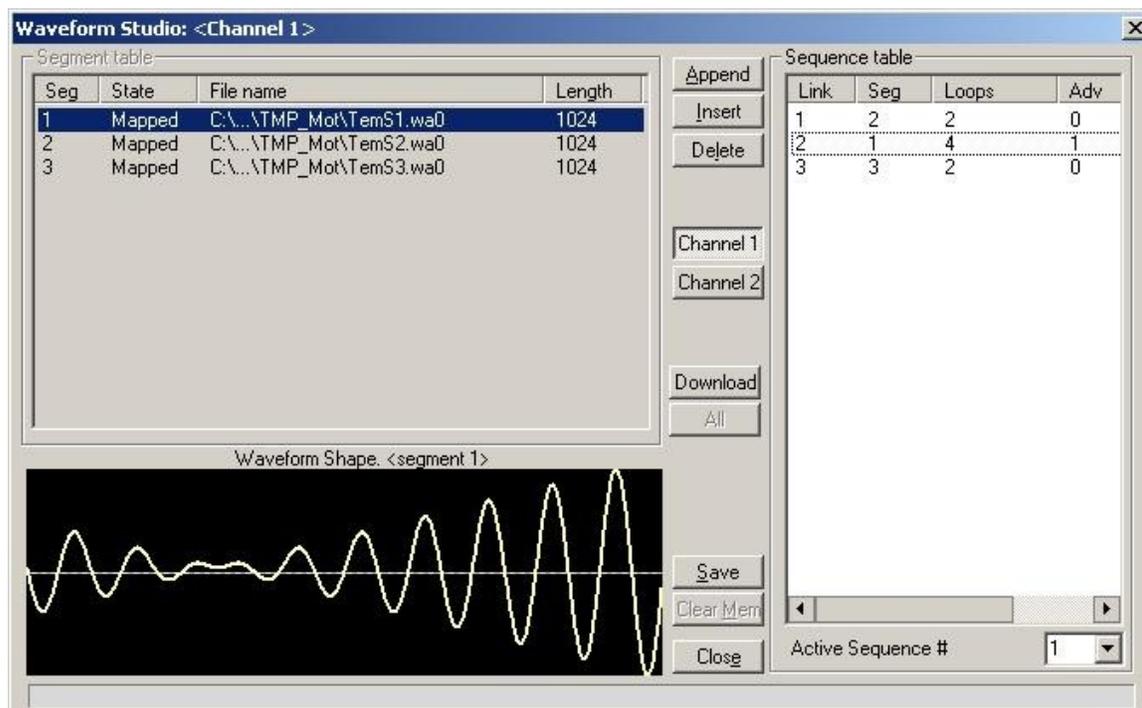


Figure 3-24, Using the Waveform Editor to Generate Sequences

Step	Segment Number	Repeat Count	Jump Flag
1	4	2	1
2	8	4	0
3	10	8	0
4	12	11	0
5	2	1	0

SCLK: 1.000,000,00Gs/s AMPL: +1.000Vpp
ADV MOD: AUTO OFFS: +0.000Vdc

BASE MODE	SYNC OUT [CH1]	EVENT INPUT
COUPLE: DC	POS: 0Pt.s	LEVEL: +1.60V
RUN: CONT	WIDTH: 4Pt.s	SLOPE: POSITIVE

Figure 3-25, Sequence Table Display Example

What are Sequenced Waveforms?

Sequenced waveforms are constructed from two or more arbitrary waveforms, which are linked and looped in any way you can imagine, as long as you observe the limitations set forth in the specification section of this manual.

The first thing to do before you can generate sequenced waveforms, is download waveforms to the **WX2182**. You may use any application to create waveform segments. Then, you can build your sequence table. An example of how sequenced waveforms work with three different waveforms is demonstrated in Chapter 1, Figures 1-7 through 1-10. Refer to Figure 3-26 and use the following description to learn how to output sequenced waveforms as well as how to program sequence parameters.

Press the Sequenced button in the Functions group on the right side of the generator to select Sequenced waveforms as the output function type. The screen as shown in Figure 3-26 displays the output. Providing that waveforms were loaded and a table created, it will immediately commence with generating arbitrary waveforms. Note the channel you are currently programming and make sure the icon on the upper right corner agrees with your required programming sequence.

Use the following procedure to modify the parameters that are associated with the Sequenced waveforms function:

1. Press the soft key next to the required parameter to display the edit field.
2. Punch in the value using the numeric keypad. Be careful not to exceed parameter limits while you key the numbers.
3. Select and press a suffix.
4. Press Enter to lock in the new value.

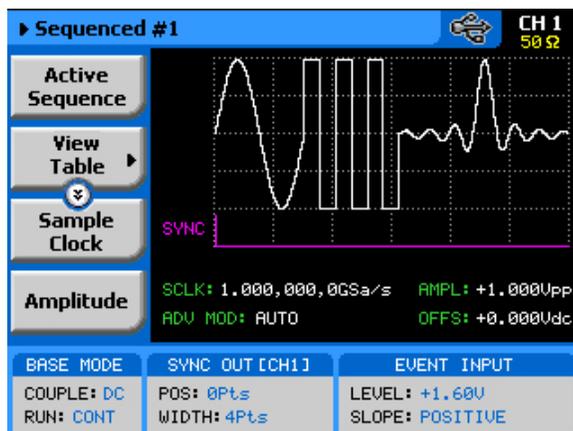


Figure 3-26, Sequence Function Parameters

Alternately, after you display the edit field, you may use the dial and/or the arrow keys to modify the field, then press Enter to lock in the new value. If you didn't make programming errors and didn't make any mistakes while downloading your waveform segment(s), then the output should generate your desired waveform. There are six parameters that are available for programming in this window: Active Sequence, View Table, Sample Clock, Amplitude and Offset (possibly power when AC couple is selected) and Config. These parameters are explained as follows:

Active Sequence – selects the active sequence to be generated at the output terminals. 1000 different sequence scenarios can be defined and replayed one at a time.

View Table – provides access to a new menu that has sequence table control, as shown in Figure 3-25. If no table was yet defined, you can define the sequence table from this menu. You can also edit an existing sequence table from this command. Information on editing the sequence table is given later.

Sample Clock – programs the sample clock frequency for the sequenced waveform. The final period of the complete sequence can be extracted from the following relationship:

$$\text{Sequence Duration} = 1 / (\text{SCLK} / n)$$

n = the number of waveform points in the sequence, including looped waveforms.

Amplitude – defines the amplitude of the sequenced waveform. Might be replaced by Power, in case AC coupled has been selected for this output.

Offset – defines the offset of the sequenced waveform. If AC couple mode is selected for this output, offset will not be available.

Config – provides access to a new menu that has sequence configuration controls. The configuration menu is shown in Figure 3-27 and its controls are described below. There are 6 control

parameters in this menu: Sequence Type, Advance Mode, Once Count, Select Source, Select Timing and Jump Event.

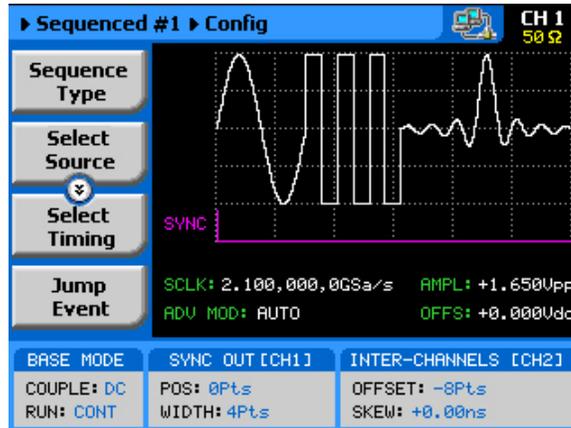


Figure 3-27, Sequence Configuration Parameters

Sequence Type – defines if the sequence is normal or advanced. The advanced mode will be discussed in detail in the following paragraphs.

Advance Mode – defines the advance mode for the sequence. There are three advance mode options you can select from: Automatic, Once and Stepped. These are described in detail later in the chapter.

Once Count – programs a count value for the Once advance mode. Additional information on this parameter will be given in the sequence advance description section. Note that this button appears only when the Once advance mode has been selected.

Select Source – defines the source from where one of the sequences is selected: remote command or rear panel external control. The rear-panel dynamic control is explained separately in one of the following paragraphs.

Select Timing – When a new sequence is selected, the generator is presented with a choice: switch at the end of the sequence – coherent switch, or switch immediately without waiting for the sequence to complete. The select timing menu provides access to this selection. Coherent is the default choice.

Jump Event – defines the source from where the generator will expect a jump signal to flag that it can advance to the next step. This parameter will show only for the Auto and Step advance modes.

Sync Lock – Programs sync output lock on a specific waveform or sequence.

Sequence Table Elements

The sequence table, as shown in Figure 3-24, specifies: Step, Wave, Repeat Count and Jump Bit. Description of the various elements within the sequence table is given below. These are explained in the following paragraphs.

Step - This parameter defines an index array for the sequence generator. When generating sequences, the instrument links the steps in descending order. Therefore, make sure that you enter your waveform segments in exactly the order you would like them at the output.

Wave - This parameter associates waveform segments with a step index. You can use different waveforms for different steps or you can use the same waveform for a number of steps. There are no limitations how you associate steps to waveforms, except you can not program in the sequence table waveforms that were not defined earlier.

Repeat Count – This parameter defines how many times the waveform will loop for the selected step. For example, if you program 2, the waveform will cycle twice on the same step before transitioning to the next step.

Jump Bit – This field is a special code that is used in conjunction with the automatic advance mode. When the sequence generator encounters this bit, it will stop and dwell on the step until a jump even is asserted to the relevant input. Information on the jump bit is given later. “0” flags continuous, “1” flags wait-for-an-event signal.

Assuming that you already downloaded waveforms, and created and downloaded the sequence table, you can now proceed with the following instructions on how to set the **WX2182** to output sequenced waveforms.

Editing the Sequence Table

If you select the View option as was described above, the sequence table will display as shown in Figure 3-28. If you already have a sequence table in place, you can edit the steps and modify the table per your new requirements. If you do not have a sequence table, you can construct the table from this screen. However, you first must make sure that the segments you intend to use are loaded with waveforms.

Please see Figure 3-28, noting the commands that are available for editing and creating a sequence table.

Apply Changes – After you make modifications to the sequence table, you must use this command to update the internal registers with the new table settings and output updates immediately with the new settings. Changes, if made in the table, will be updated automatically when you exit the Edit Table screen. However, the output will change to the new settings only after you re-enter the sequence function.

Edit Step – Provides entry point to the table. You may scroll between the fields using the arrow keys. If you want to edit a specific step, place the cursor on the step and press Enter. Edit the field as required and press Enter again to lock in the new value.

Insert Step – Allows adding another step to the sequence table. You have a choice of adding the step above or below the cursor line or at the end of the sequence table.

Go to Step – Provides entry point to the sequence table at a specific step number. Continue editing the step as described above.

Delete Step – Use this command to delete a specific step from the sequence. You'll be asked to confirm if you really want to delete the step, before the final execution.

Delete Table – Use this command to delete the entire sequence table. You'll be asked to confirm if you really want to delete the step before the final execution.



Tip

Use the arrow keys or the dial to scroll through the edit parameters. The Apply Changes will remain at the top, while the others may be selectively accessed.

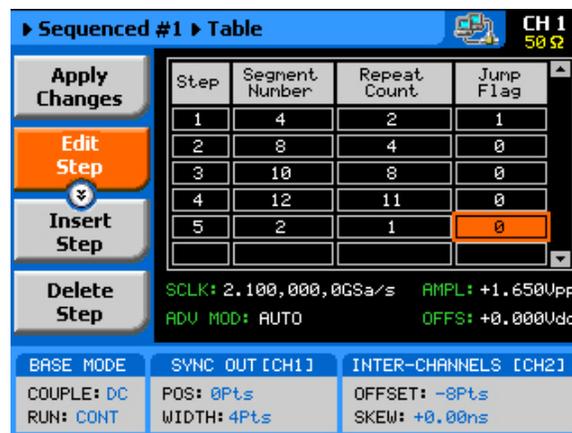


Figure 3-28, Editing the Sequence Table

Selecting Sequence Advance Mode

As was explained above, the **WX2182** goes through an index of steps. It may loop a few times on a designated step and eventually, after the last step in the table, the process repeats itself. Going from step-to-step through the sequence table is done automatically by the instrument. However, there are applications requiring control of when and how the link is stepped. The **WX2182** has a number of sequence advance options: Auto, Once and Stepped. Table 3-7 summarizes the various advance modes in reference to the run mode options. The various options on how to advance sequencer

steps are described as follows:

Auto – specifies continuous advance where the generator steps continuously and automatically through the links to the end of the sequence table and then repeats the sequence from the beginning. For example, if a sequence is made of three segments – 1, 2, and 3, and AUTO mode is used, the sequence will generate an infinite number of 1, 2, 3, 1, 2, 3, 1, 2, 3...waveforms. Of course, each step waveform can be assigned a repeat counter that will cause the waveform to loop as many times as is specified in the Repeat count field.

The above description is true as long as the Jump Bits in all of the steps is set to “0”. When a Jump Bit flag = “1” has been assigned to one or more steps, the waveforms dwells on this specific step until a valid jump signal event is asserted and only then the step is allowed to complete the waveform and move to the next step in the sequence.

AUTO is the default sequence advance mode.

Once – using this advance mode, the **WX2182** initiates a single sequence scenario and resumes its idle state. The idle waveform depends on the run mode, as shown in Table 3-5. In continuous run mode, the sequence is enabled and in triggered and gated run mode the sequence is initiated. In both cases, if the Jump Bit flag is set to “1”, the generator will dwell on the selected waveform until released to the next step from a valid jump signal.

The once advance mode has a repeat loop that can be used to generate a counted burst of single sequence scenarios. This counter can be programmed from 1 to 1,000,000 loops.

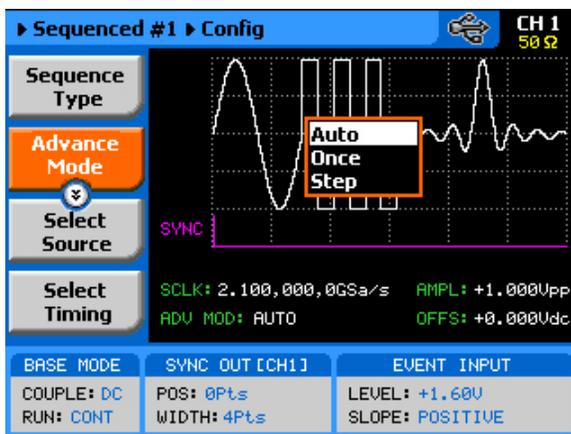


Figure 3-29, Sequence Advance Options

Stepped – this is similar to auto advance mode, except the generator places all jump bit flags to “1” and therefore, each step is advanced to the next only after a valid jump event signal has been asserted to the proper input.

To access the advance mode parameter, select Sequenced from the Function group, then select the Config soft button. The advance mode options, as shown in Figure 3-29, will display. Use the dial or arrow keys to scroll down to the required mode and press Enter to lock in the selected mode.

Sequences and Run Mode Options

Run Mode options define if the sequenced waveforms will be generated continuously, triggered, or gated. Refer to the Selecting Run Modes section of this manual to learn more about these functions. Table 3-7 provides information on the sequenced waveform function, in conjunction with the run mode options. This table is useful, as it summarized all the controls that start and stop the waveforms. The Glossary defines the terms used in this table.

Table 3-7, Sequence Advance in Various Run Mode Options

Run Mode	Waveform	Advance Mode	Arm Options	Idle Waveform	Enable Signal	Abort Signal	Initiate Signal	Wave Loops	Seq Loops	Jump Flag	Jump Signal	Smart Trig
Continuous	Sequenced	Auto	Self Armed	Sequence	-	-	-(¹)	1-1M	-	Bit (0 1)	Event	-
		-	Armed	Wave	BUS Event	BUS	-	1-1M	-	Bit (0 1)	Event	-
		Once	Armed	Wave	BUS Event	BUS	-	1-1M	1-1M	Bit (0 1)	-	-
		Stepped	Armed	Wave	BUS Event	BUS	-	-	-	-	Event	-
	Adv'd Seq.	Auto	Self Armed	-	-	-	-	1-1M	-	Bit (0 1)	Event	-
		-	Armed	Sequence	BUS Event	BUS	-	1-1M	-	Bit (0 1)	Event	-
		Once	Armed	Sequence	BUS Event	BUS	-	1-1M	1-1M	Bit (0 1)	-	-
		Stepped	Armed	Sequence	BUS Event	BUS	-	-	-	-	Event	-
Triggered	Sequenced	Auto	Self Armed	-	-	-	-	-	-	-	-	-
		-	Armed	DC	-	BUS	F.P. BUS Trigger	1-1M	-	Bit (0 1)	Event	Yes
		Once	Armed	DC	-	BUS	F.P. BUS Trigger	1-1M	1-1M	Bit (0 1)	Event	-
		Stepped	Armed	DC	-	BUS	F.P. BUS Trigger	-	-	-	Event	Yes
	Adv'd Seq.	Auto	Self Armed	-	-	-	-	-	-	-	-	-
		-	Armed	DC	-	BUS	F.P. BUS Trigger	1-1M	-	Bit (0 1)	Event	Yes
		Once	Armed	DC	-	BUS	F.P. BUS Trigger	1-1M	1-1M	Bit (0 1)	Event	-
		Stepped	Armed	DC	-	BUS	F.P. BUS Trigger	-	-	-	Event	Yes
Gated	Sequenced	Auto	Self Armed	-	-	-	-	-	-	-	-	-
		-	Armed	DC	-	BUS	F.P. Trigger	1-1M	-	Bit (0 1)	Event	-
		Once	Armed	-	-	-	-	-	-	-	-	-
		Stepped	Armed	-	-	-	-	-	-	-	-	-
	Adv'd Seq.	Auto	Self Armed	-	-	-	-	-	-	-	-	-
		-	Armed	DC	-	BUS	F.P. Trigger	1-1M	1-1M	Bit (0 1)	Event	-
		Once	-	-	-	-	-	-	-	-	-	-
		Stepped	-	-	-	-	-	-	-	-	Event	-

- (¹) – denotes not relevant

Glossary of Terms

Run Mode – defines basic instrument run mode options:

Continuous – waveform is generated continuously.

Triggered – output waits for trigger, waveform is generated once.

Gated – output waits for gating signal, waveform is generated as long as the gating signal is true.

Waveform – Sequenced or advanced sequencing waveforms, waveform coordinates must be downloaded to the instrument and sequence tables updated to generate these waveforms.

Advance Mode – basic sequence advance modes, relevant for sequenced waveforms and sequenced sequences only:

Auto – a sequence is generated continuously.

Once – a sequence is generated once.

Stepped – the sequence waits for an event to jump to the next step.

Arm Options – defines if a waveform is self-enabled or requires a control signal to initiate.

Self Armed – the output does not require a control signal to generate waveforms.

Armed – a control signal is required to enable waveform generation.

Idle Waveform – defines the state of the output waveform before an event (enable, trigger or gate) initiates a waveform.

DC – first waveform point.

Wave – first waveform in a sequence.

Enable Signal – defines the source from where an enable signal is expected. Affects the output only when Arm Option is set to Armed.

BUS – a remote command enables the output.

Event – a transition at the event input enables the output.

Abort Signal – defines the source from where an abort signal is expected.

BUS – a remote command aborts all output activities. This signal does not affect the generator when set to operate in self armed mode.

Initiate Signal – defines the wait for trigger entry port to initiate a waveform. Relevant for trigger and gated run modes only.

F.P. – a front panel push button is used to initiate a waveform or a sequence.

BUS – a remote command initiates a waveform or a sequence. Selecting this option automatically disables front panel operation.

Trigger – a valid signal at the trigger input initiates a waveform or a sequence.

Wave Loops – defines how many times the waveform repeats after a valid Initiate Signal.

Seq Loops – defines how many times the sequence and sequenced sequences repeat after a valid Initiate Signal.

Jump Flag – marks a step in a sequence as either wait for an event to jump or unconditional jump.

.Bit = 0 – unconditional jump to the next step upon completion of the waveform loops.

.Bit = 1 – dwell on current step and wait for an event to jump to the next step.

Jump Signal – defines the entry port for a signal to cause a jump

Event – assigns the event input as the jump signal.

Smart Trigger – defines if smart trigger features are available for a specific function.

Using Advanced Sequencing

The advanced sequencing is, in fact, very similar to the standard sequence operation except, instead of waveforms, the sequence generator steps through complete sequences. Of course, it is a bit tedious to prepare so many waveforms and build so many sequence scenarios, and it would be much easier to do it from a remote computer but, you can also do simple advance sequencing from the front panel, as well.

The first time you select the sequenced waveforms function, the generator defaults to Normal sequencing. To change the mode to advanced sequencing, select the Config soft key and then the Sequence Type soft key from the configuration controls. Then select the Advanced option, as shown in Figure 3-30. Finally, when you select the View Table soft key, you'll notice that the table shows sequence instead of waveforms. The rest is pretty straightforward, as it operates exactly as described for normal sequence scenarios.

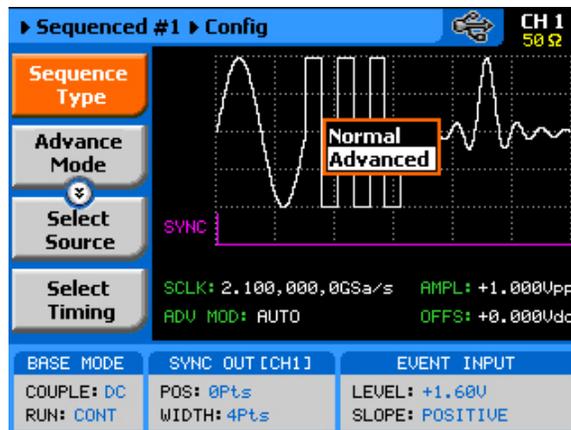


Figure 3-30, Selecting the Advanced Sequencing Option

Using the Dynamic Sequence Control

A control input is available on the **WX2182** rear panel that provides control over the replay of a specific sequence or segment. The control connector has 9 pins and therefore allows replay of one of 256 sequences. A valid line must be asserted to validate sequence change. Having the dynamic control feature, in effect, can serve as replacement of the advanced sequence table where the real-time application can decide when and for how long a sequence will be generated.

The dynamic control input accepts TTL level signals. Bit 1 is connected to pin 1; it weighs 2^0 binary (decimal 1) and bit 8 is connected to pin 8 and weighs 2^8 binary (decimal 128) so if all lines are low, the output generates segment number 1 (the firmware counts the sequences from 0 to 255) and if all line are high, the output generates sequence 256. Any combination from 0 to 255 can be produced at the inputs of this connector but the output will change only when a valid signal is asserted at pin 9 of the same connector. Figure 3-31 shows a typical example of external sequence control; the first valid transition selects sequence 37, the second selects sequence 57 and the third transitions selects sequence 194.

Two dynamic control inputs are available on the rear panel, one for channel 1 and one for channel 2, and each channel can be modified to have a specific output sequence. Note, however, that if you intend to synchronize the outputs, the sequences that are selected with this control must have exactly the same length.

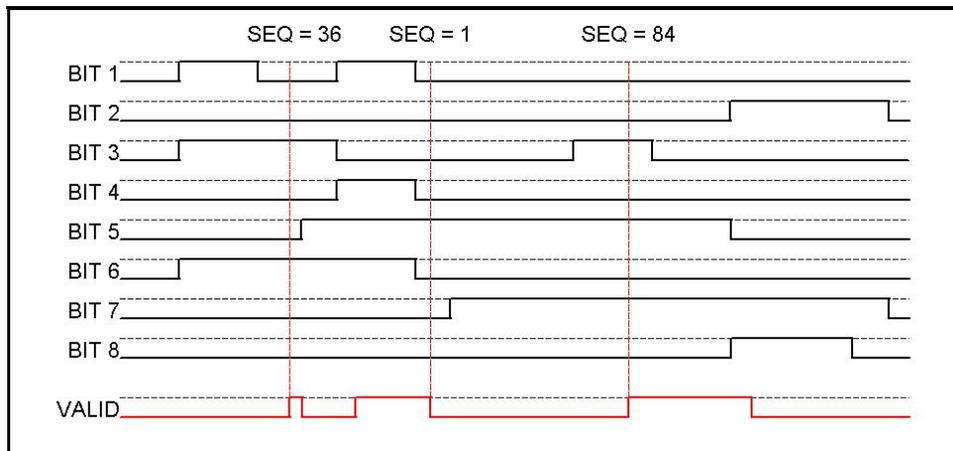


Figure 3-31, Typical Dynamic Sequence Control Scenario

Generating Modulated Waveforms

The **WX2182**, being a digital instrument, has the advantage of able to generate almost any waveform through its DAC, provided that there are enough waveform points to compute the function. Normally, complex modulation schemes will be computed on an external computer and downloaded to the generator as waveform points, but for simpler modulation schemes, the equation already resides in the instrument. The **WX2182** can generate AM, FM and Sweep. The advantage of these waveforms is that they are commonly used and when produced, they are extremely accurate.

The main point to keep in mind is that the modulation waveforms are computed and recomputed, every time a parameter is modified. This is a bit different from analog instruments in the way that the output must stop to recompute the waveform, and then it comes back to life. The next point to consider is the modulation barriers, because the longer and finer the modulation is, the more waveform points are required to generate the function and therefore, it takes more time to compute the waveform and load it to the memory. Normal computation time is around a few milliseconds, but for lower frequencies, it might take a few seconds.

The modulation function is turned on immediately after you press the Modulation button in the Functions group on the right side of the generator. By default, modulation is turned off and therefore, the output generates carrier wave (CW). The first modulation screen is shown in Figure 3-32. The modulation functions and their parameters are described as follows:

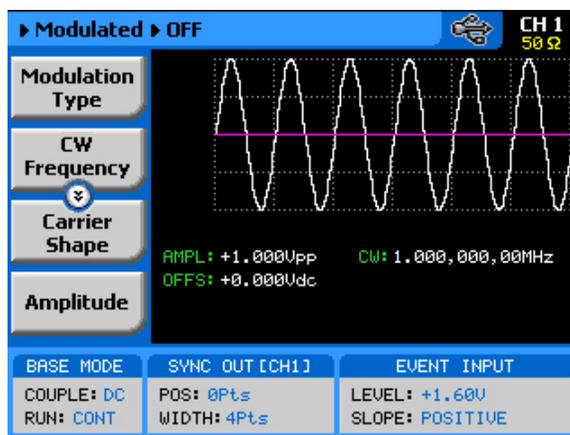


Figure 3-32, The Modulation Function Main Screen

Off

The Modulation Off is a special instance of the modulation function, where the output is not modulated, but generates carrier waveform (CW) frequency only. CW can be sine, triangle, or square waveforms. When placed in Modulation Off, the CW is generated from the main outputs continuously. The CW parameter does not change when you switch from one modulation function to another. Figure 3-33 shows the Modulation Off menus.

While in the Off option, there are some parameters that can be programmed for the carrier waveform:

Modulation Type – defines the type of modulation scheme that will modulate the carrier waveform: Off, AM, FM, or Sweep. The selected modulation scheme is generated immediately at the output terminals.

CW Frequency – defines the frequency of the carrier waveform. The CW parameter, as programmed in this menu is shared by all other modulation options.

Carrier Shape – defines the shape of the carrier waveform. The carrier shape can be selected from Sine, Triangle and Square. Note that the Carrier Shape parameter is used in all of the modulation displays, so if you change the shape for one function, it affects the other modulation displays as well.

Amplitude – defines the carrier amplitude level. The same level is used throughout the instrument when you move from waveform shape to another. The Amplitude parameter, as programmed in this menu, is shared by all other waveform options.

Offset – defines the offset level for the carrier waveforms. The same level is used throughout the instrument when you move from one waveform shape to another. The Offset parameter, as programmed in this menu, is shared by all other waveform options.

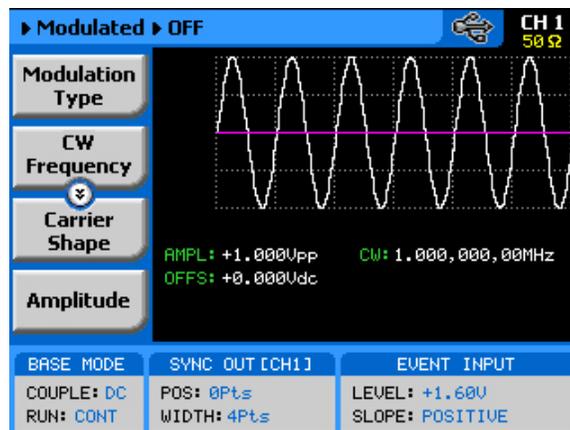


Figure 3-33: Modulation OFF Parameters



Tip

The values of the four parameters shown in the Modulation Off display are duplicated in all modulation panels.

AM

The AM function enables amplitude modulation of a carrier waveform (CW). The carrier waveform is modulated by an internal waveform, normally referred to as envelope waveform. The envelope waveform can be selected from sine, triangle square or ramp shapes. When AM is selected, the menus that are associated with AM become accessible. These are shown in Figure 3-34.

There are other parameters that control how the CW is amplitude modulated. These are:

Modulation Type – defines the type of modulation scheme that will modulate the carrier waveform: Off, AM, FM, or Sweep. The selected modulation scheme is generated immediately at the output terminals.

Modulation Shape – defines the envelope function. There are four shapes that can be used: Sine, Triangle, Square and Ramp. The Modulation Shape menu that provides access to the selection of the envelope waveform is shown in Figure 3-35.

Modulation depth – programmed in units of % and defines the depth of the modulating envelope. Modulation depth is programmed from 0% to 100%.

Modulation Frequency – defines the frequency of the modulating waveform. The modulating waveform is programmed from 10mHz to 100kHz.

CW Frequency – defines the frequency of the carrier waveform.

Carrier Shape – defines the shape of the carrier waveform. The carrier shape can be selected from Sine, Triangle and Square. Note that the Carrier Shape parameter is used in all of the modulation displays, so if you change the shape for one function, it affects the other modulation displays as well.

Amplitude – defines the carrier amplitude level. The same level is used throughout the instrument when you move from waveform shape to another. This parameter is replaced by Power level when the output is AC coupled.

Offset – defines the offset level for the carrier waveforms. The same level is used throughout the instrument when you move from one waveform shape to another. This parameter will not be available when the output is AC coupled.

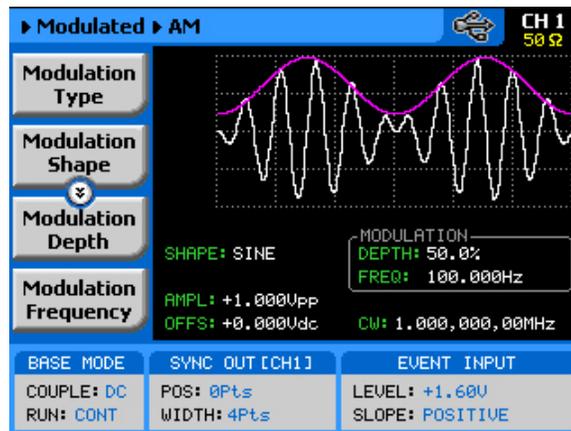


Figure 3-34, AM Menus

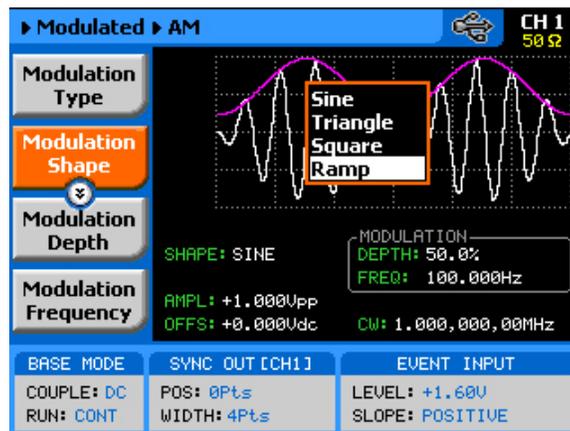


Figure 3-35, Modulating Waveform Shapes

FM

The FM function allows frequency modulation of a carrier waveform (CW). The carrier waveform is modulated by an internal waveform, normally referred to as modulating waveform. The shape of the modulating waveform can be selected from sine, triangle, square or arbitrary waveforms.

The FM function has a number of menus that control the modulation parameters. These are shown in Figure 3-36 and described in the following paragraphs:

Modulation Type – defines the type of modulation scheme that will modulate the carrier waveform: Off, AM, FM, or Sweep. The selected modulation scheme is generated immediately at the output terminals.

Modulation Shape – Defines the shape and type of the modulating waveform: Sine Triangle, Square and Ramp. The Modulation Shape menu that provides access to the selection of the envelope waveform is shown in Figure 3-36.

CW Frequency – defines the frequency of the carrier waveform. Using this standard FM function, the shape of the carrier waveform is always sine.

Frequency Deviation – defines the range of frequencies that the modulation will go through. The peak value is symmetrical around the value of the carrier waveform frequency.

Modulation Frequency – defines the frequency of the modulating waveform. The modulating waveform is programmed from 10mHz to 100kHz.

Marker– programs a unique frequency where the SYNC output generates a pulse to mark this frequency.

Carrier Shape – defines the shape of the carrier waveform. The carrier shape can be selected from Sine, Triangle and Square. Note that the Carrier Shape parameter is used in all of the modulation displays, so if you change the shape for one function, it affects the other modulation displays as well.

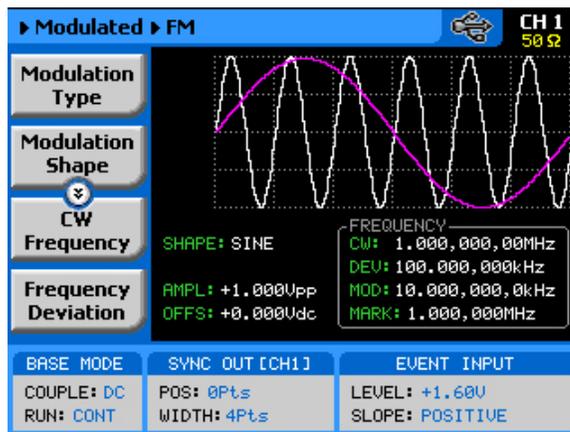


Figure 3-36, FM Menus

Amplitude – defines the carrier amplitude level. The same level is used throughout the instrument, when you move from one waveform shape to another. This parameter is replaced by Power level when the output is AC coupled.

Offset – defines the offset level for the carrier waveforms. The same level is used throughout the instrument when you move from one waveform shape to another. This parameter will not be available when the output is AC coupled.

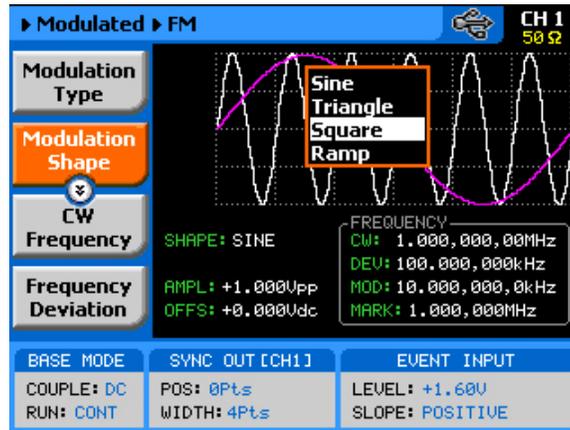


Figure 3-37, Modulation Waveform Shapes

Sweep

Sweep modulation allows carrier waveform (CW) to sweep from one frequency, as defined by the sweep start parameter, to another frequency, as defined by the sweep stop parameter.

When you select sweep modulation, the menus, as shown in Figure 3-38 and described in the following paragraphs, will be available for modification.

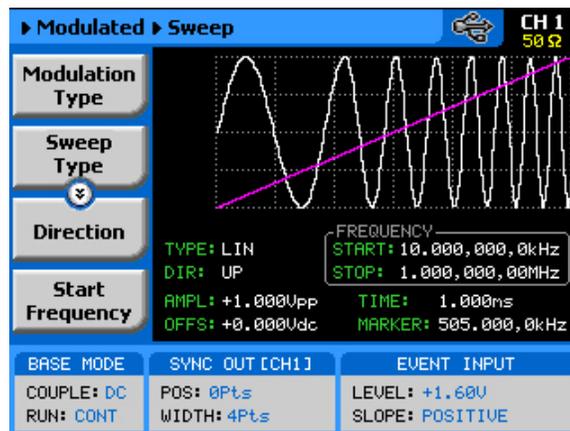


Figure 3-38, Sweep Menus

Modulation Type – defines the type of modulation scheme that will modulate the carrier waveform: Off, AM, FM, or Sweep. The selected modulation scheme is generated immediately at the output terminals.

Sweep Type – defines the sweep steps of which the frequency increments or decrements from start to stop frequencies. A choice is provided between linear and logarithmic. If you select linear sweep, the carrier waveform frequency steps through the

frequencies within a time interval, which is set by the sweep time parameter. Likewise, using the logarithmic sweep type, the frequency span between the start and stop frequencies is stepped through using logarithmic steps.

Direction – defines the sweep direction. UP sets sweep direction from start frequency to stop frequency. DOWN reverses the sweep direction, so the output sweeps from stop frequency to start frequency.

Start Frequency – defines the frequency value of which the generator will start its sweep. Note that the sweep start can be at a higher frequency value, depending on the sweep direction setting.

Stop Frequency – defines the frequency value of which the generator will stop its sweep. Note that the sweep stop can be at a lower frequency value, depending on the sweep direction setting.

Sweep Time – defines the time that will lapse from sweep start to sweep stop frequencies.

Marker – defines a frequency of which, when transitioned through, will output a marker pulse at the SYNC output connector.

Carrier Shape – defines the shape of the carrier waveform. The carrier shape can be selected from Sine, Triangle and Square. Note that the Carrier Shape parameter is used in all of the modulation displays so if you change the shape for one function, it affects the other modulation displays as well.

Amplitude – defines the carrier amplitude level. The same level is used throughout the instrument when you move from waveform shape to another. This parameter is replaced by Power level when the output is AC coupled.

Offset – defines the offset level for the carrier waveforms. The same level is used throughout the instrument when you move from waveform shape to another. This parameter will not be available when the output is AC coupled.

Modulated Waveforms and Run Mode Options

Run Mode options define if the modulated waveforms will be generated continuously, triggered, or gated. Refer to the Selecting Run Modes section of this manual to learn more about these functions. Table 3-8 provides information on the modulated waveform function in conjunction with the run mode options. This table is useful, as it summarizes all the controls that start and stop the waveforms. The Glossary defines the terms used in this table.

Table 3-8, Modulated Waveforms in Various Run Mode Options

Run Mode	Waveform	Arm Options	Idle Waveform	Enable Signal	Abort Signal	Initiate Signal	Wave Loops	Smart Trig
Continuous	Modulated	Self Armed	Wave	- (*)	-	-	-	-
		Armed	DC	BUS Event	BUS	-	-	-
Triggered	Modulated	Self Armed	-	-	-	-	-	-
		Armed	DC	-	BUS	F.P. BUS Trigger	1-1M	Yes
Gated	Modulated	Self Armed	-	-	-	-	-	-
		Armed	DC	-	BUS	F.P. Trigger	-	-

- (*) – Not Relevant

Glossary of Terms

Run Mode – defines basic instrument run mode options:

Continuous – waveform is generated continuously.

Triggered – output waits for trigger, waveform is generated once.

Gated – output waits for gating signal, waveform is generated as long as the gating signal is true.

Waveform – modulated waveform is generated at the output.

Arm Options – defines if a waveform is self-enabled or requires a control signal to initiate.

Self Armed – the output does not require a control signal to generate waveforms.

Armed – a control signal is required to enable waveforms.

Idle Waveform – defines the state of the output waveform before an event (enable, trigger or gate) initiates a waveform.

DC – first waveform point.

Wave – first waveform in a sequence.

Enable Signal – defines the source from where an enable signal is expected. Affects the output only when Arm Option is set to Armed.

BUS – a remote command enables the output.

Event – a transition at the event input enables the output.

Abort Signal – defines the source from where an abort signal is expected.

BUS – a remote command aborts all output activities. This signal does not affect the generator, when set to operate in self-armed mode.

Initiate Signal – defines the wait for trigger entry port to initiate a waveform. Relevant for trigger and gated run modes only.

F.P. – a front panel push button is used to initiate a waveform or

a sequence.

BUS – a remote command initiates a waveform or a sequence. Selecting this option automatically disables front panel operation.

Trigger – a valid signal at the trigger input initiates a waveform or a sequence.

Wave Loops – defines how many times the waveform repeats after a valid Initiate Signal.

Smart Trigger – defines if smart trigger features are available for a specific function.

Generating Pulse Waveforms

The **WX2182** employs a complete set of menus that are dedicated to the pulse function. Press on the Pulse in the Function group and the output will immediately be updated with the pulse waveform and the display will be modified to show pulse parameters, as shown in Figure 3-39.

The pulse function provides the means for designing pulses and their associated parameters, exactly as would be done on a stand-alone analog pulse generator. Note, however, that the pulse is built in the same memory as the arbitrary waveforms are being stored and therefore, changing from arbitrary to digital pulse mode and vice versa may overwrite waveforms that were downloaded to the memory.

If this is the first time that you enter this menu, the output will generate a pulse with the following properties:

Pulse Mode: Single
Period = 10 ms
Pulse Width = 2 ms
High Level = 1 V
Low Level = 0 V
Polarity = Normal
Transitions = Fast

By default, pulse timing is set in units of time (seconds). However, this can be changed so that some parameters are set as ratios between the parameter to the pulse period. This option will be discussed later in this section of the manual.



The pulse shape on the WX2182 LCD display is an icon only. The actual waveform at the output terminals may look entirely different.

The pulse generator menus provide access to all pulse parameters, just as they would be programmed on an analog pulse generator. To access the pulse parameters, use one of the soft keys. If you do not see a required parameter on the screen, press the key up or down to scroll through the menus.

There are many pulse parameters that can be displayed on the screen. However, most applications do not require that all pulse parameters be displayed and therefore, the menus were built in a way that show all of the parameters that are absolutely necessary to program the selected pulse mode. For example, if single pulse mode with fast transitions is required, the delay, rise and fall time parameters will not be shown on the screen. Information on how to program simple and complex pulse modes is given in the following paragraphs.

The technique of changing parameter values is exactly the same as you are using to modify standard waveform parameters. Simply press the soft key that is associated with the parameter, then punch in the numbers using the numeric keyboard and complete the modification by assigning a suffix and pressing the Enter button.

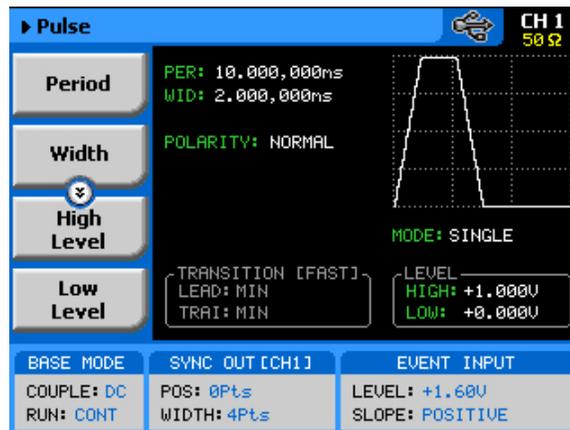


Figure 3-39, Pulse Function Menus

Adjusting the pulse shape with the required characteristics can only be done if all of its parameters can be adjusted both in the time and amplitude domains. The **Model WX2182** provides all the necessary controls to do just that. However, always keep in mind that some parameters may interfere during the programming sequence and cause setting conflicts. These setting conflicts will be discussed later in this chapter. Below you will find a list of all pulse parameters that you can access through the soft key menus.

The main menu, as shown in Figure 3-39, provides access to five soft key buttons: Period, Width, High Level, Low level and Config. Pressing the TOP soft key from anywhere in the pulse menu will restore the display to the one shown in Figure 3-39.

Period – programs the pulse period in unit of seconds.

Width – programs the pulse width in units of seconds. The pulse width can be set as a percent of the period when the Pulse Parameters option in the Config menu has been modified from Time to Percent.

High Level – programs the pulse high-level value in units of volts.

Low Level – programs the pulse low-level value in units of volts.

Config – provides access to a new menu that has pulse configuration controls. The configuration menu is shown in Figure 3-40 and its controls are described below. There are five control parameters in this menu: Pulse Parameters, Pulse Mode, Polarity, Transition Type and Level Control. Each of these controls has a major impact on pulse characteristics and therefore will be addressed and explained.

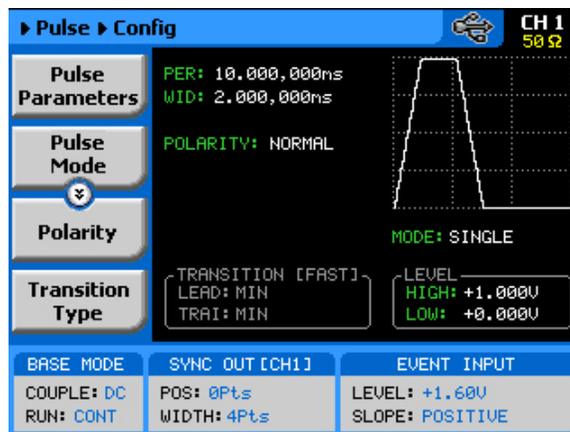


Figure 3-40, Pulse Configuration Menus

Pulse Parameters

The Pulse Parameters control lets you select if you want the pulse parameters programmed in units, time or as percent ratios to the pulse period. Pulse parameters are normally programmed in units of time and this is the default condition after reset or the first time you access this function. The advantage of using ratio is that the instrument computes the timing and keeps a fixed ratio of period-to-width whenever you change the period. The parameters available in this mode are: pulse width, pulse delay and pulse transition times. Amplitude and offset values are not affected when you select the ratio mode.

Understanding Pulse Parameters

Standard definitions of pulse parameters are not within the scope of this manual, but it is important to understand how the Model WX2182 interprets these definitions and how you should expect to see the pulse shape on monitoring devices, such as oscilloscopes.

Figure 3-41 depicts a common pulse shape as understood by most hardware engineers. The standard interpretation implies that the pulse width is measured between the edges, at the middle of the amplitude level and transitions are often specified from 10% to 90%. However, this is not always the case and some engineers, for example, prefer the 20% to 80% value as transitions and measure the high time of the pulse as the pulse width.

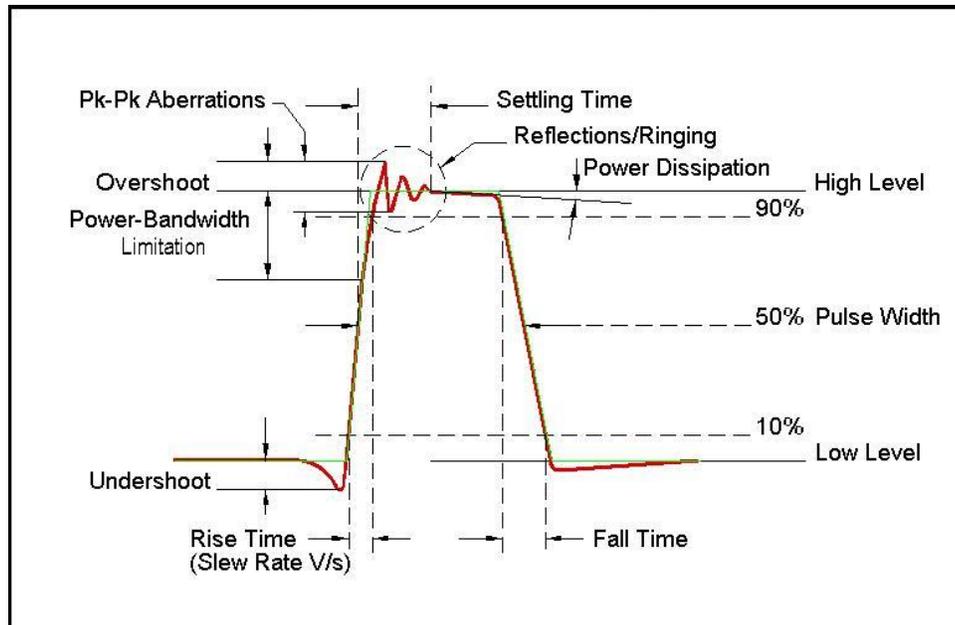


Figure 3-41, Standard Interpretation of Pulse Parameters

As mentioned above, the pulse function is computed and generated from the arbitrary memory and therefore, some of the parameters are interpreted differently, because it will take too long to compute and build digital waveforms the same way that analog components do. Standard or **WX2182** interpretation, once the commonality and differences are defined, will be equally simple to design pulse characteristics with the pulse generator that is available in the **WX2182**.

Figure 3-42 shows how the **WX2182** interprets the programmed pulse parameters. The differences are painted blue to highlight them. One major difference from standard analogy, is that the pulse width includes the time it take to transition from low level to the time it take to transition from high level.

The rest of the parameters were derived from these characteristics and should present little difficulty, especially when most of the pulse applications do not contain linear transitions, anyway.

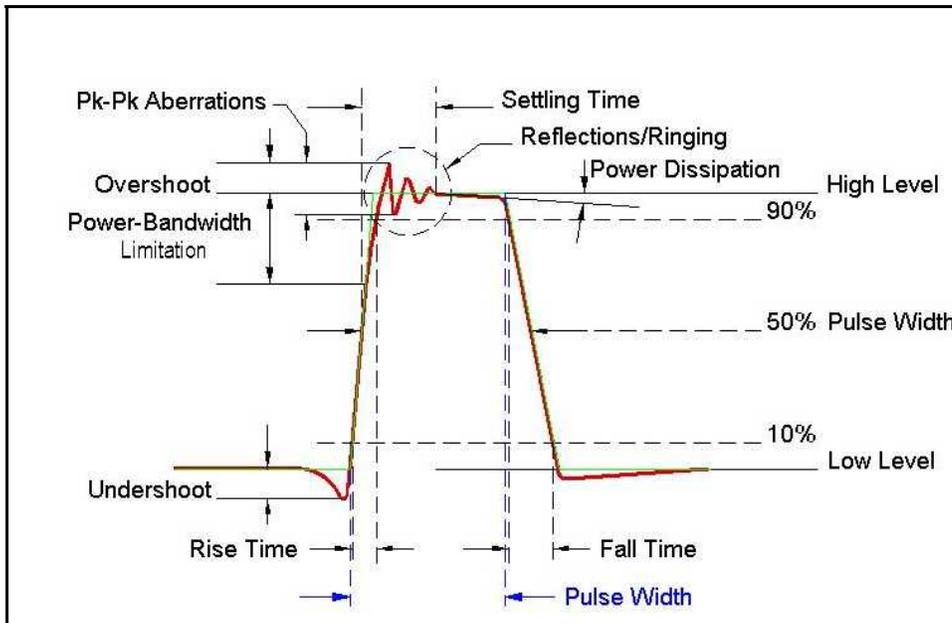


Figure 3-42, WX2182 Interpretation of Pulse Parameters

Pulse Modes

The pulse mode menu provides access to modifying the basic shape of the pulse waveform. These are: Single Pulse, Double Pulse and Delayed Pulse. These modes and their associated parameters are discussed below. To access the Pulse Modes options, press the soft key next to this parameter. The pulse mode options will become available, as shown in Figure 3-43. Scroll up or down the list and press enter to complete the selection process.

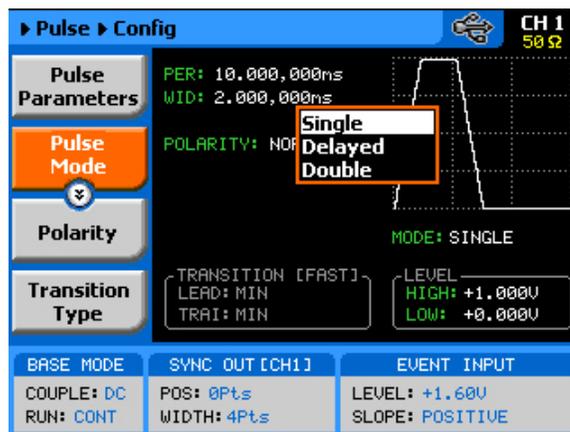


Figure 3-43, Pulse Mode Options

Single Pulse Mode

The basic pulse mode is the Single Pulse. Single pulse defines the shape of a single pulse only. In continuous operating mode, it may appear as a string of pulses that have constant period, width and amplitude. However, the meaning of this mode is that if you place the instrument in triggered run mode and only one pulse is initiated with every trigger. The menus that are associated with the simplest configuration of the single pulse mode are: Period, Width, High and Low Levels. These parameters are discussed below. With more complex configuration, you can select linear transitions and width and amplitude modes. However, these are described separately.

Figure 3-44 shows a typical single pulse shape and highlights all of its relevant parameters. While most of the parameters that are shown in Figure 3-44 can be programmed and adjusted for a specific application, some characteristics of the pulse are derived from the quality of the generator and its output stage. These are specified and can be found in Appendix A.

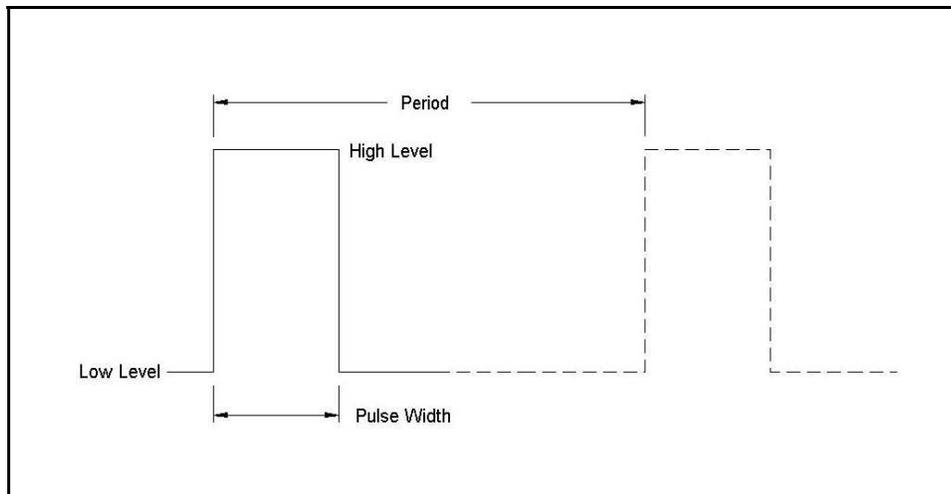


Figure 3-44, Single Pulse Parameters Summary



Note

Before you start programming pulse parameters, keep in mind that incorrect planning of your entries may cause setting conflicts that may, in turn, cause the instrument to ignore some parameters. A common example is if you try to program pulse width that is wider than the period. Therefore, always program the period first and enter other pulse parameters in descending order. A list of setting conflicts is given later in this chapter.

When Single Pulse mode option has been selected, the main pulse menus will allow access to the following pulse parameters:

Period – programs the pulse period in unit of seconds.

Width – programs the pulse width in units of seconds. The pulse width can be set as a ratio to the period when the Pulse Parameters option in the Config menu has been modified from Time to Percent.

High Level – programs the pulse high-level value in units of volts.

Low Level – programs the pulse low-level value in units of volts.

Delayed Pulse Mode

The Delayed Pulse mode is a special mode that delays the pulse output after a trigger is issued. To modify the pulse mode to delayed pulse, use the procedure as given above under the Pulse Modes heading.

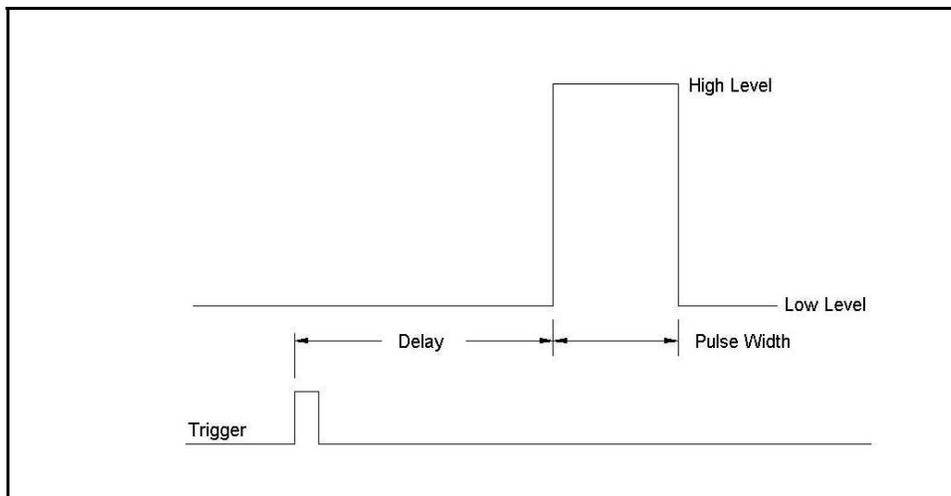


Figure 3-45, Delayed Pulse Mode

The menus that are associated with the simplest delayed pulse configuration are: Period, Width, High and Low Levels and Pulse Delay. The pulse delay is measured from the trigger edge to the first transition of the pulse leading edge, as shown in Figure 3-45.

The Pulse Delay parameter becomes available in the main pulse parameters screen only after you select the delayed pulse mode.

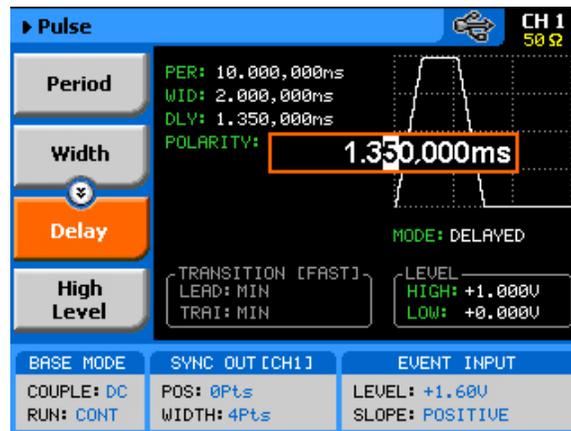


Figure 3-46, Programming the Single Pulse Delay Parameter

Double Pulse Mode

The Double Pulse mode is a special mode that doubles pulse output into a pair of two pulses at a time. In continuous run mode, the output will appear as a string of pulse pairs, separated by an interval set by the period parameter. If you place the instrument in triggered run mode, a pair of pulses is initiated with every trigger. To modify the pulse mode to double pulse, use the procedure as given above under the Pulse Modes heading.

The menus that are associated with the simplest double pulse configuration are: Period, Width, High and Low Levels and Double Pulse Delay, which sets the delay between the pairs of pulses. The double pulse delay is measured from the first pulse transition to the next pulse transition, as shown in Figure 3-47.

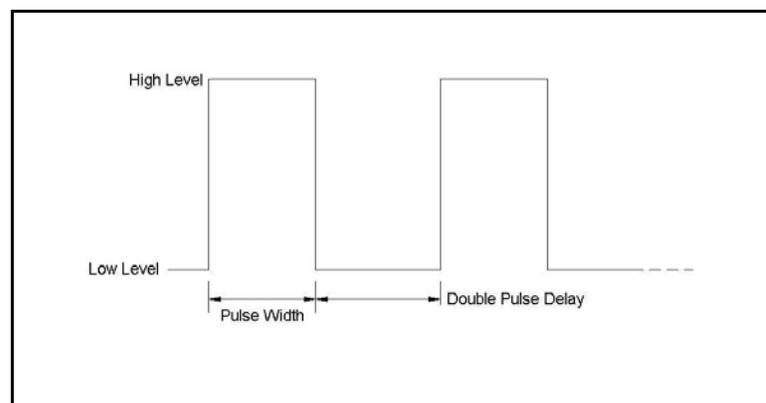


Figure 3-47, Double Pulse Mode

The double pulse delay parameter becomes available in the main pulse parameters screen, as shown in Figure 3-48, only after you select the double pulse mode. Note that the delay is programmed from pulse-end to pulse-start.

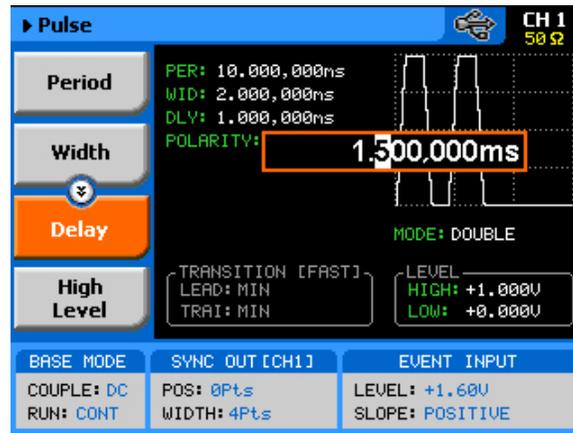


Figure 3-48, Programming the Double Pulse Delay

Programming Pulse Polarity

The pulse polarity parameter determines if the pulse is generated in Normal, Complemented, or Inverted shape. Pulse polarity can be selected in conjunction with any of the pulse modes. The various polarity options are shown in Figure 3-49.

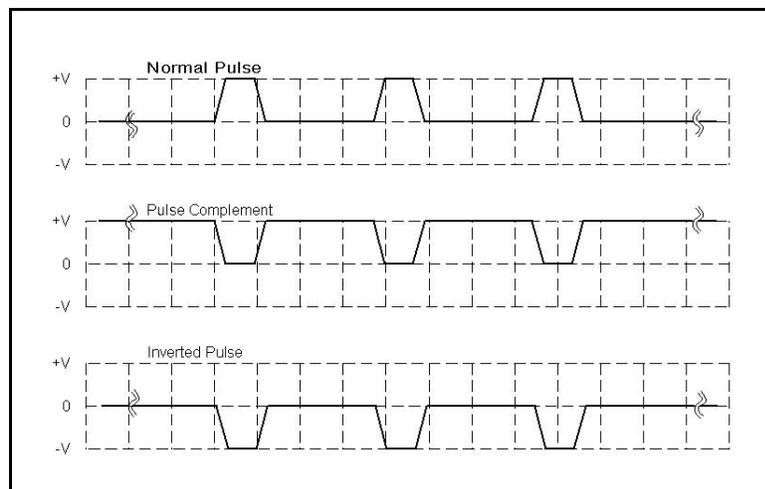


Figure 3-49, Pulse Polarity Options

As shown in this figure, the complemented shape is mirrored around the horizontal axis in a way that the high level becomes low and similarly, the low level becomes high. In complemented mode, the inversion process is symmetrical to about 50% of the value of the pulse amplitude.

In Inverted mode, the normal pulse is mirrored about the 0 V horizontal axis, positive values are converted to negative and negative values are converted to positive.

The normal pulse and the pulse complement are specifically valuable for applications requiring differential signals and therefore a dual channel like the **WX2182** that has this feature can easily be programmed to generate these signals. Simply set one channel to Normal and the second channel to Complemented and both signals will be generated differentially, perfectly synchronized, with no phase offset and without the slightest jitter.

Use Figure 3-50 to access and modify the pulse polarity parameter. Note that the pulse polarity can be programmed separately for each channel and therefore, before you modify this parameter, make sure that you program the correct channel.

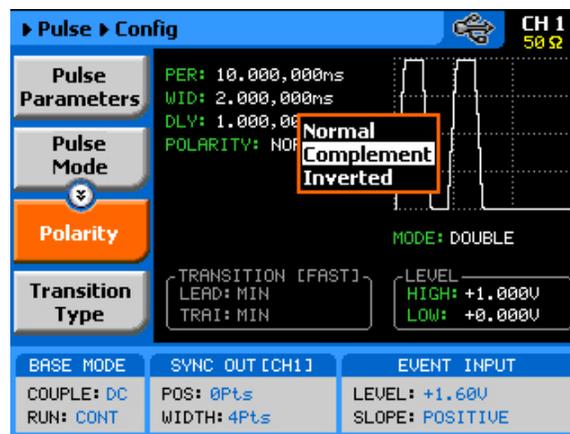


Figure 3-50, Programming the Pulse Polarity

Applying Linear Transitions

Most of the applications that use pulse generation require that the transitions from low-to-high and from high-to-low be as fast as possible. Such transitions are normally created as a by-product of the output amplifier. General-purpose amplifiers that can drive 50 Ω loads with high amplitudes are rare, and usually the products that you can buy off the shelf either have poor drive capabilities or uncontrolled aberration capability.

For a pulse generator that generates pulses with fast transitions only, the problem is simpler, because the designer can use a switching amplifier at the output amplifier stage. It takes a very different approach to design an output stage that slows the transitions of the leading and trailing edges. To this extent, the **WX2182** has a unique output amplifier stage, that allows full control over pulse transitions over a very high dynamic range of amplitudes and offsets, without the slightest degradation of the integrity of the signal. A comparison between pulses with fast and linear transitions is shown in Figure 3-51. As you can see, the top train has fast transitions. These are normally in the range of <1 ns and are expected to be very fast and without aberrations. The bottom pulse has linear transitions that are expected to have good linearity and

slew-rate accuracy. Observe that the pulse width on the pulses that have linear transitions is measured from the first transition to high. Also note that the leading and the trailing edges can be programmed to have different transition times.

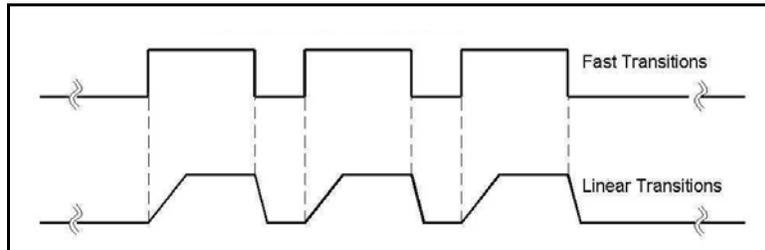


Figure 3-51, Fast and Linear Transitions, Compared

The menu that selects between fast and linear transitions is shown in Figure 3-52. The application of linear transitions affects all pulse modes. Note that you may select symmetrical transitions and in this case, programming the lead time automatically adjusts the fall time to the same value and visa versa: programming the fall time will automatically adjust the rise time value.

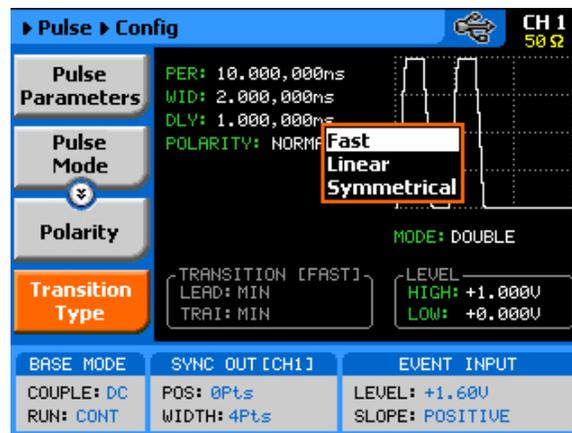


Figure 3-52, Programming the Transition Type

After you select the linear transition option, you'll probably want to program the transition times for the leading and trailing edges. There are some considerations to observe before you program the transitions. First, note the limits, as specified in Appendix A. Then you have to make sure that the transition settings do not conflict with the pulse width settings. For example, if you set the pulse width to 100 ns and the leading edge transition time to 120 ns, the instrument will not allow you to do the change. A list of setting conflicts is given later in this chapter.

Finally, you have to bear in mind that the transitions are programmed digitally, so there is no limitation on ranges, but if you select long transition cycles, there is danger that the generator will not have enough waveform memory to complete the waveform. These limitations are summarized in Appendix A and some are listed as errors in the following paragraphs.

**TIP**

Although not a design limitation, setting conflict may occur if the leading and trailing edges are not programmed within the same range.

After you configure the **WX2182** to have linear transitions, the Leading Edge and the Trailing Edge soft buttons will be visible on the main pulse display, as shown in Figure 3-53.

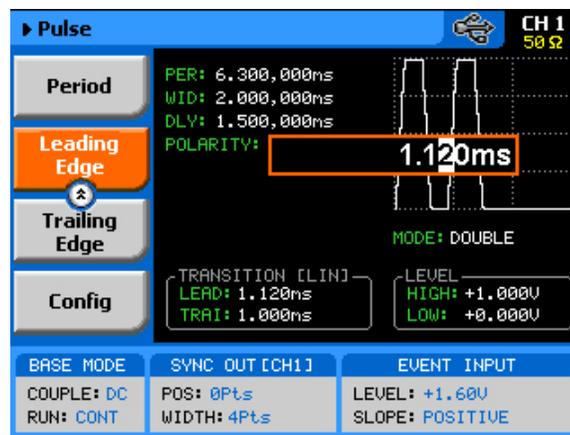


Figure 3-53, Leading Edge Programming Example

Programming the Amplitude Level Mode

Common waveform generators allow adjustment of the peak-to-peak amplitude plus offset, in cases where the required level is none symmetrical about the 0 V level. While this is normally acceptable for generating standard waveforms, pulsed waveform applications require additional flexibility in the way that the levels are set. For example, one may want the baseline to stay on 0V, regardless of the top or the low peaks settings. Other applications could require separate adjustments of each level and so on.

Using the **WX2182** as your pulse source, you have four options to set up the pulse levels, as shown in Figure 3-54 and explained below:

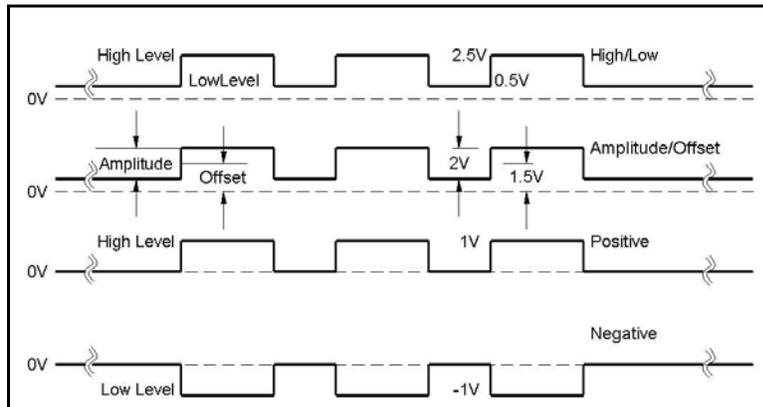


Figure 3-54, Amplitude Level Modes Options

1. **High/Low Levels.** This is the default option. Using this mode, you can program the high and the low levels directly, while allowing the instrument to set the internal amplitude and offset according to your selection. The maximum amplitude that can be programmed is 2 V peak-to-peak. To achieve this level, program the low level to -1 V and the high level to +1 V. Note that although the specified maximum peak-to-peak amplitude is 2 Vp-p, the high and low level can not exceed the ± 2.5 V rail limits. Also note that the amplitude level is specified when the pulse is applied on a 50Ω load impedance. The only way to exceed the peak-to-peak rail limitation is by increasing the load impedance, but then expect degradation of the pulse shape. The example in Figure 3-54 shows the high level set at 2.5 V and the low level set at 0.5 V and therefore, the resulting peak-to-peak level is 2 V.
2. **Amplitude/Offset.** This option allows separate modification of the amplitude and the offset. This option is very useful when you want to vary the vertical position of the pulse, but hold the peak-to-peak amplitude level fixed. The example in Figure 3-54 shows the amplitude set at 2.5 V and the low level set at 1.5 V and therefore, the resulting waveform is exactly as was programmed in the high/low level programming example.
3. **Positive.** This option is very useful when you want to vary the positive position of the pulse, but hold the low level fixed at the 0 V level. The example in Figure 3-54 shows the high level set at 1 V and the low level fixed at 0 V. Modification of the high level will not alter the low level position.
4. **Negative.** This option is very useful when you want to vary the negative position of the pulse, but hold the high level fixed at the 0 V level. The example in Figure 3-54 shows the low level set at -1 V and the high level fixed at 0 V. Modification of the low level will not alter the high level position.

The amplitude level options are selected in the configuration menu, after you select the Level Control tab, as shown in Figure 3-55.

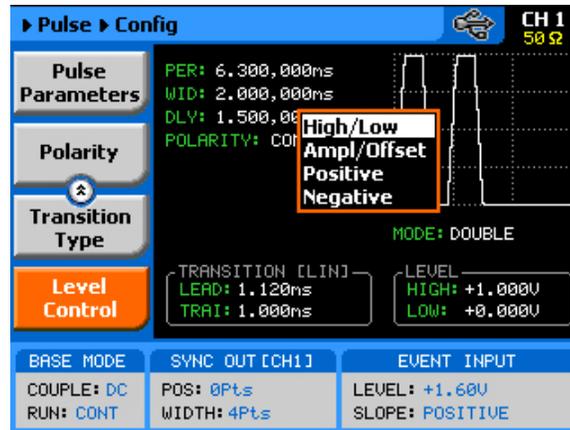


Figure 3-55, Programming the Amplitude Level Mode

Pulse Design Limitations

Keeping in mind that the pulse is created digitally with the use of memory points, one should understand that there are limitations to creating such pulses that evolve from this system. These limitations are summarized below.

1. Step increment defines resolution and period

The pulse is being created digitally, using a sample clock generator that clocks memory points. The rate of the sample clock defines the incremental resolution. Consider that you want to generate 100 ms pulse rates with 1 ms high time pulse and the rest of the period low. In this case, the generator can select the 1 kSa/s to 10 kSa/s clock rates, because this is enough for generating a high signal of 1 ms using just 100 to 1000 memory points. However, when you want to define much smaller pulse widths at larger rep rates, the number of points that are used for the generation increases as a function of the period. The limitation is set by the number of memory points. With the standard memory model, the incremental resolution is 1 in 16,000,000. This increases to 1 in 32,000,000 if you purchased the **WX2182-1**.

2. Sum of pulse parameters cannot exceed the period

While designing a pulse shape, keep in mind that the generator will automatically detect if you are trying to “mess with” the mathematics. Therefore, remember that the sum of all parameters cannot exceed the period. Always start your pulse design by assigning the required period first and only then work your way down the parameters list.

3. Only single and double pulse can be designed

As a stand-alone pulse generator, the capability that is built into the digital pulse generator allows generation of these two waveforms.

This allows generation of single or double pulse patterns having a fixed high and low amplitude values. In case you need to design complex trains of pulse waveforms, you can always do it using an external utility.

4. Pulse peaks cannot exceed the supply voltage rails.

The maximum peak-to-peak amplitude span for a given pulse design is 2 V and a further limitation is that the positive and negative settings cannot exceed the output amplifier rails of +2.5 V and -2.5 V.

The paragraphs below summarize possible settings conflicts and devise options to undo the lockup. In case you try to program a parameter that will cause a setting conflict, the instrument will automatically detect the problem and issue an error message. In this case, the output may appear distorted and generate uncontrolled signals. Under no circumstances should you use the output when an error is displayed, even if the signal appears to look somewhat as expected, because there is no control over accuracy and signal integrity when an error message is displayed.

Settings Conflict Errors

Settings conflict errors may involve one or more parameters and there is also a chance that more than one error is embedded in the settings. For simplicity, the **WX2182** displays the first error it detects. In this case, the output is updated, but a red asterisk is displayed on the message bar. This symbol will remain on the top message bar until the error is cleared. A detailed description for each of the conflicting settings is given below.



The following abbreviations are used throughout the following setting conflicts descriptions:

- PER** – Period setting
 - HIL** – High-level setting
 - LOL** – Low-level setting
 - WID** – Pulse-width setting
 - DEL** – Delay-edge setting
 - TRE** – Trailing-edge setting
 - ITRG** – Period-of-internal-trigger setting
-

Amplitude Errors

Amplitude errors occur when attempting to program amplitude outside the specified window level. This error will occur in all run mode options. The generator will detect the following conditions:

HIL - LOL < 50 mV
HIL + LOL > 2 V
HIL > 2.5 V
LOL < -2.5 V

The minimum and maximum amplitude levels are absolute values that the **WX2182** can accept. The same will occur if you reverse the high and low levels, because the instrument will sense it as a negative voltage, which is obviously less than the minimum 50 mV limit.

Corrective Actions

Evaluate the required amplitude level and change the high and low levels accordingly.

Pulse Timing Errors

Pulse timing errors occur when attempting to program the period value outside the specified limits or when there is a setting conflict between the period and the leading edge transition values. The generator will detect the following conditions:

PER > 1.6 s
PER < 80 ns
LEE > WID

While the first two conditions are easy to grasp, as they are simply a matter of how the pulse parameters are specified, the last condition evolves from the way that the **WX2182** interprets the pulse width parameter. If you look at earlier sections of the pulse generator description, you'll notice that the pulse width includes the leading edge transition time and therefore, if you fail to take this into consideration, the generator will issue an error flag.

Corrective Actions

1. Make sure the period limits are observed
2. Reduce the leading-edge value

Pulse Linear Transition Errors

Pulse linear transition errors occur when attempting to program the leading and trailing edge values outside the specified limits. The generator will detect the following conditions:

LEE/TRE < 1 ns
LEE/TRE > 100 ms
WID+TRE > 1.6 s

While the first two conditions are easy to grasp, as they are simply a matter of how the pulse parameters are specified, the last condition evolves from the way that the **WX2182** interprets the

pulse width parameter. If you look at earlier sections of the pulse generator description, you'll notice that the pulse width includes the leading edge transition time and therefore, if you fail to take this into consideration, the generator will issue an error flag.

Corrective Actions

1. Make sure the leading- and trailing-edge limits are observed
2. Reduce the leading-edge value
3. Reduce the trailing-edge value

Pulse Delay Errors

Pulse delay errors occur when attempting to program pulse or double pulse delay values outside the specified limits. The generator will detect the following conditions:

DEL < 1 ns

DEL > 1 s

DEL+WID+TRE > 1.6 s (single pulse mode)

DEL+2*WID+2*TRE > 1.6s (Double pulse mode)

While the first two conditions are easy to grasp, as they are simply a matter of how the pulse parameters are specified, the last condition evolves from the way that the **WX2182** interprets the pulse width parameter. If you look at earlier sections of the pulse generator description, you'll notice that the pulse width includes the leading-edge transition time and therefore, if you fail to take this into consideration, the generator will issue an error flag.

Corrective Actions

1. Make sure the delay limits are observed
2. Reduce the delay value
3. Reduce the leading-edge value
4. Reduce the trailing-edge value

General Pulse Errors

Bearing in mind that the pulse is generated mathematically and replayed as an arbitrary waveform, it is very easy to get into tight corners that do not let the generator compute the waveform efficiently. This may come from the following conditions:

Required waveform resolution is < 250 ps

Required memory length > 16,000,000

The computed SCLK > 2.1 GSa/s

System memory allocation limitations

The general pulse errors are hard to define. However, if reasonable parameters range and ratio-to-period are kept, the **WX2182** should have no problem computing and generating the required pulse shape.

Using Markers

There are two marker outputs available for each channel. The markers are output differentially through rear panel SMB connectors. The purpose of these markers is to be used as auxiliary outputs that are fully synchronous with the output waveforms. Although the markers are part of the waveform data, when used, they do not reduce the number of DAC bits that are available for the arbitrary function.

The markers can be placed anywhere along the waveforms and their width adjusted, sort of adjustable pulse width. Low- and high-voltage controls are also available separately for each marker output, and since the markers are part of the waveform data, jitter between the markers and the output waveform is minimized.

Bench operation of the **WX2182** allows programming of a single marker transition per channel. However, if you are controlling the product from remote, you can download multiple markers as part of the waveform data and in fact, use the marker terminals to output strings of pulse data. Using the full 2.1 GSa/s speed of the sample clock, the markers can clock data out at the rate of over 8 Gbit/s.

Note that there is a constant system delay between the output start and the marker outputs, but this can be adjusted to have the same phase using the delay and offset features of the output waveform. The system delay value is given in Appendix A.

The display as shown in Figure 3-56 will provide access to the marker parameters as soon as you hit the Markers button in the Control group on the left of the instrument. The screen is divided into two sections: Marker 1 and Marker 2. The Markers screen and parameters are described below.



Figure 3-56, Marker Menus

State – toggles both marker outputs ON and OFF. Programming the markers from the front panel always generates markers from the start edge of the waveform.

CH1

Press the CH1 soft key button to access parameters that control channel 1 markers. These are: State, Delay, Pos, Width, High and Low. These parameters are explained as follows:

Delay – programs the marker delay value. The delay is measured from the waveform start position and is programmable with resolution of 10 ps from 0.00 ns to 3.00 ns.

Pos – programs the position of the marker start in reference to the waveform start point. The position is programmed in units of waveform points (or sample clock periods) from 0 to the full length of the waveform, in increments of 4 waveform points. The marker-position value does not affect the marker-delay value and visa versa.

Width – programs the width of the marker in units of waveform points. Minimum width is 4 points and maximum is the full wavelength of the waveform. The width is programmed in increments of 4 points. The marker delay and position have no affect on the marker, except the sum of the marker-position value and marker-width value cannot exceed the length of the waveform.

High – programs the high level of the marker pulse. The level is valid when terminated into a proper load. The high level is programmable from 0.5 V to 1.25 V.

Low – programs the low level of the marker pulse. The level is valid when terminated into a proper load. The low level is programmable from 0 V to 0.8 V.

CH2

Press the CH2 soft key button to access parameters that control channel 2 markers. These are the same as were described above, for channel 1.

Apply

As was mentioned above, the marker output data is part of the arbitrary waveform data and therefore, modifying the marker parameters do not change the marker output, until the Apply soft key button has been pressed. Every timing change of the marker output initiates an internal cycle that reads and clears the current position, and then updates the waveform memory with the new marker setting. The process is very quick if small changes are made to the markers, but may be longer if many waveform points need to be read and updated.

Using Store/Recall

The store and recall functions allow you to save important front panel settings and recall them later, when they are needed for a specific application. If you are using external utilities and control the instrument remotely, then it will be best to store all instrument settings and waveforms on the computer's media. However, if local operation is desired, you may still store settings, but bear in mind that the internal memory is limited on what can be saved. Instrument settings and waveforms can also be stored on a disk-on-key that is connected to a front-panel host USB connector (type 1).

The front-panel store/recall function allows access to 10 memory cells. One or more cells can be used for this operation, but you need to observe the limitations. The internal memory has a capacity to store a total of 1M of waveform points, so if you need to store longer waveforms, use your hard-drive on the computer or the disk-on-key option.

Press the Store/Recall button in the Control group on the right side of the instrument. This will cause the display to show the Store/Recall panel, as shown in Figure 3-57. There are four soft-key buttons in this display: Store, Recall, List and Update. Information on how to use the keys to store and recall setups on different media options is given below.

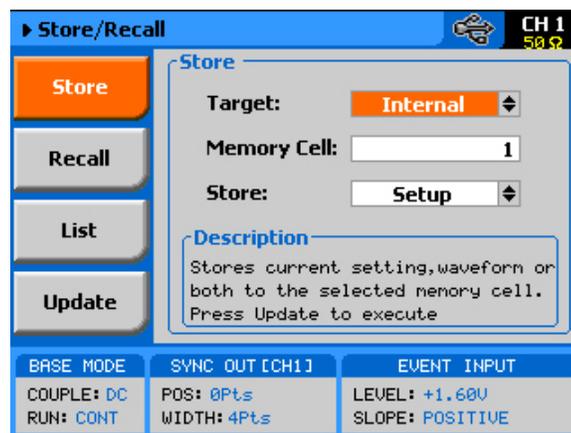


Figure 3-57, Store/Recall Menus

Storing Instrument Setups and Waveforms

The Store display is shown in Figure 3-58. This is the first display you enter after pressing the Store/Recall button in the Control group on the right side of the **WX2182**. The Store display has three fields that you can program: Target, Memory Cell and Store. The operation of these is described below. Note that the selected memory cell will be updated with the information that is shown on the display only after you hit the Update soft key button.

Target – will provide the path to the selected memory target. There are two options: Internal and USB. When you select the Internal option, setups and waveform data will be stored on an internal flash memory. Note that the size of this memory is limited and therefore, this is the least desirable option if you intend to store large banks of waveform memory. The USB option will route the setups and waveform data to the front panel USB host connector. There you may connect a disk-on-key that can store very large waveforms.

Memory Cell – use this field to select the active memory cell. There are 10 memory cells that you may access and each of these cells can be used to store different setups and different waveforms, but you may not store more than one waveform in a specific memory cell location.

Store – use this field to select what you want to store. You may clear the entire cell if you use the Empty option. In case you want to store something, you may select between Setup, Waveform and All. Setup stores the current front panel settings, including parameters, as well as operating and output modes. Waveform will store just the active waveform and All will store both the front panel setting and the current waveform.

Regardless of what you select for each field, the operation will be completed only after you press the Update Soft Key button.



Figure 3-58, Store Menus

Recalling Instrument Setups and Waveforms

The Recall display is shown in Figure 3-59. Just like the Store display, the Recall display has three fields that you can program: Target, Memory Cell and Store. The operation of these is described below. Note that the front panel will be updated with the information that is shown on the display only after you hit the Update soft key button.

Target – will provide the path to the selected memory target. There are two options: Internal and USB. When you select the Internal option, setups and waveform data will be recalled from an internal flash memory. Note that the size of this if case you intend to store large banks of waveform memory. The USB option will route the setups and waveform data from the front-panel USB host-connector. There you may connect a disk-on-key that can store very large waveforms.

Memory Cell – use this field to select the active memory cell. There are 10 memory cells that you may access and each of these cells can be use to recall different setup and a different waveform.

Recall –this field shows what you are about to recall. The field is grayed-out and does not allow access to the selected option since the contents of the memory cell is programmed in the store menu.

Regardless of what you select for each field, the operation will be completed only after you press the Update Soft Key button.

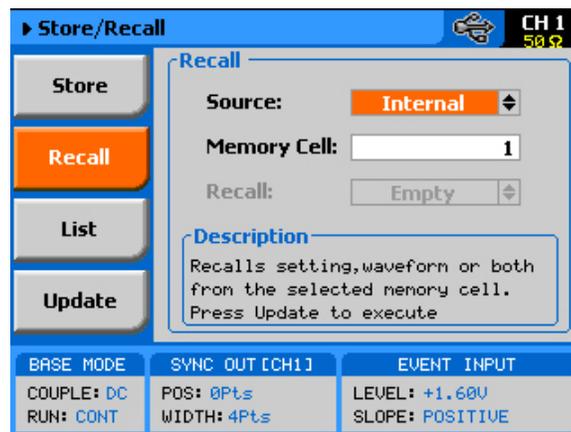


Figure 3-59, Recall Menus

If you are not sure what is stored in each of the memory cells, you can press the List Soft Key button. The list has no function other than showing what is stored in the memory cells. Press the List Soft Key button and the panel as shown in Figure 3-60 will be displayed. Note that the List display provides access to the storage media. You may select between USB and Internal and the panel will show the parameters that are stored on this specific media.

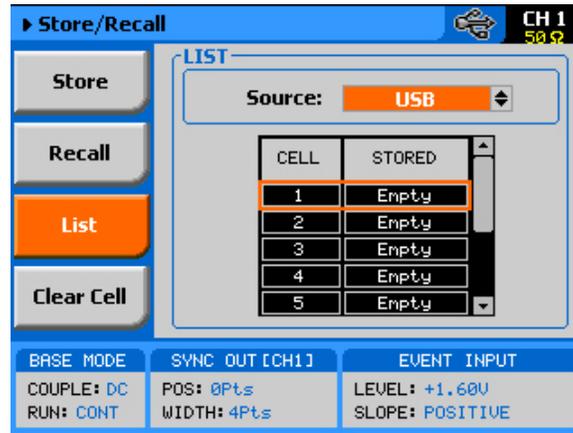


Figure 3-60, Stored Memory Cells Listed

Chapter 4

Programming Reference

Title	Page
What's in This Chapter.....	4-3
Introduction to SCPI.....	4-3
Command Format	4-4
Command Separator.....	4-4
The MIN and MAX Parameters	4-4
Querying Parameter Setting.....	4-5
Query Response Format	4-5
SCPI Command Terminator	4-5
IEEE-STD-488.2 Common Commands.....	4-5
SCPI Parameter Type	4-5
Numeric Parameters.....	4-5
Discrete Parameters	4-6
Boolean Parameters	4-6
Arbitrary Block Parameters.....	4-6
Binary Block Parameters	4-6
SCPI Syntax and Styles.....	4-6
WX2182 Commands.....	4-7
Channel & Group Control Commands	4-15
Run Mode Commands	4-19
Analog Output Control Commands	4-30
Marker Output Control Commands	4-40
Standard Waveforms Control Commands	4-44
Arbitrary Waveforms Control Commands	4-49
Sequenced Waveforms Control Commands.....	4-55
Advanced Sequencing Control Commands	4-61
Modulated Waveforms Global Control Commands.....	4-65

Modulation Control Commands	4-67
AM Programming	4-68
FM Programming.....	4-69
Sweep Modulation Programming	4-71
Pulse Waveform Programming.....	4-74
LAN System Configuration Commands	4-83
Store/Recall Commands.....	4-87
System Commands.....	4-90
Error Messages	4-91
IEEE-STD-488.2 Common Commands and Queries.....	4-94

What's in This Chapter

This Chapter lists and describes the set of SCPI-compatible (Standard Commands for Programmable Instruments) remote commands used to operate the **Tabor WX2182**. To provide familiar formatting for users who have previously used the SCPI reference documentation, the command descriptions are dealt with in a similar manner. In particular, each sub-system's documentation starts with a short description, followed by a table showing the complete set of commands in the sub-system. In conclusion, the effects of individual keywords and parameters are described. The complete listing of all commands used for programming the **Tabor WX2182** is given in Table 4-1.

Introduction to SCPI

Commands to program the instrument over the GPIB are defined by the SCPI 1993.0 standard. The SCPI standard classifies a common language protocol. It goes one step further than IEEE-STD-488.2 and defines a standard set of commands to control every programmable aspect of the instrument. It also defines the format of command parameters and the format of values returned by the instrument.

SCPI is an ASCII-based instrument command language designed for test and measurement instruments. SCPI commands are based on a hierarchical structure, known as a tree system. In this system, associated commands are grouped together under a common node or root, consequently forming subsystems.

Part of the OUTPut subsystem is shown below to illustrate the tree system:

```
:OUTPut
  :FILTer
    [ :LPASs ] { NONE | 25M | 50M | ALL }
      [ :STATe ] OFF | ON
```

OUTPut is the root keyword of the command; FILTer and STATe are second level keywords. LPASs is third level keyword. A colon (:) separates a command keyword from a lower level keyword.

Command Format

The format used to show commands in this manual is shown below:

```
FREQuency {<frequency>|MINimum|MAXimum}
```

The command syntax shows most commands (and some parameters) as a mixture of upper and lowercase letters. The uppercase letters indicate the abbreviated spelling for the command. For shorter program lines, send the abbreviated form. For better program readability, use the long form.

For example, in the above syntax statement, `FREQ` and `FREQUENCY` are both acceptable forms. Use upper or lowercase letters. Therefore, `FREQ`, `FREQUENCY`, `freq`, and `Freq` are all acceptable. Other forms such as `FRE` and `FREQUEN` will generate an error.

The above syntax statement shows the frequency parameter enclosed in triangular brackets. The brackets are not sent with the command string. A value for the frequency parameter (such as "FREQ 50e+6") must be specified.

Some parameters are enclosed in square brackets ([]). The brackets indicate that the parameter is optional and can be omitted. The brackets are not sent with the command string.

Command Separator

A colon (:) is used to separate a command keyword from a lower level keyword as shown below:

```
SOUR:FUNC:SHAP SIN
```

A semicolon (;) is used to separate commands within the same subsystem, and can also minimize typing. For example, sending the following command string:

```
TRIG:SLOP NEG;COUN 10;TIM 5e-3
```

is the same as sending the following three commands:

```
:TRIG:SLOP NEG  
:TRIG:COUN 10  
:TRIG:TIM 5e-3
```

Use the colon and semicolon to link commands from different subsystems. For example, in the following command string, an error is generated if both the colon and the semicolon are not used.

```
OUTP:STATE ON;:TRIG:BURS ON
```

The MIN and MAX Parameters

Substitute `MINimum` or `MAXimum` in place of a parameter for some commands. For example, consider the following command:

```
FREQuency {<frequency>|MINimum|MAXimum}
```

Instead of selecting a specific frequency, substitute `MIN` to set the frequency to its minimum value or `MAX` to set the frequency to its maximum value.

Querying Parameter Setting

Query the current value of most parameters by adding a question mark (?) to the command. For example, the following command sets the output function to square:

```
SOUR:FUNC:SHAP SQR
```

Query the output function by executing:

```
SOUR:FUNC:SHAP?
```

Query Response Format

The response to a query depends on the format of the command. In general, a response to a query contains current values or settings of the generator. Commands that set values can be queried for their current value. Commands that set modes of operation can be queried for their current mode. IEEE-STD-488.2 common queries generate responses, which are common to all IEEE-STD-488.2 compatible instruments.

SCPI Command Terminator

A command string sent to the function generator must terminate with a <new line> character. The IEEE-STD-488 EOI message is a <new line> character. Command string termination always resets the current SCPI command path to the root level.

IEEE-STD-488.2 Common Commands

The IEEE-STD-488.2 standard defines a set of common commands that perform functions like reset, trigger and status operations. Common commands begin with an asterisk (*), are four to five characters in length, and may include one or more parameters. The command keyword is separated from the first parameter by a blank space. Use a semicolon (;) to separate multiple commands as shown below:

```
*RST; *STB?; *IDN?
```

SCPI Parameter Type

The SCPI language defines four different data formats to be used in program messages and response messages: numeric, discrete, Boolean, and arbitrary block.

Numeric Parameters

Commands that require numeric parameters will accept all commonly used decimal representations of numbers including optional signs, decimal points, and scientific notation. Special values for numeric parameters like MINimum and MAXimum are also accepted.

Engineering units using numeric parameters (e.g., MHz or kHz) can also be sent. If only specific numeric values are accepted, the function generator will ignore values which are not allowed and will generate an error message. The following command is an example of a command that uses a numeric parameter:

```
VOLT:AMPL <amplitude>
```

Discrete Parameters

Discrete parameters are used to program settings that have a limited number of values (i.e., FIXed, USER and SEQuence). They have short and long form command keywords. Upper and lowercase letters can be mixed. Query responses always return the short form in all uppercase letters. The following command uses discrete parameters:

```
SOUR:FUNC:MODE {FIXed | USER | SEQuence}
```

Boolean Parameters

Boolean parameters represent a single binary condition that is either true or false. The generator accepts "OFF" or "0" for a false condition. The generator accepts "ON" or "1" for a true condition. The instrument always returns "0" or "1" when a boolean setting is queried. The following command uses a boolean parameter:

```
OUTP:FILT { OFF | ON }
```

The same command can also be written as follows:

```
OUTP:FILT { 0 | 1 }
```

Arbitrary Block Parameters

Arbitrary block parameters are used for loading waveforms into the generator's memory. Depending on which option is installed, the **WX2182** can accept binary blocks up to 16 M bytes (32 M bytes with option -1). The following command uses an arbitrary block parameter that is loaded as binary data:

```
TRAC:DATA#564000<binary_block>
```

Binary Block Parameters

Binary block parameters are used for loading segment and sequence tables into the generator's memory. Information on the binary block parameters is given later in this chapter.

SCPI Syntax and Styles

Where possible, the syntax and styles used in this section follow those defined by the SCPI consortium. The commands on the following pages are broken into three columns; the Keyword, the Parameter Form, Default and HS command equivalent.

The Keyword column provides the name of the command. The actual command consists of one or more keywords, since SCPI commands are based on a hierarchical structure, also known as the tree system. Square brackets ([]) are used to enclose a keyword that is optional when programming the command. Therefore, the **WX2182** will process the command to have the same effect whether the optional node is omitted by the programmer, or not. Letter case in tables is used to differentiate between the accepted short form (upper case) and the long form (upper and lower case).

The Parameter Form column indicates the number and order of a parameter in a command and their legal value. Parameter types are distinguished by enclosing the type in angle brackets (< >). If parameter form is enclosed by square brackets ([]) these are then optional (pay attention to be sure that optional parameters are

consistent with the intention of the associated keywords). The vertical bar (|) can be read as "or" and is used to separate alternative parameter options.

WX2182 Commands

Table 4-1 lists all of the **WX2182** SCPI commands. The commands are arranged in logical groups that provide similar functionality, even if they branch from different hierarchy headers, and make it easier to understand the various commands.

The **WX2182** commands are described in 14 different groups, each describing a different type of operation. The groups are:

- Channel and group control commands
- Run mode commands
- Analog output control commands
- Marker output commands
- Standard waveforms commands
- Arbitrary waveforms commands
- Sequenced waveforms commands
- Advanced sequencing commands
- Modulated waveforms commands
- Pulse waveforms commands
- LAN configuration commands
- System commands

Detailed descriptions of each of the various **WX2182** commands are given as follows. Note that Table 4-1 lists all of the commands that control two channels. For a single-channel version, ignore all of the commands that are irrelevant for a single-channel type.

Table 4-1: Model WX2182 Commands List Summary

Keyword	Parameter Form	Default	Notes
<i>1. Channel and Group Control Commands</i>			
:INSTrument			
[:SElect]	CH1 CH2 1 2	CH1	Select channel for prog
:COUPle			
:OFFSet	0 to n-128 (n = waveform length)	0	Course offset adjustment
:SKEW	-3e-9 to 3e-9	0	Fine skew adjustment
:STATe	OFF ON 0 1	0	
:XINSTrument			
:MODE	MASTer SLAVe	MAST	System configuration
:OFFSet	0 to n (n = waveform length)	0	Multi-instrument offset
:STATe	OFF ON 0 1	0	
<i>2. Run Mode Commands</i>			
:ABORt			Unconditional abort
:ARM			Applies to Event Input
[:SEquence]			
:ECL			Sets ECL level
:LEVel	-5 to +5	1.6	
:SLOPe	POSitive NEGative EITHer	POS	
:TTL			Sets TTL level
:ENABle			Unconditional enable
:INITiate			
:CONTinuous			
:ENABle	SELF ARMed	SELF	
:SOURce	BUS EVENT TRIGger	BUS	Selects enable source
[:STATe]	OFF ON 0 1	1	
:GATE			
[:STATe]	OFF ON 0 1	0	
:TRIGger			Applies to trigger input
[:IMMediate]			Same as *trg
[:SEquence]			
:COUNT	1 to 1,000,000	1	Counted bursts
:DELay	0 to 8e6 (integers divisible by 8)	0	
:ECL			Sets ECL level

Table 4-1: Model WX2182 Commands List Summary (continued)

Keyword	Parameter Form	Default	Notes
:FILTer			
:HPASs			Sets high pass width
:WIDTh	10e-9 to 1	100e-3	
[:STATe]	OFF ON 0 1	0	
:LPASs			Sets low pass width
:WIDTh	10e-9 to 2	1e-3	
[:STATe]	OFF ON 0 1	0	
:HOLDoff	0, 100e-9 to 2	0	0 = Off
[:STATe]	OFF ON 0 1	0	
:LEVel	-5 to +5	1.6	
:MODE	NORMal OVerride	NORM	Normal or retriggerable
:SLOPe	POSitive NEGative EITHer	POS	
:SOURce			
[:ADVance]	EXTernal BUS TIMer EVENt	EXT	Selects trigger source
:TIMer			
:MODE	TIME DELay	TIM	
:DELay	152 to 8e6 (integers divisible by 8)	32,768	Stop to start delay
:TIME	100e-9 to 20	15e-6	
:TTL			Sets TTL level
3. Analog Output Control Commands			
:OUTPut			
:COUPling	DC AC	DC	AC selects RF output
[:STATe]	OFF ON 0 1	0	Toggles output(s) on/off
:SYNC			
:FUNCTion	PULSe WCOMplete	PULS	Selects sync out shape
:POSition			
[:POINt]	0 to 16e6-32 (0 to 32e6-32 with option -1)	0	Programs sync position
:WIDTh	32 to n-32	32	Sync width (Pulse only)
:SOURce	CH1 CH2 1 2	CH1	Sync source
[:STATe]	OFF ON 0 1	0	Toggles sync on/off
[:SOURce]			
:FREQuency			
[:CW]	10e3 to 250e6 MINimum MAXimum	10e6	Std waveforms frequency
:RASTer	10e6 to 2.1e9 MINimum MAXimum	1e9	Arb waveforms frequency
:SOURce	INTernal EXTernal	INT	Selects SCLK source
:DIVider	1 to 256 (integers, 2 ⁿ only)	1	External clock divider
:FUNCTion			
:MODE	FIXed USER SEQuence ASEQuence MODulation PULSe	FIX	Selects function type
:POWer			AC coupled (RF) output
[:LEVel]			
[:AMPLitude]	-5 to 5 MINimum MAXimum	0	AC amplitude in dBm
:ROSCillator			
:SOURce	INTernal EXTernal	INT	
[:EXTernal]			
:FREQuency	10e6 to 100e6	10e6	
:VOLTage			DC coupled output
[:LEVel]			
[:AMPLitude]	50e-3 to 2 MINimum MAXimum	0.5	DC amplitude in volts
:OFFSet	-1.5 to 1.5 MINimum MAXimum	0	DC offset in volts

Table 4-1: Model WX2182 Commands List Summary (continued)

Keyword	Parameter Form	Default	Notes
4. Marker Output Commands			
[:SOURce]			
:MARKer[1 2]			Selects active marker
:DELay	0 to 3e-9	0	Delay from SYNC
[:STATe]	OFF ON 0 1	0	Toggles marker on/off
:POSition	0 to n-4 (n = segment length)	0	Position from start
:WIDTh	4 to n-4 (n = segment length)	4	Marker width
:VOLTage			
[:LEVEl]			
:HIGH	0.5 to 1.25	0.5	Marker high level
:LOW	0 to 0.8	0	Marker low level
5. Standard Waveforms Commands			
[:SOURce]			Shape and controls
:FUNCTion			
:SHAPe	SINusoid TRIangle SQUare RAMP SINC GAUSSian EXPonential NOISE DC	SIN	Standard function shape
:SINusoid			
:PHASe	0 to 360.00	0	
:TRIangle			
:PHASe	0 to 360.00	0	
:SQUare			
:DCYClE	0 to 99.99	50	
:RAMP			
:DELay	0 to 99.99	10	
:TRANSition			
[:LEADing]	0 to 99.99	60	
:TRAIling	0 to 99.99	30	
:SINC			
:NCYClE	4 to 100	10	
:GAUSSian			
:EXPonent	1 to 200	10	
:EXPonential			
:EXPonent	-100 to 100	-10	
:DC			DC coupled only
[:OFFSet]	-1.5 to 1.5	1	

Table 4-1: Model WX2182 Commands List Summary (continued)

Keyword	Parameter Form	Default	Notes
6. Arbitrary Waveforms Commands			
:TRACe			
[:DATA]	<data_array>		Waveform data array
:DEFine	<segment_#>,<320 to 16(32)e6> [<segment_#>,<size>]		Wave name and length
:DELete			
[:NAME]	1 to 16,000		Delete one segment
:ALL			Delete all segments
:POINts?			Query waveform length
:SELect	1 to 16,000	1	
:SOURce	BUS EXTernal	BUS	Toggle control source
:TIMing	COHerent IMMEDIATE	COH	Select timing
7. Sequenced Waveforms Commands			
[:SOURce]			
:SEQuence			
:ADVance	AUTOmatic ONCE STEPPed	AUTO	
:DEFine	<step>,<segment_#>,<loops>,<jump_flag>		
:DELete			
[:NAME]	1 to 1,000		
:ALL			
:JUMP			
[:EVENT]	BUS EVENT	BUS	Toggle jump source
:LENGth	1 to 16,000		Optional definition
:SELect	1 to 1,000		
:SOURce	BUS EXTernal	BUS	Toggle control source
:TIMing	COHerent IMMEDIATE	COH	Jump timing
:ONCe			
:COUNT	1 to 1,000,000		
:SYNC			
:LOCK	<step_number>	1	Sync position
8. Advanced Sequencing Commands			
[:SOURce]			
:ASEQuence			
:ADVance	AUTOmatic ONCE STEPPed	AUTO	
:DEFine	<step>,<sequence_#>,<loops>,<jump_flag>		
:DELete			Deletes table
:LENGth	1 to 1,000		Optional definition
:ONCe			
:COUNT	1 to 1,000,000		
:SYNC			
:LOCK	<sequence_number>	1	Sync position

Table 4-1: Model WX2182 Commands List Summary (continued)

Keyword	Parameter Form	Default	Notes
<i>9. Modulated Waveforms Commands</i>			
[:SOURce]			
:MODulation			
:TYPE	OFF AM FM SWEep	OFF	
:CARRier			
[:FREQuency]	10e3 to 250e6	1e6	
:FUNCTion	SINusoidal TRIangle SQUare	SIN	
:AM			
:FUNCTion			
:SHAPe	SINusoid TRIangle SQUare RAMP	SIN	
:INTernal			
:FREQuency	10e-3 to 1e6	1e3	Maximum Carrier to internal freq ration is 1e6
:DEPTH	0 to 100	50	
:FM			
:DEVIation	10e-3 to 100e6	100e3	
:FUNCTion			
:SHAPe	SINusoid TRIangle SQUare RAMP	SIN	
:FREQuency	10e-3 to 350e3	10e3	
:MARKer			
[:FREQuency]	10e3 to 250e6	505e3	
:SWEep			
:FREQuency			
[:STARt]	10e3 to 250.0e6	10e3	
:STOP	10e3 to 250e6	1e6	
:TIME	1.4e-6 to 40.0	1e-3	
:DIRection	UP DOWN	UP	
:SPACing	LINear LOGarithmic	LIN	
:MARKer			
[:FREQuency]	10e3 to 250e6	505e3	
<i>10. Pulse Waveform Commands</i>			
:PULSe			
:CONFIgure	TIME PERCent	TIME	
:DELay	1e-9 to 1s	1e-3	Delay in sec
:PERCent	0 .01 to 99.99	10	Delay in %
:DOUBle			
:DELay	1e-9 to 1s	1e-3	Double delay in sec
:PERCent	0 .01 to 99.99	10	Delay in %
:LEVEl			
[:CONTRol]	HLOW AOFFset POSitive NEGative	HLOW	
:HIGH	-2.450 to 2.5	1	
:LOW	-2.5 to 2.450	0	
:AMPLitude	50e-3 to 2 MINimum MAXimum	0.5	Amplitude in V
:OFFSet	-1.5 to 1.5 MINimum MAXimum	0	DC offset in volts

Table 4-1: Model WX2182 Commands List Summary (continued)

Keyword	Parameter Form	Default	Notes
<i>10. Pulse Waveform Commands (Continued)</i>			
:MODE	SINGle DELayed DOUBle	SING	
:POLarity	NORMal COMPlément INVerted	NORM	
:PERiod	80e-9 to 1e6 (80e-9 to 2e6 with option -1)	10e-3	
:TRANsition			
[:STATe]	FAST LINear SYMMetrical	FAST	Transition mode
[:LEADing]	1e-9 to 100e-3	1e-3	Rise time in sec
:PERCent	0 .01 to 99.99	10	Rise time in %
:TRAILing	1e-9 to 100e-3	1e-3	Fall time in sec
:PERCent	0 .01 to 99.99	10	Fall time in %
:WIDTh	1e-9 to 1s	2e-3	Width in sec
:PERCent	0 .01 to 99.99	20	Width in %
<i>11. LAN Configuration Commands</i>			
:SYSTem			
:IP			
[:ADDReSS]	<IP_address>		
:MASK	<mask>		
:GATeway	<gate_way>		
:BOOTp	OFF ON 0 1	0	
HOSTname:	<host_name>		
:KEEPlive			
:STATe	OFF ON 0 1	1	
:TIMEout	2 to 300	45	
:PROBes	2 to 10	2	
<i>12. Store/Recall Commands</i>			
:SYSTem			
:STORe			
:CELL	1 to 9	1	
:CLear			Clears memory cell
:CONFig	SETup WAVE ALL	ALL	
:TARGet	INTernal USB	INT	
:UPDate			
:RECall			
:CELL	1 to 9	1	
:TARGet	INTernal USB	INT	
:UPDate			
<i>14. System Commands</i>			
:RESet			
:SYSTem			
:ERRor?			
:VERSion?			
:IINFormation			
:CALibration?			
:MODEl?			
:SERial?			
:HARDware?			

Table 4-1: Model WX2182 Commands List Summary (continued)

Keyword	Parameter Form	Default	Notes
<i>14. Common Commands</i>			
*RST			Reset to factory defaults
*TRG			Trigger
*OPC?			Query operation complete
*STB?			Query instrument status byte
*IDN?			Query instrument identity
*OPT?	116 for 1 ch, 16M; 132 for 1 ch, 32M; 216 for 2 ch, 16M; 232 for 2 ch, 32M		Query instrument option

Channel & Group Control Commands

Commands that are listed in Table 4-2 control parameters that group and synchronize two or more channels, as well as their relative offset and skew parameters. Factory defaults after *RST are shown in the Default column. Parameter range and low and high limits are listed, where applicable.

Note the command *inst ch1 / ch2*. The default parameter is *ch1*, which means that commands that are sent to the WX2182 affect channel 1 settings only. Select the *inst ch2* parameter if you want to program channel 2 parameters.



Tip

The Model WX2181 has only one output channel and therefore, the command *inst:sel* is not required for correct programming sequences however, for the Model WX2182, it is mandatory to select the proper channel before commands are being streamed to the product. The WX2182 has two completely separate channels and therefore, each of the commands that are listed in the following tables should be preceded by the *inst:sel 1* or *inst:sel 2* commands.

There are some commands that affect both channels simultaneously and do not require that a specific channel is selected; these are LAN configuration commands, Store/recall commands, System Commands and common commands.

Note that the two channels can operate in synchronized mode where both channels share the same output waveform type, the same run mode option and a common sample clock feed. In this case, the sample clock value should be programmed for channel 1 only but the other commands still require the use of *inst:sel* command.

Table 4-2: Channel & Group Control Commands Summary

Keyword	Parameter Form	Default	Notes
:INSTrument			
[:SELect]	CH1 CH2 1 2	CH1	Select channel for prog
:COUPle			
:OFFSet	0 to n-128 (n = waveform length)	0	Course offset adjustment
:SKEW	-3e-9 to 3e-9	0	Fine skew adjustment
:STATe	OFF ON 0 1	0	
:XINSTrument			
:MODE	MASTer SLAVe	MAST	System configuration
:OFFSet	0 to n (n = waveform length)	0	Multi-instrument offset

:STATe	OFF ON 0 1	0	
--------	------------------	---	--

:INSTrument{1|2}(?)

Description

This command will set the active channel for future programming command sequences. Subsequent commands affect the selected channel only.

Parameters

Range	Type	Default	Description
1-2	Discrete	1	Sets the active channel for programming from remote.

Response

The WX2182 will return 1, or 2 depending on the present active channel setting.

:INSTrument:COUPlE:OFFSet{<ch_offset>}(?)

Description

When couple state is ON, this command sets or queries the offset between the start phase of the master channel (CH1) and the start phase of the slave channel (CH2).

Parameters

Name	Range	Type	Default	Description
<ch_offset>	0 to n-128	Numeric (integer only)	0	Defines a coarse phase offset between two channels. When offset is applied to one channel it is always in reference to the other channel. For example, offsetting channel 2 by 1024 points and then offsetting channel 1 by 2048 points will cause channel 2 waveform to lag channel 1 by 1024 points. Offset can be programmed in increments of 8 sample clock periods. The two channels must have the same waveform length in order for the phase offset parameter to be meaningful. Offset range is programmable in units of waveform points from 0 to the maximum length of the channel waveform, less 128 waveform points. Fine adjustment of phase offset between channels is achieved using the <i>inst:coup:skew</i> command. Note that this parameter is operating in conjunction with the continuous run mode and only when the two channels are synchronized.

Response

The WX2182 will return the present value of the coarse offset setting in units of waveform points.

:INSTrument:COUPlE:SKEW{<ch_skew>}(?)

Description

When couple state is ON, this command sets or queries the skew between the two channels. Skew defines fine offset between channels in units of time. Only channel 2 has the skew is computed in reference to channel 1. The *inst:coup:skew* command is applied automatically to channel 2 and does not require that you use the *inst:sel 2* command.

Parameters

Name	Range	Type	Default	Description
------	-------	------	---------	-------------

<ch_skew> -3e-9 to 3e-9 Numeric 0 Defines channel 2 skew in reference to channel 1. The two channels must have the same waveform length in order for the phase skew parameter to be meaningful. The skew range is programmable in units of seconds throughout the range of ± 3 ns. Coarse adjustment of phase offset between channels is achieved using the *inst:coup:offs* command. Note that this parameter is operating in conjunction with the continuous run mode and only when two or more channels are synchronized.

Response

The **WX2182** will return the present value of the skew setting in units of seconds.

:INSTrument:COUPle:STATe{OFF|ON|0|1}(?)

Description

Sets or queries the couple state of the synchronized channels. Use this command to cause the two channels to synchronize. Following this command, the sample clock of channel 1 will feed the channel 2 and the start phase of the channel 2 channels will lock to the channel 1 waveform.

Parameters

Range	Type	Default	Description
0-1	Discrete	0	Sets the couple mode on and off

Response

The **WX2182** will return 1 if the couple state is ON, or 0 if the couple state is OFF.

:XINStrument:MODE{MASTER|SLAVE}

Description

Use this command to define master and slave instruments. This command affects the system only when two instruments are hooked to a LAN network, synchronization cable is attached to the rear panel of both instruments and are intended to operate in synchronized mode.

Parameters

Name	Type	Default	Description
<MASTER>	String	MAST	Defines the active instrument as the controlling master in a two-instrument system. Only channel 1 in each instrument can be defined as master; the rest of the channels are defined as slaves.
<SLAVE>	String		Defines the active instrument as a slave in a two-instrument system.

Response

The **WX2182** will return MAST or SLAV depending on the present mode setting.

:XINStrument:OFFSet{<instrument_offset>}(?)

Description

When couple state is ON, this command sets or queries the offset between the start phase of the slave instrument in reference to the master channel.

Parameters

Name	Range	Type	Default	Description
<instrument_ offset>	0 to n	Numeric (integer only)	0	Defines a coarse phase offset between two instruments. When offset is applied to one instrument it is always in reference to the other instrument. For example, offsetting the slave instrument by 1024 points and then offsetting master instrument by 2048 points will cause slave waveform to lag the master waveform by 1024 points. Offset can be programmed in increments of 8 sample clock periods.

Response

The **WX2182** will return the present value of the coarse offset setting in units of waveform points (SCLK periods).

:XINSTrument:COUPlE:STATe{OFF|ON|0|1}{?}

Description

Sets or queries the couple state of the synchronized instruments. Use this command to synchronize two instruments to a single sample clock reference. This command can be used only after defining one instrument as master (xins:mode mast) and the other as slave (xins:mode slav). Use the xins:coup:stat 1 on the master instrument only. The reference sample clock is generated by the master instrument

Parameters

Range	Type	Default	Description
0-1	Discrete	0	Sets the two-instruments couple on and off

Response

The **WX2182** will return 1 if the couple is ON, or 0 if the couple is OFF.

Run Mode Commands

The Run Mode Commands group is used to synchronize device actions with external or internal events.

The **WX2182** can operate in two basic modes: self-armed and armed-for -enable.

Self-armed mode is the default option where waveforms are generated at the output connector, immediately after the output function has been selected.

In armed mode, the **WX2182** requires an enable command or an external analog event to cause the output to generate waveforms and when already armed, a remote abort command will cease the generation of the signal and the output will return to a known idle state. This mode is very useful to control how and when the waveform will start and stop for systems that require precise control of waveform timing.

Other commands in this group control the basic run modes of the waveform generator. The available run modes are:

- continuous, where waveforms are generated continuously at the output connector and triggered and gated.
- conditional, where waveforms are generated on conditional events, regardless if they are generated internally from a built-in trigger generator or applied externally to the trigger and event inputs.

Also use the commands in this group to control the sensitivity, the polarity and other conditions of which external signals will affect the trigger and event inputs.

A built-in counter is available to control a precise number of cycles for applications requiring a burst of waveforms that follows a trigger event.

Additional information on the run mode options and how the generator behaves under the various run mode options is given in Chapter 3. Factory defaults after *RST are shown in the default column. Parameter low and high limits are given where applicable. Use the commands in Table 4-3 to set up the **WX2182** run mode and for setting up the input conditions for the various trigger inputs.

Table 4-3: Run Mode Commands Summary

Keyword	Parameter Form	Default	Notes
:ABORt			Unconditional abort
:ARM			Applies to Event Input
[:SEQuence]			
:ECL			Sets ECL level
:LEVel	-5 to +5	1.6	
:SLOPe	POSitive NEGative EITHer	POS	
:TTL			Sets TTL threshold level
:ENABle			Unconditional enable
:INITiate			
:CONTinuous			
:ENABle	SELF ARMed	SELF	
:SOURce	BUS ENENT TRIGger	BUS	Selects enable source
[:STATe]	OFF ON 0 1	1	
:GATE			
[:STATe]	OFF ON 0 1	0	
:TRIGger			Applies to trigger input
[:IMMediate]			Same as *trg
[:SEQuence]			
:COUNT	1 to 1,000,000	1	Counted bursts
:DELay	0 to 8e6 (integer divisible by 8)	0	0 = OFF
:ECL			Sets ECL level
:FILTer			
:HPASs			Sets high pass width
:WIDTh	10e-9 to 2	100e-3	
[:STATe]	OFF ON 0 1	0	
:LPASs			Sets low pass width
:WIDTh	10e-9 to 2	1e-3	
[:STATe]	OFF ON 0 1	0	
:HOLDoff	0, 100e-9 to 1	0	0 = Off
[:STATe]	OFF ON 0 1	0	
:LEVel	-5 to +5	1.6	
:MODE	NORMal OVERride	NORM	Normal or retriggerable
:SLOPe	POSitive NEGative EITHer	POS	
:SOURce			
[:ADVance]	EXTernal BUS TIMer EVENT	EXT	Selects trigger source
:TIMer			
:MODE	TIME DELay	TIME	
:DELay	152 to 8e6 (integers divisible by 8)	32,768	Stop to start delay
:TIME	100e-9 to 20	15e-6	
:TTL			Sets TTL level

:ABORt

Description

Use this command for an immediate and unconditional termination of the output waveform. A prerequisite condition that makes this command effective is to place the **WX2182** in continuous and armed run mode and then enable the output using the *enab* command. This command is also effective in all triggered run mode options. Following the abort command, the **WX2182** stops generating waveforms and the output starts generating an idle waveform that could be one of: dc, first waveform in a sequence or first sequence in an advanced sequence scheme. The abort command ignores the *trac:sel:tim* and the *sequ:sel:tim* settings. The resulting scenarios of the abort command are summarized in the Run Modes Summary table in Chapter 3.

:ARM:ECL

Description

Use this command to set the event input to accept ecl (negative) signals. The threshold level is automatically set to -1.3 V, which is the mid-level for negative ecl logic. Other related commands are: *arm:tll* to set the threshold level for TTL signals and *arm:lev* to program a threshold level between -5 V to 5 V. Note that commands that start with *ARM* affect the conditions for the event input only.

:ARM:LEVel<level>(?)

Description

This command programs the threshold level for the event input signals. Other related commands are: *arm:tll* to set the threshold level for TTL signals and *arm:ecl* to program a threshold level for ECL signals. Note that commands that start with *ARM* affect the conditions for the event input only.

Parameters

Name	Range	Type	Default	Description
<level>	-5 to 5	Numeric	0	Programs the threshold level for the invent input.

Response

The **WX2182** will return the present threshold level setting in units of volts.

:ARM:SLOPe{POSitive|NEGative|EITHer}(?)

Description

Use this command to define the edge that will affect the event input. Positive going transitions will affect the event input when the POS option is selected. Negative transitions will affect the event input when the NEG option is selected. Both transitions will affect the event input when the EITH option is selected. Note that commands that start with *ARM* affect the conditions for the event input only.

Parameters

Name	Type	Default	Description
POSitive	Discrete	POS	Selects the positive going edge.
NEGative	Discrete		Selects the negative going edge.
EITHer	Discrete		Selects both positive and negative going edges.

Response

The **WX2182** will return POS, NEG, or EITH depending on the current slope setting.

:ARM:TTL

Description

Use this command to set the event input to accept ttl signals. The threshold level is automatically set to 1.6 V, which is the mid-level for ttl logic. Other related commands are: *arm:ecl* to set the threshold level for ECL signals and *arm:lev* to program a threshold level between -5 V to 5 V. Note that commands that start with *ARM* affect the conditions for the event input only.

:ENABLE

Description

Use this command for an immediate and unconditional generation of the selected output waveform. Prerequisite condition that makes this command effective is to place the **WX2182** in continuous and armed run mode. This command has no effect in triggered run mode options. Generation of the output waveform can be terminated abruptly using the *abor* command. Following the abort command, the **WX2182** stops generating waveforms and the output starts generating an idle waveform that could be one of: dc, first waveform in a sequence or first sequence in an advanced sequence scheme. The resulting scenarios of the enable and abort commands are summarized in the Run Modes Summary table in Chapter 3.

:INITiate:CONTinuous:ENABLE{SELF|ARMed}(?)

Description

Use this command to set or query the state of the enable mode. This command is effective in continuous mode only and has no effect when the *init:cont 0* or *init:gate 1* (triggered or gated modes) were executed.

Parameters

Name	Type	Default	Description
SELF	Discrete	SELF	In continuous run mode, waveforms are generated at the output connector as soon as they are selected.
ARMed	Discrete		The WX2182 generates waveforms at the output connector only after an <i>enab</i> command is executed. For an immediate and unconditional termination of the output waveform use the <i>abor</i> command.

Response

The **WX2182** will return SELF, or ARM depending on the current enable mode setting.

:INITiate:CONTinuous{1|0|ON|OFF}(?)

Use this command to set or query the gated run mode status.

Parameters

Range	Type	Default	Description
1-0	Discrete	1	“1” selects the continuous run mode. “0” disables the continuous operation and forces the triggered run mode. Trigger signal is applied to the trigger input only and output waveforms will be generated only when the trigger signal is valid and true. The slope and level of the trigger input are programmable.

Response

The **WX2182** will return 1 or 0 depending on the current run mode setting.

:INITiate:CONTInuous:ENABle:SOURce{BUS|EVENT|TRIGger}(?)

Description

Use this command to set or query the source of the enable signal. This command is effective in continuous mode only and has no effect when the *init:cont 0* or *init:gate 1* (triggered or gated modes) were executed.

Parameters

Name	Type	Default	Description
BUS	Discrete	BUS	Defines the source of the enable signal as a remote command sent over one of the interfacing controllers (USB, LAN or GPIB). Signals at the event input will be ignored. In continuous run mode, waveforms are generated at the output connector as soon as a remote enable command is executed. For an immediate and unconditional termination of the output waveform use the <i>abor</i> command.
EVENT	Discrete		Defines the source of the enable signal as the event input connector. Remote enable commands will be ignored. In continuous run mode, waveforms are generated at the output connector as soon as a valid event signal is sensed at the event input connector. For an immediate and unconditional termination of the output waveform use the <i>abor</i> command.
TRIGger	Discrete		Defines the source of the enable signal as the front panel trigger input connector. Remote enable commands will be ignored. In continuous run mode, waveforms are generated at the output connector as soon as a valid event signal is sensed at the event input connector. For an immediate and unconditional termination of the output waveform use the <i>abor</i> command.

Response

The **WX2182** will return BUS, EVEN, or TRIG depending on the current enable source setting.

:INITiate:GATE{0|1|OFF|ON}(?)

Description

Use this command to set or query the gated run mode status.

Parameters

Range	Type	Default	Description
0-1	Discrete	0	"0" forces the continuous run mode. "1" selects the gated run mode. Gating signal is applied to the trigger input only and output waveforms will be generated only when the gate signal is valid and true. The slope and level of the gating entry are programmable.

Response

The **WX2182** will return 1 or 0, depending on the current run mode setting.

:TRIGger

Description

Use this command to trigger the **WX2182** from a remote computer. You may also use the common command *trg that will have the same effect. This command will affect the **WX2182** only after you program the instrument to operate in triggered run mode (*init:cont 0*) and select the trigger source BUS option. Note that commands that start with *TRIG* affect the conditions for the trigger input only.

:TRIGger:COUNT<burst>(?)

Description

Use this command to set or query the burst counter setting. This command is effective only when the **WX2182** is programmed to operate in triggered run mode (*init:cont 0*).

Parameters

Name	Range	Type	Default	Description
<burst>	1 to 1M	Numeric (integer only)	1	Programs the burst count. Following a valid trigger signal, the WX2182 generates a pre-programmed number of waveform cycles and then resumes an idle state. The counted burst can be initiated using one of the following: front panel MANUAL push button, remote command such as *trg, or a transition at the trigger input connector.

Response

The **WX2182** will return the present burst count value.

:TRIGger:DELAy<interval>(?)

Description

Use this command to set or query the trigger delay setting. The trigger delay parameter defines the interval that will elapse from a valid trigger signal to the initiation of the first output waveform. Trigger delay is turned off using the *trig:del 0* command. The trigger delay command affects the generator only after it has been programmed to operate in triggered run mode. Modify the **WX2182** to triggered run mode using the *init:cont 0* command. The delay interval is programmed in sample clock period increments.

Parameters

Name	Range	Type	Default	Description
<interval>	0 to 8e6	Numeric (integer only)	0	"0" turns OFF the delayed trigger function. Delay is programmed in sample clock period increments, so expect the delay time to change if you modify your sample clock setting. Program the delay interval using integer numbers divisible by 8 only.

Response

The **WX2182** will return the present trigger delay interval value.

:TRIGger:ECL

Description

Use this command to set the trigger input to accept ecl (negative) signals. The threshold level is automatically set to -1.3 V, which is the mid-level for negative ecl logic. Other related commands are: *trig:ttl* to set the threshold level for TTL signals and *trig:lev* to program a threshold level between -5 V to 5 V.

:TRIGger:FILTer:HPASs:WIDTh<width>(?)

Description

Use this command to set or query the trigger high pass filter value. Trigger signal having pulse width below the programmed settings will not trigger the generator. The trigger filter has three options: high pass filter, which will trigger the **WX2182** only if the width is larger than the programmed value, low pass filter, which will trigger the generator only if the width is smaller than the programmed value, and window pass filter, which will trigger the generator only if the width is within a certain range specified by the high and low pass filters.

The *trig:fil:hpas:wid* command sets a high pass threshold for the trigger signal and the *trig:fil:lpas:wid* command sets a low pass threshold for the trigger signal. If both the high and low pass filters are turned on, signals having a pulse width smaller than the low pass setting and larger than the high pass setting will trigger the generator.

Parameters

Name	Range	Type	Default	Description
<time>	10e-9 to 2	Numeric	100e-3	Programs the high pass pulse width value in units of second.

Response

The **WX2182** will return the present high pass value in units of seconds.

:TRIGger:FILTer:HPASs{OFF|ON|0|1}(?)

Description

Use this command to set or query the status of the high pass filter.

Range	Type	Default	Description
0-1	Discrete	0	Turns the high pass filter on and off.

Response

The **WX2182** will return 0, or 1 depending on the present high pass filter state.

:TRIGger:FILTer:LPASs:WIDTh<width>(?)

Description

Use this command to set or query the trigger low pass filter value. Trigger signal having pulse width above the programmed setting will not trigger the generator. The trigger filter has three options: high pass filter, which will let trigger the **WX2182** only if the width is larger than the programmed value, low pass filter, which will trigger the generator only if the width is smaller than the programmed value, and window pass filter, which will trigger the generator only if the width is within a certain range specified by the high and low pass filters.

The *trig:fil:hpas:wid* command sets a high pass threshold for the trigger signal and the *trig:fil:lpas:wid* command sets a low pass threshold for the trigger signal. If both the high and low pass filters are turned on, signals having pulse width smaller than the low pass setting and larger than the high pass setting will trigger the generator.

Parameters

Name	Range	Type	Default	Description
<time>	10e-9 to 2	Numeric	100e-3	Programs the high pass pulse width value in units of seconds.

Response

The **WX2182** will return the present high pass value in units of seconds.

:TRIGger:FILter:LPASs{OFF|ON|0|1}(?)

Description

Use this command to set or query the status of the low pass filter.

Range	Type	Default	Description
0-1	Discrete	0	Turns the low pass filter on and off.

Response

The **WX2182** will return 0 or 1 depending on the current low pass filter state.

:TRIGger:HOLDoff<holdoff>(?)

Description

Use this command to set or query the trigger holdoff period. The trigger holdoff filter defines a period that starts with the first valid trigger input and ends with the holdoff setting of which all triggers within this range, valid or not, are ignored, but the first valid signal after the holdoff range will cause the **WX2182** to generate a waveform.

Parameters

Name	Range	Type	Default	Description
<time>	10e-9 to 1	Numeric	100e-3	Programs the trigger holdoff period in units of second.

Response

The **WX2182** will return the present holdoff value in units of second.

:TRIGger:HOLDoff{OFF|ON|0|1}(?)

Description

Use this command to set or query the status of the holdoff filter.

Range	Type	Default	Description
0-1	Discrete	0	Turns the holdoff filter on and off.

Response

The **WX2182** will return 0 or 1 depending on the present holdoff filter state.

:TRIGger:LEVel<level>(?)

Description

Use this command to program or query the threshold level for the trigger input signals. Other related commands are: `trig:ttl` to set the threshold level for TTL signals and `trig:ec/` to program a threshold level for ECL signals. Note that commands that start with `trig` affect the conditions for the trigger input only.

Parameters

Name	Range	Type	Default	Description
<level>	-5 to 5	Numeric	0	Programs the threshold level for the trigger input.

Response

The **WX2182** will return the present threshold level setting in units of volts.

:TRIGger:MODE{NORMal|OVERride}(?)

Description

Use this command to define or query the trigger mode. In normal mode, the first trigger activates the output and consecutive triggers are ignored for the duration of the output waveform. In override mode, the first trigger activates the output and consecutive triggers restart the output waveform, regardless if the current waveform has been completed or not.

Parameters

Name	Type	Default	Description
NORMal	Discrete	NORM	Selects the normal trigger mode.
OVERride	Discrete		Selects the override trigger mode.

Response

The **WX2182** will return NORM or OVER, depending on the current trigger mode setting.

:TRIGger:SLOPe{POSitive|NEGative|EITher}(?)

Description

Use this command to define or query the edge that will affect the trigger input. Positive going transitions will affect the trigger input when the POS option is selected. Negative transitions will affect the trigger input when the NEG option is selected and both positive and negative transitions will affect the trigger input when the EIT option is selected. Note that commands that start with *ARM* affect the conditions for the event input only.

Parameters

Name	Type	Default	Description
POSitive	Discrete	POS	Selects the positive going edge.
NEGative	Discrete		Selects the negative going edge.
EITher	Discrete		Selects both positive and negative going edges.

Response

The **WX2182** will return POS, NEG, or EIT depending on the current slope setting.

:TRIGger:SOURce:ADVance{EXTernal|BUS|TIMer|EVENT}(?)

Description

Use this command to set or query the source of the trigger event that will stimulate the **WX2182** to generate waveforms. The source advance command will affect the generator only after it has been programmed to operate in trigger run mode. Modify the **WX2182** to trigger run mode using the *init:cont off* command.

Parameters

Name	Type	Default	Description
------	------	---------	-------------

EXTernal	Discrete	EXT	Selects the TRIG IN connector as the input source. The front panel MANUAL can be used in case external triggers are not available. All other inputs are ignored.
BUS	Discrete		Selects the remote controller as the trigger source. Only software commands are accepted; TRIG IN, Event IN and manual triggers are ignored.
TIMer	Discrete		Activates the built in internal trigger generator. BUS and external trigger are ignored. The period of the internal trigger is programmable and can be used to replace an external trigger source.
EVENT	Discrete		Selects the Event IN connector as the input source. All other inputs are ignored.

Response

The **WX2182** will return EXT, BUS, TIM, or EVEN depending on the selected trigger source advance setting.

:TRIGger:TIMer:MODE{TIME|DELAy}(?)

Description

Use this command to set or query the mode that the internal trigger generator will operate. Timed defines start-to-start triggers and Delayed defines end-to-start triggers. The timer commands will affect the generator only after it has been programmed to operate in timer mode. Modify the **WX2182** to trigger run mode using the *init:cont off* command and program the internal timer using the *trig:tim* command.

Parameters

Name	Type	Default	Description
TIME	Discrete	TIME	Selects the timed internal trigger generator. The generator will automatically issue periodical triggers that stimulate the output to generate single cycle waveforms. The periods are programmed in units of seconds from waveform start to waveform start.
DELAy	Discrete		Selects the delayed internal trigger generator. The generator will automatically issue periodical triggers that stimulate the output, to generate single cycle waveforms. The periods are programmed in units of waveform points from waveform end to waveform start.

Response

The **WX2182** will return TIME or DEL depending on the selected internal trigger timer mode setting.

:TRIGger:TIMer:DELAy<timer>(?)

Description

Use this command to set or query the delay setting of the internal delayed trigger generator. This value is associated with the internal trigger run mode only and has no affect on other trigger modes. The internal delayed trigger generator is a free-running oscillator, asynchronous with the frequency of the output waveform. The timer intervals are measured from waveform stop to waveform start.

Parameters

Name	Range	Type	Default	Description
<timer>	152 to 8e6	Numeric	15e-6	Programs the internal delayed trigger generator period

in units of waveform points. Program the value using integers divisible by 8.

Response

The **WX2182** will return the present internal delayed trigger period value in units of waveform points.

:TRIGger:TIMer:TIME<timer>(?)

Description

Use this command to set or query the period of the internal timed trigger generator. This value is associated with the internal trigger run mode only and has no affect on other trigger modes. The internal trigger generator is a free-running oscillator, asynchronous with the frequency of the output waveform. The timer intervals are measured from waveform start to waveform start.

Parameters

Name	Range	Type	Default	Description
<timer>	100e-6 to 20	Numeric	15e-6	Programs the internal timed trigger generator period in units of seconds.

Response

The **WX2182** will return the present internal timed trigger period value in units of seconds.

:TRIGger:TTL

Description

Use this command to set the trigegr input to accept ttl signals. The threshold level is automatically set to 1.6 V, which is the mid-level for ttl logic. Other related commands are: *trig:ecl* to set the threshold level for ECL signals and *trig:lev* to program a threshold level between -5 V to 5 V.

Analog Output Control Commands

The Analog Output Control Commands group is used for programming the characteristics of the output waveform. Notice that there are two main subsystems that control output functions: OUTPUT and SOURCE. The output subsystem commands control parameters that are related directly to the output terminals (main and sync outputs) and the source subsystem commands program parameters that control waveform shape, frequency and level.

The **WX2182** has two output options: DC and AC. Although the titles hint about adding or removing a dc blocking capacitor at the output path, in fact, the **WX2182** has two completely separate amplifier passages: one is dc coupled and one is ac coupled. There is also major difference how the outputs behave in time and frequency domains. The DC is optimized for best pulse response at higher amplitude levels, but at the cost of reduced bandwidth. The AC path is mainly used for RF applications where output bandwidth and flatness are optimized, but the control of dc offset bias is not available.

Other commands in this group control the SYNC parameters: type, position and width. Also use the commands in this group to control the shape of the output waveform, its frequency, its output level (or power) and the source of the clock reference.

Additional information on the various output functions and how the generator generates the different waveforms is given in Chapter 3. Factory defaults after *RST are shown in the default column. Parameter low and high limits are given where applicable. Use the commands in Table 4-4 to set up the **WX2182** output waveforms, and their associated characteristics.

Table 4-4: Run Mode Commands Summary

Keyword	Parameter Form	Default	Notes
:OUTPut			
:COUPling	DC AC	DC	AC selects RF output
[:STATe]	OFF ON 0 1	0	Toggles output(s) on/off
:SYNC			
:FUNction	PULSe WCOMplete	PULS	Selects sync out shape
:POSition			
[:POINt]	0 to 16e6-32 (0 to 32e6-32 with option -1)	0	Programs sync position
:WIDTh	32 to n-32	32	Sync width (Pulse only)
:SOURce	CH1 CH2 1 2	CH1	Sync source
[:STATe]	OFF ON 0 1	0	Toggles sync on/off
[:SOURce]			
:FREQuency			
[:CW]	10e3 to 250e6 MINimum MAXimum	10e6	Std waveforms frequency
:RAsTER	10e6 to 2.1e9 MINimum MAXimum	1e9	Arb waveforms frequency
:SOURce	INTernal EXTernal	INT	Selects SCLK source
:DIVider	1 to 256 (integers, 2 ⁿ only)	1	External clock divider
:FUNction			
:MODE	FIXed USER SEQUENCE ASEQUENCE MODulation PULSe	FIX	Selects function type
:POWer			AC coupled (RF) output
[:LEVel]			
[:AMPLitude]	-5 to 5 MINimum MAXimum	0	AC amplitude in dBm
:ROSCillator			
:SOURce	INTernal EXTernal	INT	
[:EXTernal]			
:FREQuency	10e6 to 100e6	10e6	
:VOLTagE			DC coupled output
[:LEVel]			
[:AMPLitude]	50e-3 to 2 MINimum MAXimum	0.5	DC amplitude in volts
:OFFSet	-1.5 to 1.5 MINimum MAXimum	0	DC offset in volts

:OUTPut:COUPLing{DC|AC}(?)

Description

Use this command to set or query the type of the output amplifier that will be placed between the DAC and the output connectors. The **WX2182** has three separate amplifiers for the output path: the DC-coupled amplifier allows control of amplitude and offset while the AC-coupled path provides control over RF power only.

Parameters

Name	Type	Default	Description
DC	Discrete	DC	Selects a DC-coupled amplifier path for the output amplifier. Use the <i>volt</i> and <i>volt:offs</i> commands to control output amplitude and offset.
AC	Discrete		Selects the AC-coupled path for the output amplifier. Use the <i>pow</i> command to control RF power at the output connector.

Response

The **WX2182** will return DC or AC depending on the current output coupling setting.

:OUTPut{OFF|ON|0|1}(?)

Description

This command will set or query the output state of the **WX2182**. Note that for safety, the outputs always default to off, even if the last instrument setting before power down was on. Also note that the off setting leaves the output connector connected to the amplifier path but no signal is being generated while in the off state.

Parameters

Range	Type	Default	Description
0-1	Discrete	0	Sets the output on and off

Response

The **WX2182** will return 1 if the output is on, or 0 if the output is off.

:OUTPut:SYNC:FUNcTION{PULSe|WCOMPLete}(?)

Description

Use this command to set or query the shape of the sync pulse. Pulse output can be programmed for position and width and the WCOM (wave complete) as fixed and cannot be moved from its origin.

Parameters

Name	Type	Default	Description
PULSe	Discrete	PULS	Selects the pulse shape as the output waveform for the sync output. The minimum pulse width is 32 sample clock periods. However, the width can be expanded to the full length of the waveform in increments of 32 points. Program the sync pulse width using the <i>outp:sync:wid</i> command and its relative position to the start of the waveform using the <i>outp:sync:pos</i> command.
WCOMplete	Discrete		This will select the waveform complete pulse option.

The sync output will transition high at the beginning of the waveform and will return to low after the waveform cycle has been completed. Width and position control of the sync pulse is not available when this option is selected.

Response

The **WX2182** will return PULS or WCOM, depending on the selected SYNC waveform function.

:OUTPut:SYNC:POSition<position>(?)

Description

This command will program the **WX2182** SYNC position. This command is active in arbitrary (USER) mode only.

Parameters

Name	Range	Type	Default	Description
<position>	0 to 16e6-32	Numeric (Integer only)	0	Will set the SYNC position in waveform points. The sync position can be programmed in increments of 32 points to the maximum length of the waveform providing that the number is divisible by 32. The range is extended to 32e6-32 when option -1 is installed; 16e6 memory size is standard.

Response

The **WX2182** will return the present SYNC position value.

:OUTPut:SYNC:WIDTh<width>(?)

Description

This command will program the **WX2182** SYNC width. This command is active in arbitrary (USER) mode only.

Parameters

Name	Range	Type	Default	Description
<width>	32 to n-32	Numeric (Integer only)	32	Will set the SYNC width in waveform points. The sync width can be programmed in increments of 32 points minimum. "n" designates the length of the segment.

Response

The **WX2182** will return the present SYNC width value.

:OUTPut:SYNC:SOURce{CH1|CH2|1|2}(?)

Description

Use this command to set or query the source of the sync pulse. There is only one sync output connector on the front panel and this connector can be programmed to source from channel 1 or channel 2 waveforms. This command does not affect the single channel version. Channel 1 position and width and channel 2 position and width are programmed individually for each channel.

Parameters

Name	Type	Default	Description
CH1 1	Discrete	CH1	This will select channel 1 as the source for generating the sync pulse.
CH2 2	Discrete		Defines channel 2 as the source for generating the sync

pulse.

Response

The **WX2182** will return CH1 or CH2 depending on the selected SYNC source option.

:OUTPut:SYNC{OFF|ON|0|1}(?)

Description

This command will set or query the state of the sync output. Note that for safety, the outputs always default to off, even if the last instrument setting before power down was on. Also note that the off setting leaves the sync output connector connected to the amplifier path, but no signal is being generated while in the off state.

Parameters

Range	Type	Default	Description
0-1	Discrete	0	Sets the output on and off

Response

The **WX2182** will return 1 if the sync output is on, or 0 if the sync output is off.

:FREQuency{<freq>|MINimum|MAXimum}(?)

Description

Use this command to set or query the frequency of the standard waveforms in units of hertz (Hz). This parameter has no effect on arbitrary waveforms.

Parameters

Name	Range	Type	Default	Description
<freq>	10e-3 to 250e6	Numeric	1e6	Will set the frequency of the standard waveform in units of Hz. The frequency command can be used with resolutions up to 8 digits.
<MINimum>		Discrete		Will set the frequency of the standard waveform to the lowest possible frequency (10e3).
<MAXimum>		Discrete		Will set the frequency of the standard waveform to the highest possible frequency (250e6).

Response

The **WX2182** will return the present frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

:FREQuency:RASTer{<sclk>|MINimum|MAXimum}(?)

Description

Use this command to set or query the sample clock frequency of the arbitrary waveform in units of samples per second (Sa/s). This parameter has no effect on standard waveforms.

Parameters

Name	Range	Type	Default	Description
<sclk>	10e6 to 2.1e9	Numeric	1e9	Will set the sample clock frequency of the arbitrary and sequenced waveform in units of Sa/s. The sample clock command can be programmed with resolutions up to 8

		digits.
<MINimum>	Discrete	Will set the sample clock frequency to the lowest possible frequency (10e6).
<MAXimum>	Discrete	Will set the frequency of the standard waveform to the highest possible frequency (2.1e9).

Response

The **WX2182** will return the present sample clock frequency value. The returned value will be in standard scientific format (for example: 1 GHz would be returned as 1e9 – positive numbers are unsigned).

:FREQUENCY:RASTER:SOURCE{INTERNAL|EXTERNAL}(?)

Description

Use this command to select or query the source of the sample clock generator. This command affects all of the waveforms, as the internal clock is removed and external clock is applied. Make sure that a valid clock is applied to the external clock input before you change the option to external, because the generator can not generate waveforms without a valid source of sample clock generator. Note that the internal sample clock generator is unique for each channel however, when an external clock source is selected, the same source is applied to both channels. Use the *freq:rast:sour:div* command for applications that require different sample clock frequencies per channel.

Parameters

Name	Type	Default	Description
INTERNAL	Discrete	INT	Selects the internal clock generator as the main clock source.
EXTERNAL	Discrete		Activates the external sample clock input. A valid signal must be applied from the external signal to the WX2182 for the generator to continue generating waveforms. Observe the input level and limitations before connecting an external signal to the external sample clock input.

Response

The **WX2182** will return INT, or EXT depending on the current sample clock source setting.

:FREQUENCY:RASTER:SOURCE:DIVIDER<divider>(?)

Description

Use this command to set or query the sample clock frequency divider. The same external sample clock signal is fed to both channels, so if different frequencies are required, use the sample clock divider to get different sample clocks to each channel.

Parameters

Name	Range	Type	Default	Description
<sclk>	1 to 256	Numeric (integer only)	1	Will set the external sample clock frequency divider. Except 1 (no divider), all divider values must be integers - (2 ⁿ). Each channel may be programmed separately to have a different divider value.

Response

The **WX2182** will return the present external clock divider value in integer number.

FUNCTION:MODE{FIXed|USER|SEQuence|ASEQuence|MODulation|PULSe}(?)

Description

Use this command to set or query the type of waveform that will be available at the output connector.

Parameters

Name	Type	Default	Description
FIXed	Discrete	FIX	Selects the standard waveform shapes. There is an array of waveforms that is built into the program. You can find these waveform shapes in the standard waveforms section.
USER	Discrete		Selects the arbitrary waveform shapes. Arbitrary waveforms must be loaded to the WX2182 memory before they can be replayed. You can find information on arbitrary waveforms in the appropriate sections in this manual.
SEQuenced	Discrete		Selects the sequenced waveform output. To generate a sequence, you must first download waveform coordinates to different segments and then build a sequence table to generate a complex waveform that is using these segments.
ASEQuenced	Discrete		Selects the advanced sequencing waveform output. To generate a advanced sequences, you must first download waveform coordinates to different segments, use these waveforms to design sequences and then use these sequences to build an advanced sequence table where sequences are sequenced to create an extremely complex waveform.
MODulated	Discrete		Selects the modulated waveforms. There is an array of built-in modulation schemes. However, you can also build custom modulation schemes using the arbitrary function.
PULSe	Discrete		Selects the digital pulse function. The digital pulse function behaves and reacts to the programming sequence as a regular pulse generator, except the waveforms are digitally constructed and generated from the arbitrary memory.

Response

The **WX2182** will return FIX, USER, SEQ, ASEQ, MOD, or PULS depending on the present **WX2182** output function mode setting.

:POWER{<power>|MINimum|MAXimum}(?)

Description

Use this command to set or query the output power. This parameter affects the AC output path only. Use the command *out:coup ac* to modify the output path to ac-coupled. The **WX2182** displays a calibrated value when on load impedance of 50 Ω.

Parameters

Name	Range	Type	Default	Description
<power>	-5 to 5	Numeric	0	Will set the RF power in units of dBm. The display shows the correct power level only when the output cable is terminated into 50 Ω.
<MINimum>		Discrete		Will set the power to the lowest possible level (-8 dBm).
MAXimum>		Discrete		Will set the power to the highest possible level (8 dBm).

Response

The **WX2182** will return the present power value. The returned value will be in standard scientific format (for example: 100 mdBm would be returned as 100e-3 – positive numbers are unsigned).

:ROSCillator:SOURce{INTernal|EXTernal}(?)

Description

Use this command to set or query the source of the 10 MHz reference. This source defines the accuracy and stability of the clock generator. The internal reference has an accuracy and stability of 1 ppm; applications requiring higher accuracy or stability can use the external reference option and apply there an improved 10 MHz signal.

Parameters

Name	Type	Default	Description
INTernal	Discrete	INT	Selects an internal source. The internal source is a TCXO (temperature compensated crystal oscillator) device that has 1ppm accuracy and stability over the operating temperature range.
EXTernal	Discrete		Reroutes the 10 MHz source to the external reference input. An external reference must be connected to the WX2182 for it to continue with its normal operation.

Response

The **WX2182** will return INT, or EXT depending on the present 10 MHz clock reference source setting.

: ROSCillator:FREQuency<frequency>(?)

Description

Use this command to set or query the frequency range that will be applied to the reference oscillator input. The frequency value must be close to the value of the external frequency, because it sets up the PLL's for the reference oscillator to accept and lock on the correct external frequency value.

Parameters

Name	Range	Type	Default	Description
<frequency>	10e6 to	Numeric	100e6	Will set frequency range for the internal PLL that locks

100e6

the external frequency reference.

Response

The **WX2182** will return the present reference frequency value. The returned value will be in standard scientific format (for example: 10 MHz would be returned as 10e6).

:VOLTage{<dc_couple_voltage>|MINimum|MAXimum}(?)

Description

Use this command to set or query the amplitude of the waveform when routed through the DC path. This parameter affects the DC output paths only. Use the command *outp:coup dc* to modify the output path to dc-coupled. The **WX2182** displays a calibrated value when on load impedance of 50 Ω. Offset and amplitude settings are independent providing that the |offset + amplitude/2| value does not exceed the specified voltage window.

Parameters

Name	Range	Type	Default	Description
<dc_couple_voltage>	50e-3 to 2	Numeric	0	Will set the offset of the output waveform in units of volts. The display shows the correct amplitude level only when the output cable is terminated into 50 Ω.
<MINimum>		Discrete		Will set the amplitude to the lowest possible DAC level (50e-3).
MAXimum>		Discrete		Will set the amplitude to the highest possible DAC level (2).

Response

The **WX2182** will return the present dac amplitude value. The returned value will be in standard scientific format (for example: 100 mV would be returned as 100e-3 – positive numbers are unsigned).

:VOLTage:OFFSet{<offset>|MINimum|MAXimum}(?)

Description

Use this command to set or query the dc offset of the output waveform. This parameter affects the DAC and the DC output paths only. Use the command *outp:coup dc* to modify the output path to dc-coupled. The **WX2182** displays a calibrated value when on load impedance of 50 Ω. Offset and amplitude settings are independent providing that the |offset + amplitude| value does not exceed the specified amplitude window.

Parameters

Name	Range	Type	Default	Description
<offset>	-1.5 to 1.5	Numeric	0	Will set the offset of the output waveform in units of volts. The display shows the correct amplitude level only when the output cable is terminated into 50 Ω.
<MINimum>		Discrete		Will set the offset to the lowest possible level (-1.5).
≤MAXimum>		Discrete		Will set the offset to the highest possible level (1.5).

Response

The **WX2182** will return the present dc offset value. The returned value will be in standard scientific format (for example: 100 mV would be returned as 100e-3 – positive numbers are unsigned).

Marker Output Control Commands

The Marker Output Control Commands group is used for programming the characteristics of the marker outputs. Each channel has two differential marker outputs. These are located on the rear panel. Each marker can be programmed to have unique properties such as: delay, position, width and level. Simple front panel programming allows creation of one marker for each marker output however, since markers are programmed as bits D12 and D13 of the waveform data (see Figure 5-3), one can use this function to program arbitrary patterns on the marker outputs.

Additional information on the various marker output functions is given in Chapter 3. Factory defaults after *RST are shown in the default column. Parameter low and high limits are given where applicable. Use the commands in Table 4-5 to set up the **WX2182** marker outputs and their associated parameters.



Tip

When markers are programmed from the front panel, the WX2182 generates one marker transition only for each marker output. The user has the freedom to turn markers on and off and modify marker attributes such as delay, position, width and levels. Internally, markers are programmed as part of the waveform and, when modified from the front panel, the firmware sets and remembers where markers were placed so every time that marker attributes are modified, the firmware knows where these attributes are stored and re-writes the entire waveform memory with the new attributes.

It is different when markers are programmed from remote; internal attributes are not visible to the external user and therefore, if you programmed marker attributes from the front panel and then did the same from remote, there is danger that marker transitions are present at unexpected locations. To avoid such errors, always set the mark:widt to 0 for all markers and only then download waveforms that have marker attributes on bits D12 and D13.

Table 4-5: Marker Output Control Commands Summary

Keyword	Parameter Form	Default	Notes
[:SOURce]			
:MARKer[1 2]			Selects active marker
:DELay	0 to 3e-9	0	Delay from SYNC
[:STATe]	OFF ON 0 1	0	Toggles marker on/off
:POSition	0 to n-4 (n = segment length)	0	Position from start
:WIDTh	0 to n-4 (n = segment length)	4	Marker width
:VOLTag			
[:LEVel]			
:HIGH	0.5 to 1.25	0.5	Marker high level
:LOW	0 to 0.8	0	Marker low level

:MARKer[1|2]:DELay<delay>(?)

Description

Use this command to set or query the delay of the marker output. The delay is measured from the sync output in units of seconds. The marker has an initial width of 4 sample clock periods and an amplitude swing of 0 to 0.5 V. Use the *mark[1|2]:wid* command to change the marker pulse width and *mark[1|2]:volt:high/low* to change the marker amplitude levels.

Parameters

Name	Range	Type	Default	Description
<delay>	0 to 3e-9	Numeric	0	Will set marker delay value in units of seconds. Each channel has two separate markers that can be programmed to have unique delays and amplitude levels. Note that you can program D12 and D13 to create multiple markers along the waveform length however, in this case, you must remove the default marker from the waveform map by setting the width parameter <i>mark:wid 0</i> .

Response

The **WX2182** will return the present marker delay value. The returned value will be in standard scientific format (for example: 100 μs would be returned as 100e-6 – positive numbers are unsigned).

:MARKer{OFF|ON|0|1}(?)

Description

This command will set or query the state of the marker outputs. Note that for safety, the outputs always default to off, even if the last instrument setting before power down was on. The on/off setting affects both markers simultaneously on each channel.

Parameters

Range	Type	Default	Description
0-1	Discrete	0	Sets the marker outputs on and off

Response

The **WX2182** will return 1 if the marker outputs are ON, or 0 if the marker outputs are OFF.

:MARKer[1|2]:POSition<position>(?)

Description

Use this command to set or query the position of the marker output. The position is defined from the waveform first point in units of waveform points (sample clock periods). The marker has an initial width of 4 sample clock periods and an amplitude swing of 0 to 0.5 V. Use the *mark[1|2]:wid* command to change the marker pulse width and *mark[1|2]:volt:high|low* to change the marker amplitude levels.

Parameters

Name	Range	Type	Default	Description
<position>	0 to n-4	Numeric	0	Will set marker position relative to the waveform start point in units of waveform points. The position range is from 0 to the last point of the waveform, minus 4. You can program the position with increments of 4 points. Note that you can program D12 and D13 to create multiple markers along the waveform length however, in this case, you must remove the default marker from the waveform map by setting the width parameter <i>mark:wid 0</i> .

Response

The **WX2182** will return the present marker position value in units of waveform points.

:MARKer[1|2]:WIDth<width>(?)

Description

Use this command to set or query the width of the marker output. The width is defined in units of waveform points (sample clock periods). The marker has an initial amplitude swing of 0 to 0.5 V. Use the command *mark[1|2]:volt:high|low* to change the marker amplitude levels.

Parameters

Name	Range	Type	Default	Description
<width>	0 to n-4	Numeric	0	Will set marker width in units of waveform points. The width range is from 0 to the last point of the waveform less 4. You can program the width in increments of 4 points. Note that you can program D12 and D13 to create multiple markers along the waveform length however, in this case, you must remove the default marker from the waveform map by setting the width parameter <i>mark:wid 0</i> .

Response

The **WX2182** will return the present marker width value in units of waveform points.

:MARKer[1|2]:VOLTage:HIGH<hi_level>(?)

Description

Use this command to set or query the high level of the marker output. The high level is defined in units of volts. High and low levels can be programmed independently as long as the amplitude window remains within 1.25 V.

Parameters

Name	Range	Type	Default	Description
<hi_level>	0.5 to 1.25	Numeric	0.5	Will program the marker high level in units of volts. Each marker can be programmed to a different low- and high-level setting. The high level is calibrated when the cable is terminated into a 50 Ω load.

Response

The **WX2182** will return the present marker high-level value. The returned value will be in standard scientific format (for example: 0.01 V would be returned as 10e-3 – positive numbers are unsigned).

:MARKer[1|2]:VOLTage:LOW<lo_level>(?)

Description

Use this command to set or query the high level of the marker output. The high level is defined in units of volts. High and low levels can be programmed independently as long as the amplitude window remains within 1.4 V.

Parameters

Name	Range	Type	Default	Description
<lo_level>	0 to 0.8	Numeric	0	Will program the marker low level in units of volts. Each marker can be programmed to a different low- and high-level setting. The low level is calibrated when the cable is terminated into a 50 Ω load.

Response

The **WX2182** will return the present marker low-level value. The returned value will be in standard scientific format (for example: 0.01 V would be returned as 10e-3 – positive numbers are unsigned).

Standard Waveforms Control Commands

Use this group to control the shape and parameters of the standard waveforms functions. The commands in this group will affect the output only when the **WX2182** has been programmed to generate standard waveforms. In standard waveform mode, some waveform coordinates are stored in tables and some are computed every time a waveform is being selected or modified. Expect small delays after the commands have been sent, because the waveform is recomputed and refreshed with every command.

Factory defaults after *RST are shown in the Default column. Parameter range and low and high limits are listed, where applicable. Use the commands in Table 4-6 to set up the **WX2182** standard waveforms and their associated parameters.

Table 4-6: Standard Waveforms Control Commands Summary

Keyword	Parameter Form	Default	Notes
[:SOURce]			
:FUNction			
:SHApe	SINusoid TRIangle SQUare RAMP SINC GAUSSsian EXPonential NOISe DC	SIN	Standard function shape
:SINusoid			
:PHASe	0 to 360	0	
:TRIangle			
:PHASe	0 to 360	0	
:SQUare			
:DCYClE	0 to 99.9	50	
:RAMP			
:DELay	0 to 99.99	10	
:TRANSition			
[:LEADing]	0 to 99.99	60	
:TRAIling	0 to 99.99	30	
:SINC			
:NCYClE	4 to 100	10	
:GAUSSsian			
:EXPonent	1 to 200	10	
:EXPonential			
:EXPonent	-100 to 100	-10	
:DC			
[:OFFSet]	-1.5 to 1.5	0	DC coupled only

FUNCTION:SHAPE{SINusoid|TRIangle|SQUare|RAMP|SINC|GAUSSian|EXPonential|DC|NOISe}(?)

Description

Use this command to set or query the type of waveform that will be available at the output connector. This command will affect the **WX2182** only when the standard waveforms output has been programmed. Select the standard waveforms using the *func:mode fix* command.

Parameters

Name	Type	Default	Description
SINusoid	Discrete	SIN	Selects the built-in sine waveform.
TRIangle	Discrete		Selects the built-in triangular waveform.
SQUare	Discrete		Selects the built-in square waveform.
RAMP	Discrete		Selects the built-in ramp waveform.
SINC	Discrete		Selects the built-in sinc waveform.
EXPonential	Discrete		Selects the built-in exponential waveform.
GAUSSian	Discrete		Selects the built-in gaussian waveform.
DC	Discrete		Selects the built-in DC waveform.
NOISe	Discrete		Selects the built-in noise waveform.

Response

The **WX2182** will return SIN, TRI, SQU, SPUL, RAMP, SINC, GAUS, EXP, DC, or NOIS depending on the selected waveform setting.

SINusoid:PHASe<phase>(?)

Description

Use this command to set or query the start phase for the standard sine waveform.

Parameters

Name	Range	Type	Default	Description
<phase>	0 to 360	Numeric	0	Programs the start phase parameter in units of degrees. Sine phase resolution is 0.01° limited however at high frequencies, depending on the number of waveform points that are used to create the sine shape.

Response

The **WX2182** will return the present start phase value in units of degrees.

TRIangle:PHASe<phase>(?)

Description

Use this command to set or query the start phase for the standard triangular waveform.

Parameters

Name	Range	Type	Default	Description
<phase>	0 to 360	Numeric	0	Programs the start phase parameter in units of degrees. Triangle phase resolution is 0.01° limited however at high frequencies, depending on the number of waveform points that are used to create the shape.

Response

The **WX2182** will return the present start phase value in units of degrees.

SQUare:DCYClE<duty_cycle>(?)

Description

Use this command to set or query the duty cycle of the standard square waveform.

Parameters

Name	Range	Type	Default	Description
<duty_cycle>	0 to 99.99	Numeric	50	Programs the duty cycle of the standard square waveform in units of percent. Duty cycle setting resolution is limited to 0.01% of the square wave period.

Response

The **WX2182** will return the present duty cycle value in units of percent.

RAMP:DELay<delay>(?)

Description

Use this command to set or query the delay of the standard ramp waveform. The delay parameter defines the time that will lapse from the waveform start to the first transition of the ramp period.

Parameters

Name	Range	Type	Default	Description
<delay>	0 to 99.99	Numeric	10	Programs the ramp delay parameter in units of percent

Response

The **WX2182** will return the present ramp delay value in units of percent.

Ramp:TRANsition<rise>(?)

Description

Use this command to set or query the ramp transition time from low to high. The rise time parameter defines the time that will lapse from the first transition to high, until the ramp reaches its high-level value.

Parameters

Name	Range	Type	Default	Description
<rise>	0 to 99.99	Numeric	60	Programs the ramp rise time parameter in units of percent.

Response

The **WX2182** will return the present rise time value in units of percent.

RAMP:TRANSition:TRAILing<fall>(?)

Description

Use this command to set or query the ramp transition time from high to low. The fall time parameter defines the time that will lapse from the first transition to low, until the ramp reaches its low level value.

Parameters

Name	Range	Type	Default	Description
<fall>	0 to 99.99	Numeric	30	Programs the ramp fall time parameter in units of percent

Response

The **WX2182** will return the present fall time value in units of percent.

SINC:NCYCLE<N_cycles>(?)

Description

Use this command to set or query the number of “0-crossings” of the standard SINC pulse waveform.

Parameters

Name	Range	Type	Default	Description
<N_cycle>	4 to 100	Numeric (Integer only)	10	Programs the number of zero-crossings parameter.

Response

The **WX2182** will return an integer number depending on the current number of zero-crossing value.

GAUSSian:EXPonent<exp>(?)

Description

Use this command to set or query the exponent for the standard Gaussian pulse waveform.

Parameters

Name	Range	Type	Default	Description
<exp>	1 to 200	Numeric (Integer only)	10	Programs the exponent parameter.

Response

The **WX2182** will return an integer number depending on the present exponent value.

EXPonential:EXPonent<exp>(?)

Description

Use this command to set or query the exponent for the standard exponential pulse waveform.

Parameters

Name	Range	Type	Default	Description
<exp>	-100 to 100	Numeric (Integer only)	-10	Programs the exponent parameter.

Response

The **WX2182** will return an integer number, depending on the present exponent value.

DC<offset>(?)

Description

Use this command to set or query the offset of the DC function in units of volts.

Parameters

Name	Range	Type	Default	Description
<offset>	-1.5 to 1.5	Numeric	0	Programs the DC offset parameter in units of volts. Output amplifier path is automatically set to DC.

Response

The **WX2182** will return the present DC offset value in units of volts.

Arbitrary Waveforms Control Commands

This group is used to control the arbitrary waveforms and their respective parameters. This will allow you to create segments and download waveforms. Using these commands, you can also define segment size and delete some or all unwanted waveforms from your memory.

Generating Arbitrary Waveforms

Arbitrary waveforms are generated from digital data points, which are stored in a dedicated waveform memory. Each data point has a vertical resolution of 12 bits (16,384 points), i.e., each sample is placed on the vertical axis with a precision of 1/16,384. The **WX2182** has the following waveform memory capacity:

- 16M – standard memory configuration
- 32M – optional memory expansion

Each horizontal point has a unique address - the first being 00000 and the last depending on the memory option. In cases where smaller waveform lengths are required, the waveform memory can be divided into smaller segments.

When the instrument is programmed to output arbitrary waveforms, the clock samples the data points (one at a time) from address 0 to the last address. The rate at which each sample is replayed is defined by the sample clock rate parameter.

Unlike the built-in standard waveforms, arbitrary waveforms must first be loaded into the instrument's memory. Correct memory management is required for best utilization of the arbitrary memory. An explanation of how to manage the arbitrary waveform memory is given in the following paragraphs.

Arbitrary Memory Management

The arbitrary memory is comprised of a finite length of words. The maximum size arbitrary waveform that can be loaded into memory depends on the option that is installed in your instrument. The various options are listed in Chapter 1 of this manual. If you purchased the **WX2182** with in its basic configuration, you should expect to have 16 Meg words in each channel to load waveforms.

Waveforms are created using small sections of the arbitrary memory. The memory can be partitioned into smaller segments (up to 16k) and different waveforms can be loaded into each segment, each having a unique length. Minimum segment size is 320 points and can be increased by increments of 32 points. Information on how to partition the memory, define segment length and download waveform data to the **WX2182** is given in the following paragraphs. The arbitrary waveform commands are listed in Table 4-7. Factory defaults after *RST are shown in the Default column. Parameter range and low and high limits are listed, where applicable.

Table 4-7: Arbitrary Waveforms Commands Summary

Keyword	Parameter Form	Default	Notes
:TRACe			
[:DATA]	#<data_array>		Waveform data array
:DEFine	<segment_#>,<320 to 16(32)e6>		Segment and length
:DELete			
[:NAME]	1 to 16,000		Delete one segment
:ALL			Delete all segments
:POINts?			Queries waveform length
:SELect	1 to 16,000	1	
:SOURce	BUS EXTernal	BUS	Toggle control source
:TIMing	COHerent IMMEDIATE	COH	Select timing

:TRACe#<header><binary_block>

Description

This command will download waveform data to the **WX2182** waveform memory. Waveform data is loaded to the **WX2182** using high-speed binary transfer. A special command is defined by IEEE-STD-488.2 for this purpose. High-speed binary transfer allows any 8-bit bytes (including extended ASCII code) to be transmitted in a message. This command is particularly useful for sending large quantities of data. As an example, the next command will download to the generator an arbitrary block of data of 1,024 points

TRACe#42048<binary_block>

This command causes the transfer of 2,048 bytes of data (1,024 waveform points) into the active memory segment. The <header> is interpreted this way:

- The ASCII "#" (\$23) designates the start of the binary data block.
- "4" designates the number of digits that follow.
- "2,048" is the even number of bytes to follow.

The generator accepts waveform samples as 16-bit integers, which are sent in two-byte words. Therefore, the total number of bytes is always twice the number of data points in the waveform. For example, 20000 bytes are required to download a waveform with 10,000 points. The IEEE-STD-488.2 definition of Definite Length Arbitrary Block Data format is demonstrated in Figure 4-1.

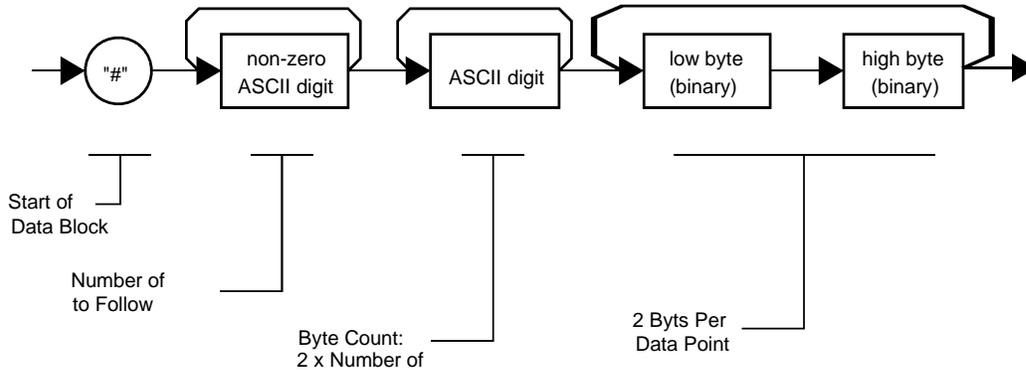


Figure 4-1: Definite Length Arbitrary Block Data Format

Transfer of definite length arbitrary block data must terminate with the EOI bit set. This way, carriage-return (CR – 0dH) and line feed (LF – 0aH) characters can be used as waveform data points and will not cause unexpected termination of the arbitrary block data.

- <binary_block> Represents waveform data.

The waveform data is made of 16-bit words however, programmers may choose to prepare the data in two bytes and arrange to download these two bytes in a sequence. Figure 4-2 shows a waveform word that is acceptable for the **WX2182**. There are a number of points you should be aware of before you start preparing the data:

1. Waveform data points have 12-bit values - 0x000 to 0xFFF.
2. Data point range is 0 to 4,095 decimal for the WX2182. 0x000 corresponds to -2 V and 0xFFF corresponds to +2 V.
3. WX2182 data point 4,095 corresponds to full-scale amplitude setting. Point 2,048 corresponds to 0 V amplitude setting.

Figure 4-2 shows how to prepare the 16-bit word for a data point representation and Figure 4-3 shows how this data represents waveform and marker data and stop bit control.

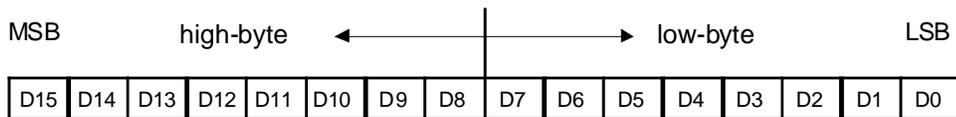


Figure 4-2: 16-bit Data Point Representation

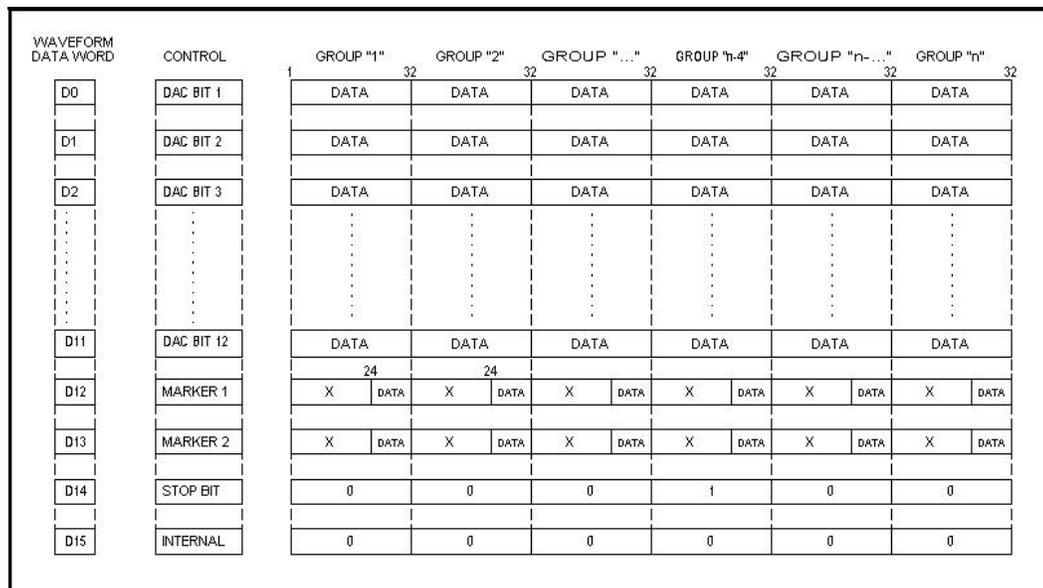


Figure 4-3: Waveform Data Word Representation

Notes:

1. Each group of data contains 32 words and therefore, waveform data is programmed in multiples of 32 words.
2. "X" data in D12 and D13 implies that the first 24 words you can place are "don't care" data but the last 8 words contain marker position data. You may place markers at any position along the waveform, but the data can be programmed in the last 8 words of a group of 32 words.
3. "0" data in the stop bit fields (D14) implies that all words are programmed with "0"; "1" data in the stop bit implies that all 32 words in the stop group must be programmed with "1". The stop bit defines the end of the waveform segment.
4. D15 must be programmed with "0", all words.

Parameters

Name	Type	Description
<header>	Discrete	Contains information on the size of the binary block that contains waveform coordinates.
<binary_block>	Binary	Block of binary data that contains waveform data points (vertical coordinates), as explained above.

:TRACe:DEFine<segment_#>,<length>

Description

Use this command to define the size of a specific memory segment. The final size of the arbitrary memory is 16,000,000 points (32,000,000 points optional). The memory can be partitioned to smaller segments, up to 16,000 segments. The total length of memory segments cannot exceed the size of the waveform memory.



The WX2182 operates in interlaced mode where thirty-two memory cells generate one byte of data. Therefore, segment size can be programmed in numbers evenly divisible by 32 only. For example, 2112 bytes is an acceptable length for a binary block. 2110 is not a multiple of 32 and therefore the generator will generate an error message if this segment length is used.

Parameters

Name	Range	Type	Default	Description
<segment_#>	1 to 16k	Numeric (integer only)	1	Selects the segment number of which will be programmed using this command.
<length>	320 to n	Numeric (integer only)		Programs the size of the selected segment. Minimum segment length is 320 points. The maximum (n) is limited by the size of the installed memory. Segment size can be programmed with increments of 32 points.

:TRACe:DELeTe<segment_#>

Description

This command will delete a predefined segment from the working memory. The memory space that is being freed will be available for new waveforms, as long as the new waveform will be equal or smaller in size to the deleted segment. If the deleted segment is the last segment, then the size of another waveform written to the same segment is not limited. For example, let's consider two segments: the first being a 1024-point waveform and the second with 320 points. If you delete segment 1, you can reprogram another waveform to segment 1 with size to 1024 points. If you reprogram segment 1 with 1024 points, the instrument will generate an error and will not accept this waveform. On the other hand, if you delete segment 2, which was the last segment you programmed, you can reprogram this segment with waveforms having length limited only by the size of the remaining memory space.

Parameters

Name	Range	Type	Default	Description
<segment_#>	1 to 16k	Numeric (integer only)	1	Selects the segment number of which will be deleted

:TRACe:DELeTe:ALL

Description

This command will delete all predefined segments and will clear the entire waveform memory space. This command is particularly important in case you want to defragment the entire waveform memory and start building your waveform segments from scratch.

:TRACe:POINts?

Description

This command will query the number of points that were used for building up the active waveform.

Response

The **WX2182** will return the active waveform length as an integer number.

:TRACe:SELeCt<segment_#>(?)

Description

Use this command to set or query the active waveform segment at the output connector. By selecting the active segment, you are performing two functions:

1. Successive: TRAC commands will affect the selected segment.
2. The SYNC output will be assigned to the selected segment. This behavior is especially important for sequence operation, where multiple segments form a large sequence. In this case, you can synchronize external devices exactly to the segment of interest.

Parameters

Name	Range	Type	Default	Description
<segment_#>	1 to 16k	Numeric (Integer only)	1	Selects the active segment number.

Response

The **WX2182** will return the active waveform segment number.

:TRACe:SElect:SOURce{BUS|EXTeRnal}(?)

Description

Use this command to set or query the source of the segment select command. This defines from where the select command is expected to be received, causing a waveform segment change. Using the BUS option, waveforms can be selected using remote commands only. The EXT option transfers the control to a rear panel connector that allows dynamic selection of the active waveform segment. The rear panel connector has 9 pins of which 8 are used for parallel control bits and one line is used for data validation. Using the external waveform control, one can dynamically select a waveform from a preprogrammed list of 256 waveforms. The transition characteristics from waveform segment to another is programmed using the *trac:sel::tim* command.

Parameters

Name	Type	Default	Description
BUS	Discrete	BUS	Defines that waveform segments will be switched only when a remote command has been received.
EXTeRnal	Discrete		Defines that the segment control is transferred to a rear panel connector. The connector has 8 bits of parallel control lines that can switch between up to 256 segments.

Response

The **WX2182** will return BUS, or EXT depending on the present segment jump setting.

:TRACe:SElect:TIMing{COHerent|IMMediate}(?)

Description

Use this command to set or query the timing characteristics of the trace select command. This defines how the generator transitions from waveform to waveform. Use the coherent option to let the waveform complete before it jumps to the next waveform. Applications that require an unconditional jump can use the immediate option, where the generation of the current waveform is aborted and the new waveform is started immediately thereafter. This command affects the segment transition timing, regardless if the segment control is from remote or from the rear panel connector.

Parameters

Name	Type	Default	Description
COHerent	Discrete	COH	Defines that when a new waveform segment is selected, the transition to the new waveform will occur only when the current waveform has reached its end point.
IMMediate	Discrete		Defines that when a new waveform segment is selected, the current waveform will be aborted and the transition to the new waveform will occur immediately, without waiting for the current waveform to reach its end point.

Response

The **WX2182** will return COH, or IMM depending on the present segment jump timing setting.

Sequenced Waveforms Control Commands

This group is used to control the sequenced waveforms and their respective parameters. This will allow you to create multiple sequence tables and modify segment loops and links. Also, use these commands to add or delete sequences from your instrument.

Generating Sequenced Waveforms

Sequenced waveforms are made of a number of arbitrary waveforms, which can be linked and looped in user-programmable order. Sequenced waveforms are generated from waveforms stored in the **WX2182** as memory segments. Therefore, before a sequence can be used, download waveform segments to the arbitrary memory. Information on how to partition the memory and how to download waveforms is given in this chapter

An example of how sequenced waveforms work is demonstrated in figures 1-7 through 1-9. The sequence generator lets you link and loop segments in user-defined order. Figure 1-10 shows a sequence of waveforms that were stored in three different memory segments.

In general, sequences can be built one step at a time, using the *seq:def* command. The one-step method is slow and tedious. However, it allows better control for one who just begins his first sequence programming. Advanced users can download a complete sequence table using the binary sequence download option. The latter is much faster for applications requiring large sequence tables. Use the information below to understand sequence commands and how to implement them in your application.

The sequenced waveforms commands are listed in Table 4-8. Factory defaults after *RST are shown in the Default column. Parameter range and low- and high-limits are listed, where applicable.

Table 4-8: Sequence Control Commands

Keyword	Parameter Form	Default	Notes
[:SOURce]			
:SEQuence			
:ADVance	AUTOMatic ONCE STEPped	AUTO	
:DEFine	<step>, <segment_#>, <loops>, <jump_flag>		
:DELete			
[:NAME]	1 to 1,000		
:ALL			
:JUMP			
[:EVENT]	BUS EVENT	BUS	Toggle jump source
:LENGth	1 to 16,000		Optional definition
:SELect	1 to 1,000		
:SOURce	BUS EXTernal	BUS	Toggle control source
:TIMing	COHerent IMMEDIATE	COH	Jump timing
:ONCe			
:COUNT	1 to 1,000,000		
:SYNC			
:LOCK	<step_number>	1	Sync position in table

:SEQuence:ADVance{AUTOMatic|ONCE|STEPped}(?)

Description

This command will select the sequence advance mode. It defines how the output advances through the sequence steps. There are three advance modes: automatic, once and stepped.

In automatic advance mode, the routine goes through the steps automatically and if there are no jump flag, the sequence will end and then start over automatically. If a loop counter other than 1 is programmed for a specific step in the sequence, the step will loop n times and then automatically advance to the next step. The jump flag inhibits the progression to the next step until a valid signal at the event input releases the step to jump.

In once advance mode, the routine goes through the steps automatically and if there are no jump flags, the sequence will end and idle on a specific waveform, depending on the selected run mode. If the once counter is programmed to a value other than 1, the sequence will repeat itself n times. If a loop counter other than 1 is programmed for a specific step in the sequence, the step will loop n times and then automatically advance to the next step. The jump flag inhibits the progression to the next step, until a valid signal at the event input releases the step to jump.

In stepped advance mode, the routine goes through the steps only after a valid event signal. When the sequence is complete, the sequence repeats itself with valid event signals. Jump flags are ignored in stepped mode, but a loop counter other than 1 will repeat the step for n times with each event, before advancing to the next step.

Parameters

Name	Type	Default	Description
AUTOMatic	Discrete	AUTO	Specifies continuous advance where the generator steps continuously to the end of the sequence table and repeats the sequence from the start. For example, if a sequence is made of three segments 1, 2 and 3, the sequence will generate an infinite number of 1,2,3,1,2,3,1,2,3...waveforms. Of course, each link (segment) can be programmed with its associated loop (repeat) number and jump flag to inhibit advancement until an event signal has been received.
ONCE	Discrete		This selects the once sequence advance mode, where the generator steps through the sequence table once automatically, except if the <i>seq:once:coun</i> programmed a value greater than 1.
STEPped	Discrete		Specifies the stepped sequence advance mode, where the generator steps to the next waveform only when a valid event signal has been received.

Response

The **WX2182** will return the AUTO, ONCE, or STEP depending on the present sequence advance mode setting.

:SEQuence:DEFine<step>,<segment_#>,<loops>,<jump_flag>(?)

Description

Use this command to create a sequence table. It defines all of the parameters that are associated with the

sequence step such as: step number, segment number, loops and jump flag. Each step in a sequence table must be programmed separately, except if the *seq:data* command is used to download a complete table in binary code. The *seq:eng* command can be used to first predefine the length of the sequence table. However, the length is adjusted automatically to the number of entries when the *seq:def* commands program each step.

Parameters

Name	Range	Type	Description
<step>	1 to 16,000	Numeric (integer only)	Programs the step in the sequence table. Steps are indexed from 1 to 16,000 and must be programmed in an ascending order. Empty step locations in a sequence table are not permitted.
<segment_#>	1 to 16,000	Numeric (integer only)	Assigns a waveform segment to a specific step number. When encountered in the sequence table, the waveform that is associated with the step will be generated.
<loops>	1 to 1M	Numeric (integer only)	Programs the repeat number of loops that a specific step will play, before advancing to the next step in the sequence.
<jump_flag>	0-1	Boolean	This flag specifies if the sequence will advance or hold on a specific step. "0" flag specifies normal advance, "1" flag specifies that the output will dwell on the current step and will advance to the next step only after a valid event has been received.



TIP

The **WX2182** attempts to rebuild the sequence table and restart the sequence every time you use the *seq:def* command, while your generator is in sequenced operating mode. Therefore, sending this command in sequenced mode will slow the programming process and the operation of the generator. Using the *seq:def* command in **FIX** or **USER** mode will greatly speed up programming time.

:SEquence:DELeTe<sequence_#>

Description

The **WX2182** can store up to 1,000 different sequences for each channel. Use this command to delete unwanted sequences and to free memory space for fresh sequence tables. You can remove individual sequences regardless of their indexed order. For example, you can delete sequences 4, 7 and 15. Restoring deleted sequences is not a problem except their length must be equal or less than the deleted size. If you are not sure what to do, use the *seq:del:all* command and reprogram the entire sequence list.

Parameters

Name	Range	Type	Default	Description
<sequence_#>	1 to 1,000	Numeric (integer only)	1	Selects a specific sequence name that will be deleted.

:SEquence:DELeTe:ALL

Description

Use this command to delete all sequences and to free space for fresh sequence tables.

:SEquence:JUMP{BUS|EVENT}(?)

Description

Use this command to set or query the source of the jump signal. The jump signal is required for Auto and Stepped advance sequence modes. In Auto advance mode, the sequence will advance through the steps automatically until a jump bit = "1" is encountered, which will cause the generator to dwell on the step until a valid jump signal is asserted. In Stepped mode, the jump signal is required for every step to advance to the next waveform in the sequence ladder.

Parameters

Name	Type	Default	Description
BUS	Discrete	BUS	Defines that the sequence will advance to the next step only when a remote trigger command such as *trg has been received.
EVENT	Discrete		Defines that the sequence will advance to the next step only when a valid signal has been asserted to the Event input.

Response

The **WX2182** will return BUS, or EVEN depending on the present sequence jump setting.

:SEquence:LENGth<length >(?)

Description

Use this command to define or query the number of steps that will be programmed in a specific sequence table. Note that this command is optional if you program the sequence table using the *seq:data#* command, as this later command will automatically build the table with the number of programmed steps.

Parameters

Name	Range	Type	Default	Description
<length>	1 to 16,000	Numeric (integer only)	1	Defines the number of steps that will be programmed in a specific sequence table.

Response

The **WX2182** will return the present length value of the active sequence.

:SEquence:SELEct<sequence_#>(?)

Description

Use this command to query or select an active sequence number to be generated at the output connector. Each channel can store up to 1,000 different sequence tables. By selecting the active sequence, successive *seq:def* commands will affect the selected sequence only.

Parameters

Name	Range	Type	Default	Description
<sequence_#>	1 to 1,000	Discrete (Alpha 1 numeric only)		Selects an active sequence number. Subsequent programming will affect the active sequence only.

Response

The **WX2182** will return the active sequence number.

:SEquence:SElect:SOURce{BUS|EXTernal}(?)

Description

Use this command to set or query the source of the sequence select command. This defines from where the select command is expected to be received, causing a sequence change. Using the BUS option, sequences can be selected using remote commands only. The EXT option transfers the control to a rear panel connector that allows dynamic selection of the active sequence. The rear panel connector has 9 pins, of which 8 are used for parallel control bits, and one line is used for data validation. Using the external sequence control, one can dynamically select a sequence from a preprogrammed list of 256 sequences. The transition characteristics from sequence to another is programmed using the *seq:sel::tim* command.

Parameters

Name	Type	Default	Description
BUS	Discrete	BUS	Defines that sequences will be switched only when a remote command has been received.
EXTernal	Discrete		Defines that the sequence control is transferred to a rear panel connector. The connector has 8 bits of parallel control lines that can switch between up to 256 sequences.

Response

The **WX2182** will return BUS, or EXT depending on the present sequence select setting.

:SEquence:SElect:TIMing{COHerent|IMMEDIATE}(?)

Description

Use this command to set or query the timing characteristics of the sequence select command. This defines how the generator transitions from sequence to sequence. Use the coherent option to let the sequence complete, before it jumps to the next sequence. Applications that require an unconditional jump can use the immediate option, where the generation of the current sequence is aborted and the new sequence is started immediately thereafter. This command affects the sequence transition timing, regardless if the sequence control is from remote or from the rear panel connector.

Parameters

Name	Type	Default	Description
COHerent	Discrete	COH	Defines that when a new sequence is selected, the transition to the new sequence will occur only when the current sequence has reached its end point.
IMMEDIATE	Discrete		Defines that when a new sequence is selected, the current sequence will be aborted and the transition to the new sequence will occur immediately, without waiting for the current sequence to reach its end point.

Response

The **WX2182** will return COH, or IMM depending on the present sequence select timing setting.

:SEquence:ONCE:COUNT<loops>(?)

Description

Use this command to set or query the number of loops that a sequence will execute when its advance mode is programmed to ONCE. If a value other than 1 is programmed in the once counter database, then the sequence will execute to its last waveform and then return to an idle state. The sequence repeats n times, depending on the setting of the *seq:once:coun* command.

Parameters

Name	Range	Type	Default	Description
<loops >	1 to 1,000,000	Numeric (integer only)	1	Programs the loop counter for the once advance mode.

Response

The **WX2182** will return the active once loop counter value.

:SEquence:LOCK<step_number>(?)

Description

By default, the sequence generates a sync pulse on step number 1 of the sequence table. Use this command to move the sync output pulse to different steps. The width of the sync pulse is equal to the length of the waveform that is associated with it.

Parameters

Name	Range	Type	Default	Description
<step_number>	1 to 16 k	Numeric (integer only)	1	Programs the sync pulse to a required position along the sequence table steps.

Response

The **WX2182** will return an integer number depending on the current sync lock setting.

Advanced Sequencing Control Commands

This group is used to control a special incidence of the sequence generator where sequences, and not segments, are sequenced. Unlike the standard sequence generator that can store up to 1000 different sequence scenarios, the advanced sequencing generator can store only one sequence.

Generating an Advanced Sequence

The advanced sequence generator is similar to the standard sequence generator, except the sequence is made of sequences that were preloaded and stored in individual sequence tables. The advanced sequence generator has the ability to link and loop these sequences in user-programmable order.

If you already built and used standard sequence tables then the procedure of building an advanced sequencing table is very similar. There are a number of tools that you can use to build an advanced sequencing table.

In general, the advanced sequence table is built one step at a time using the `aseq:def` command. The one-step method is slow and tedious. However, it allows better control for someone who is just beginning their first sequence programming. Use the information below to understand the advanced sequencing commands and how to implement them in your application.

The advanced sequencing commands are listed in Table 4-9. Factory defaults after `*RST` are shown in the Default column. Parameter range and low-and high-limits are listed, where applicable.

Table 4-9: Sequence Control Commands

Keyword	Parameter Form	Default	Notes
[:SOURce]			
:ASEquence			Advanced sequencing
:ADVance	AUTOMatic ONCE STEPped	AUTO	
:DEFine	<step>,<sequence_#>,<loops>,<jump_flag>		
:DELete			Deletes table
:LENGth	1 to 1,000		Optional definition
:ONCe			
:COUNt	1 to 1,000,000		
:SYNC			
:LOCK	<sequence_number>	1	Sync position

:ASEquence:ADVance{AUTOMatic|ONCE|STEPped}(?)

Description

This command will select the sequence advance mode, which defines how the output advances through the sequencer steps. There are three advance modes: automatic, once and stepped.

In automatic advance mode, the routine goes through the steps automatically and if there are no jump flag, the sequence will end and then start over automatically. If a loop counter other than 1 is programmed for a specific step in the sequence, the step will loop n times and then automatically advance to the next step. The jump flag inhibits the circulation to the next step, until a valid signal at the event input releases the step to jump.

In once advance mode, the routine goes through the steps automatically and if there are no jump flag, the sequence will end and idle on a specific sequence, depending on the selected run mode. If the once counter is programmed to a value other than 1, the sequence will repeat itself n times. If a loop counter other than 1 is programmed for a specific step in the sequence, the step will loop n times and then automatically advance to the next step. The jump flag inhibits the propagation to the next step, until a valid signal at the event input releases the step to jump.

In stepped advance mode, the routine goes through the steps only after a valid event signal. When the sequence is complete, the sequence repeats itself with valid event signals. Jump flags are ignored in stepped mode, but loop counter other than 1 will repeat the step for n times with each event, before advancing to the next step.

Parameters

Name	Type	Default	Description
AUTOMatic	Discrete	AUTO	Specifies continuous advance where the generator steps continuously to the end of the sequence table and repeats the sequence from the start. For example, if a sequence is made of three sequences 1, 2 and 3, the sequence will generate an infinite number of 1,2,3,1,2,3,1,2,3...sequences. Of course, each link (sequence) can be programmed with its associated loop (repeat) number and jump flag to inhibit circulation until an event signal has been received.
ONCE	Discrete		This selects the once sequence advance mode, where the generator steps through the sequence table automatically once, except if the <i>aseq:once:coun</i> programmed a value greater than 1.
STEPped	Discrete		Specifies the stepped sequence advance mode, where the generator steps to the next sequence only when a valid event signal has been received.

Response

The **WX2182** will return the AUTO, ONCE, or STEP, depending on the present sequence advance mode setting.

:ASEquence:DEFine<step>,<sequence_#>,<loops>,<jump_flag>(?)

Description

Use this command to create an advanced sequencing table. It defines all of the parameters that are associated with the sequence step such as: step number, sequence number, loops and jump flag. Each step in a sequence table must be programmed separately, except if the *aseq:data* command is used to download a

complete table in binary code. The *aseq:leng* command can be used to first predefine the length of the sequence table. However, the length is adjusted automatically to the number of entries when the *aseq:def* commands program each step.

Parameters

Name	Range	Type	Description
<step>	1 to 1,000	Numeric (integer only)	Programs the step in the sequence table. Steps are indexed from 1 to 1,000 and must be programmed in an ascending order. Empty step locations in a sequence table are not permitted.
<sequence_#>	1 to 1,000	Numeric (integer only)	Assigns a sequence to a specific step number. When encountered in the sequence table, the sequence number that is associated with the step will be generated.
<loops>	1 to 1M	Numeric integer only)	Programs the repeat number of loops that a specific step will play before advancing to the next step in the sequence.
<jump_flag>	0-1	Boolean	This flag specifies if the sequence will advance or hold on a specific step. "0" flag specifies normal advance, "1" flag specifies that the output will dwell on the current step and will circulate to the next step only after a valid event has been received.



TIP

The **WX2182** attempts to rebuild the sequence table and restart the sequence every time you use the *aseq:def* command and while your generator is sequencing. Therefore, sending this command in sequenced mode will slow the programming process and the operation of the generator. Using the *aseq:def* command in **FIX** or **USER** mode will greatly speed up programming time.

:ASEquence:DELeTe

Description

Use this command to delete and reset the contents of the advanced sequencing table. No variables are associated with this command, because there is only one table available in the system.

:ASEquence:LENGth<length >(?)

Description

Use this command to define or query the number of steps that will be programmed in the advanced sequencing table. Note that this command is optional if you program the table using the *aseq:data#* command, as this later command will automatically build the table with the number of programmed steps.

Parameters

Name	Range	Type	Default	Description
<length>	1 to 1,000	Numeric (integer only)	1	Defines the number of steps that will be programmed in the advanced sequencing table.

Response

The **WX2182** will return the present length value of the sequence table.

:ASEquence:ONCE:COUNT<loops>(?)

Description

Use this command to set or query the number of loops that the advanced sequence will execute when its advance mode is programmed to ONCE. If a value other than 1 is programmed in the once counter database, then the sequence will execute to its last waveform and return to an idle state. The sequence repeats n times, depending on the setting of the *aseq:once:coun* command.

Parameters

Name	Range	Type	Default	Description
<loops >	1 to 1,000,000	Numeric (integer only)	1	Programs the loop counter for the once advance mode.

Response

The **WX2182** will return the active once loop counter value.

:ASEquence:LOCK<seq_number>(?)

Description

By default, the advanced sequence generates a sync pulse on step number 1 of the advanced sequence table. Use this command to move the sync output pulse to different steps. The width of the sync pulse is equal to the length of the sequence that is associated with it.

Parameters

Name	Range	Type	Default	Description
<seq_number>	1 to 16 k	Numeric (integer only)	1	Programs the sync pulse to a required position along the sequence table steps.

Response

The **WX2182** will return an integer number depending on the current sync lock setting.

Modulated Waveforms Global Control Commands

This group is used to set up the instrument in modulated waveforms mode and to select the general parameters that control all modulation functions. Note that the modulation can be turned off to create continuous carrier waveforms (CW). The following modulation schemes can be selected and controlled: AM, FM and Sweep. The modulated waveforms global control commands are summarized in Table 4-10. Factory defaults after *RST are shown in the Default column. Parameter range and low and high limits are listed, where applicable.

Table 4-10: Modulated Waveforms Global Commands

Keyword	Parameter Form	Default	Notes
[:SOURce]			
:MODulation			
:TYPE	OFF AM FM SWEep	OFF	
:CARRier			
[:FREQuency]	10e3 to 250e6	1e6	
:FUNction	SINusoidal TRIangle SQUare	SIN	

MODulation:TYPE{OFF|AM|FM|SWEep}{?}

Description

This command selects the modulation type. All modulation types are internal, so external signals are not required for producing modulation.

Parameters

Name	Type	Default	Description
OFF	Discrete	OFF	Modulation off is a special mode where the output generates continuous, non-modulated sinusoidal carrier waveforms (CW).
AM	Discrete		This turns on the AM function. Program the AM parameters to fine-tune the function for your application.
FM	Discrete		This turns on the FM function. Program the FM parameters to fine-tune the function for your application.
SWEep	Discrete		This turns on the sweep function. Program the sweep parameters to fine-tune the function for your application.

Response

The **WX2182** will return OFF, AM, FM, or SWE depending on the present modulation type setting.

MODulation:CARRier<frequency>(?)

Description

This command programs the CW frequency. Note that the CW waveform is sine only and its frequency setting is separate from the standard sine waveform. The CW frequency setting is valid for all modulation types.

Parameters

Name	Range	Type	Default	Description
<frequency>	10e3 to 250e6	Numeric	1e6	Programs the frequency of the carrier waveform in units of Hz. Note that the CW waveform is sine only and its frequency setting is separate from the standard sine waveform.

Response

The **WX2182** will return the current carrier frequency value.

MODulation:CARRier:FUNcTion(SINusoid|TRIangle|SQUare)(?)

Description

This specifies the carrier function. There are three functions that can be modulated: Sine, Triangle and Square. The sine, triangle and the square are computed and placed in the memory as complete waveforms and the modulation schemes are computed and replayed as arbitrary waveforms.

Parameters

Name	Type	Default	Description
SINusoid	Discrete	SIN	Selects sine as the modulated waveform
TRIangle	Discrete		Selects triangle as the modulated waveform
SQUare	Discrete		Selects square as the modulated waveform

Response

The **WX2182** will return SIN, TRI, or SQU depending on the selected waveform setting.

Modulation Control Commands

This group is used to control parameters for individual modulation schemes. Control parameters are available for: AM, FM and Sweep. The modulation control commands are summarized in Table 4-11. Factory defaults after *RST are shown in the Default column. Parameter range and low and high limits are listed, where applicable.

Table 4-11: Modulated Waveforms Control Commands

Keyword	Parameter Form	Default	Notes
:AM			
:FUNCTION			
:SHAPE	SINusoid TRIangle SQUare RAMP	SIN	
:INTERNAL			
:FREQUENCY	10e-3 to 1e6	1e3	Maximum Carrier to internal freq ration is 1e6
:DEPTH	0 to 100	50	
:FM			
:DEVIATION	10.0e-3 to 100e6	100e3	
:FUNCTION			
:SHAPE	SINusoid TRIangle SQUare RAMP	SIN	
:FREQUENCY	10e-3 to 350e3	10e3	
:MARKER			
[:FREQUENCY]	10e3 to 250e6	505e3	
:SWEEP			
:FREQUENCY			
[:START]	10e3 to 250e6	10e3	
:STOP	10e3 to 250e6	1e6	
:TIME	1.4e-6 to 40.0	1e-3	
:DIRECTION	UP DOWN	UP	
:SPACING	LINear LOGarithmic	LIN	
:MARKER			
[:FREQUENCY]	10e3 to 250e6	505e3	

AM Programming

Use the following command for programming the AM parameters. AM control is internal. The commands for programming the amplitude modulation function are described below. Note that the carrier waveform frequency (CW) setting is common to all modulation schemes.

AM:FUNCTION:SHAPE(SINusoid|TRIangle|SQUare|RAMP)(?)

Description

This command will select one of the waveform shapes as the active modulating waveform.

Parameters

Name	Type	Default	Description
SINusoid	Discrete	SIN	Selects the sine shape as the modulating waveform
TRIangle	Discrete		Selects the triangular shape as the modulating waveform
SQUare	Discrete		Selects the square shape as the modulating waveform
RAMP	Discrete		Selects the ramp shape as the modulating waveform

Response

The **WX2182** will return SIN, TRI, SQU, or RAMP depending on the selected function shape setting.

AM:INTERNAL:FREQUENCY<am_freq>(?)

Description

This command will set the modulating wave frequency for the built-in standard modulating waveform library.

Parameters

Name	Range	Type	Default	Description
<am_freq>	10e-3 to 1e6	Numeric	100	Programs the frequency of the modulating waveform in units of Hz. The frequency of the built-in standard modulating waveforms only is affected. Note that maximum carrier-to-internal-frequency-ratio is 1e6.

Response

The **WX2182** will return the present modulating waveform frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

AM:DEPTH<depth>(?)

Description

This command will set the modulating wave frequency for the built-in standard modulating waveform library.

Parameters

Name	Range	Type	Default	Description
<depth>	0 to 100	Numeric	50	Programs the depth of the modulating waveform in units of percent.

Response

The **WX2182** will return the present modulating depth value.

FM Programming

Use the following command for programming the FM parameters. FM control is internal. There are two types of waveforms that can be used as the modulating waveforms: Standard and Arbitrary. The standard waveforms are built in a library of waveforms and can be used anytime, without external control.

FM:DEVIation<deviation>(?)

Description

This programs the deviation range around the carrier frequency. The deviation range is always symmetrical about the carrier frequency. If you need a non-symmetrical deviation range, you can use the arbitrary FM composer screen or an external utility to design these types of waveforms.

Parameters

Name	Range	Type	Default	Description
<deviation>	10e-3 to 100e6	Numeric	100e3	Programs the deviation range around the carrier frequency in units of Hz.

Response

The **WX2182** will return the present deviation frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

FM:FUNCTion:SHAPE(SINusoid|TRIangle|SQUare|RAMP)(?)

Description

This command will select one of the waveform shapes as the active modulating waveform.

Parameters

Name	Type	Default	Description
SINusoid	Discrete	SIN	Selects the sine shape as the modulating waveform
TRIangle	Discrete		Selects the triangular shape as the modulating waveform
SQUare	Discrete		Selects the square shape as the modulating waveform
RAMP	Discrete		Selects the ramp shape as the modulating waveform

Response

The **WX2182** will return SIN, TRI, SQU, or RAMP depending on the selected function shape setting.

FM:FREQUency<fm_freq>(?)

Description

This command will set the modulating wave frequency for the built-in standard modulating waveform library.

Parameters

Name	Range	Type	Default	Description
<fm_freq>	10e-3 to	Numeric	10e3	Programs the frequency of the modulating waveform in units of Hz. Only the frequency of the built-in standard

350e3

modulating waveforms is affected.

Response

The **WX2182** will return the present modulating waveform frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

FM:MARKer<frequency>(?)**Description**

This function programs marker frequency position. An FM marker can be placed inside the following range: (carrier frequency \pm deviation frequency / 2). The marker pulse is output from the SYNC output connector.

Parameters

Name	Range	Type	Default	Description
<frequency>	10e3 to 250e6	Numeric	505e3	Programs the marker frequency position in units of Hz.

Response

The **WX2182** returns the present marker frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

Sweep Modulation Programming

Use the following command for programming the sweep parameters. Sweep control is internal. The frequency will sweep from start to stop frequencies at an interval determined by the sweep time value and controlled by a step type determined by the sweep step parameter.

There are two sweep modes: Linear, where the step of the generator increments from start-to-stop frequency is linear; and Logarithmic, where the step of the generator increments from start-to-stop frequency is logarithmic.

The commands for programming the frequency sweep function are described below.

SWEep:FREQuency<start_freq>(?)

Description

This specifies the sweep start frequency. The **WX2182** will normally sweep from start-to-stop frequencies. However, if the sweep direction is reversed, the output will sweep from stop-to-start frequencies. The start-and-stop frequencies may be programmed freely throughout the frequency of the standard waveform frequency range.

Parameters

Name	Range	Type	Default	Description
<start_freq>	10e3 to 250e6	Numeric	10e3	Programs the sweep start frequency. Sweep start is programmed in units of Hz.

Response

The **WX2182** will return the present sweep start frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

SWEep:FREQuency:STOP<stop_freq>(?)

Description

This specifies the sweep stop frequency. The **WX2182** will normally sweep from start-to-stop frequencies. However, if the sweep direction is reversed, the output will sweep from stop-to-start frequencies. The start-and-stop frequencies may be programmed freely throughout the frequency of the standard waveform frequency range.

Parameters

Name	Range	Type	Default	Description
<stop_freq>	10e3 to 250e6	Numeric	1e6	Programs the sweep stop frequency. Sweep stop is programmed in units of Hz.

Response

The **WX2182** will return the present sweep stop frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

SWEep:TIME<time>(?)

Description

This specifies the time that will take the **WX2182** to sweep from start-to-stop frequencies. The time does not depend on the sweep boundaries, as it is automatically adjusted by the software to the required interval. At the end of the sweep cycle, the output waveform maintains the sweep stop frequency setting, except if the **WX2182** is in continuous run mode, where the sweep repeats itself continuously.

Parameters

Name	Range	Type	Default	Description
<time>	1.4e-6 to 40	Numeric	1e-3	Programs the sweep time. Sweep time is programmed in units of s.

Response

The **WX2182** will return the present sweep time. The returned value will be in standard scientific format (for example: 100ms would be returned as 100e-3 – positive numbers are unsigned).

SWEep:DIRection(UP|DOWN)(?)

Description

This specifies if the **WX2182** output will sweep from start-to-stop (UP) or from stop-to-start (DOWN) frequencies. Sweep time does not affect the sweep direction and frequency limits. At the end of the sweep cycle, the output waveform normally maintains the sweep stop frequency setting, but will maintain the start frequency if the DOWN option is selected, except if the **WX2182** is in continuous run mode where the sweep repeats itself continuously.

Parameters

Name	Type	Default	Description
UP	Discrete	UP	Selects the sweep up direction
DOWN	Discrete		Select the sweep down direction

Response

The **WX2182** will return UP, or DOWN depending on the selected direction setting.

SWEep:SPACing(LINear|LOGarithmic)(?)

Description

This specifies the sweep step type. Two options are available: logarithmic or linear. In linear, the incremental steps between the frequencies are uniform throughout the sweep range. Logarithmic type defines logarithmic spacing throughout the sweep start and stop settings.

Parameters

Name	Type	Default	Description
LINear	Discrete	LIN	Selects the linear sweep spacing
LOGarithmic	Discrete		Select the logarithmic sweep spacing

Response

The **WX2182** will return LIN or LOG, depending on the selected spacing setting.

SWEep:MARKer<frequency>(?)

Description

This function programs marker frequency position. Sweep marker can be placed in between the start and the stop frequencies. The marker pulse is output from the SYNC output connector.

Parameters

Name	Range	Type	Default	Description
<frequency>	10e3 to 250e6	Numeric	505e3	Programs the marker frequency position in units of Hz.

Response

The **WX2182** will return the present marker frequency value. The returned value will be in standard scientific format (for example: 100mHz would be returned as 100e-3 – positive numbers are unsigned).

Pulse Waveform Programming

Use the following commands for programming pulse waveforms and pulse parameters. The pulse is created digitally. However, it closely simulates an analog pulse generator, so pulse parameters are programmed just as they would be programmed on a dedicated pulse generator instrument. Just keep in mind that since this is a digital instrument, there are some limitations to the pulse design that evolve from the fact that the best resolution is one sample clock interval. Also, remember that the pulse is created digitally in the arbitrary memory and therefore, its smallest incremental step has a maximum value limitation as specified in Appendix A. Figures 4-1 through 4-3 show how the pulse commands affect the shape of the pulse when placed in Single, Delayed and Double pulse modes. The pulse commands are summarized in Table 4-12.

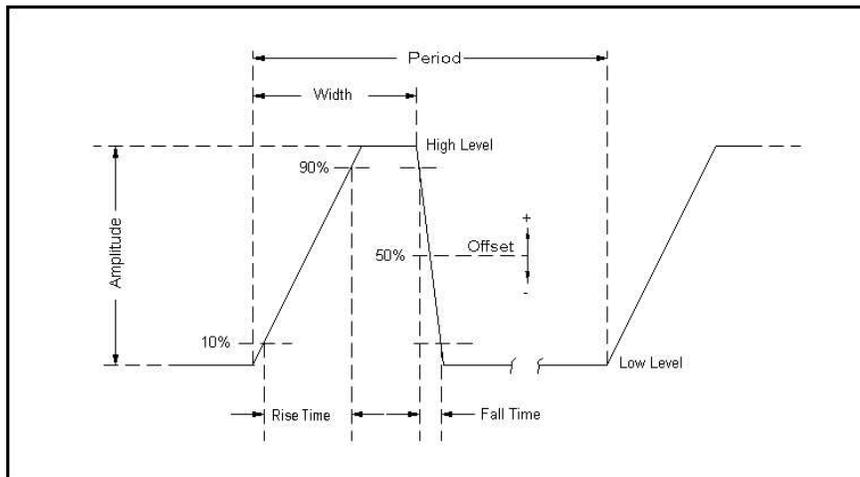


Figure 4-1: Single Pulse Parameters

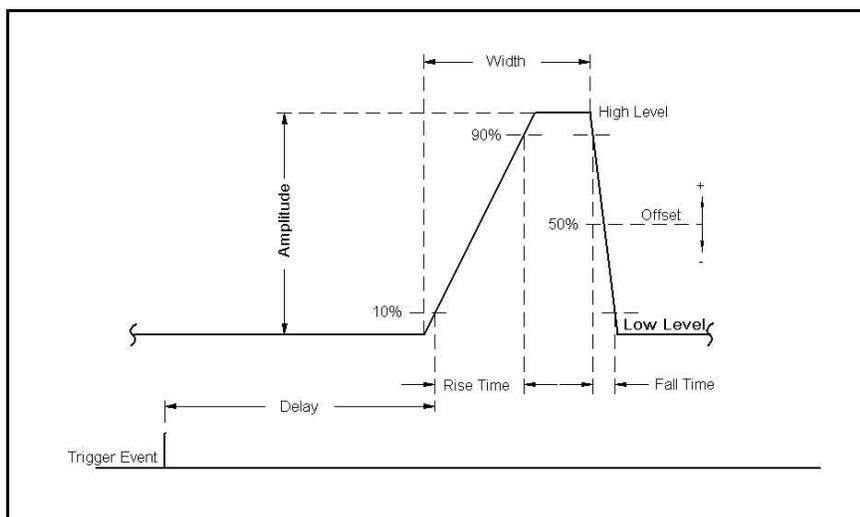


Figure 4-2: Delayed Pulse Parameters

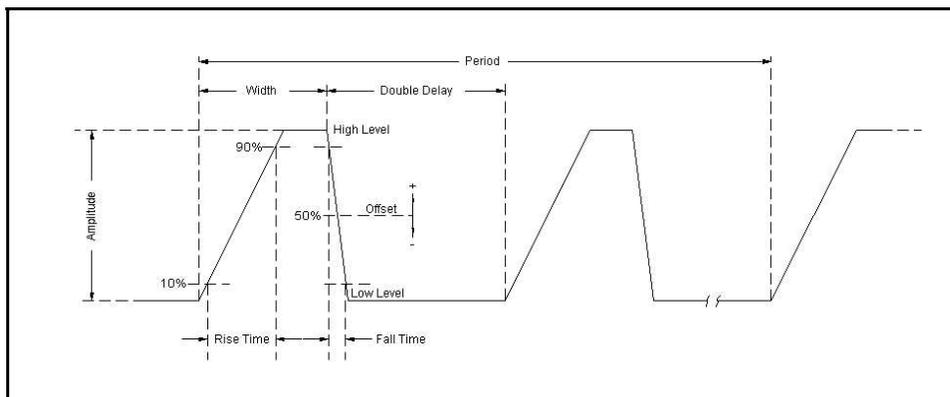


Figure 4-2: Double Pulse Parameters

Table 4-12: Pulse Waveform Commands Summary

Keyword	Parameter Form	Default	Notes
:PULSe			
:CONFigure	TIME PERCent	TIME	
:DELay	1e-9 to 1s	1e-3	Delay in sec
:PERCent	0 .01 to 99.99	10	Delay in %
:DOUBle			
:DELay	1e-9 to 1s	1e-3	Double delay in sec
:PERCent	0 .01 to 99.99	10	Delay in %
:LEVel			
[:CONTRol]	HLOW AOFFset POSitive NEGative	HLOW	
:HIGH	-2.450 to 2.5	1	
:LOW	-2.5 to 2.450	0	
:AMPLitude	50e-3 to 2 MINimum MAXimum	0.5	Amplitude in V
:OFFSet	-1.5 to 1.5 MINimum MAXimum	0	DC offset in volts
:MODE	SINGle DELayed DOUBle	SING	
:POLarity	NORMal COMPlément INVerted	NORM	
:PERiod	80e-9 to 1e6 (80e-9 to 2e6 with option -1)	10e-3	
:TRANsition			
[:STATe]	FAST LINear SYMMetrical	FAST	Transition mode
[:LEADing]	1e-9 to 100e-3	1e-3	Rise time in sec
:PERCent	0 .01 to 99.99	10	Rise time in %
:TRAILing	1e-9 to 100e-3	1e-3	Fall time in sec
:PERCent	0 .01 to 99.99	10	Fall time in %
:WIDTh	1e-9 to 1s	2e-3	Width in sec
:PERCent	0 .01 to 99.99	20	Width in %

PULSe:CONFigure{TIME|PERCent}(?)

Description

In applications where an absolute setting of a certain pulse parameter is required, it is recommended to select the time option. This means that the parameter can be programmed individually in units of time and will retain the programmed value, regardless of the pulse period setting. The percent option is useful for applications that require a certain relationship between the period and the individual parameter, such as width-to-period or rise-time-to-period. Use this command to configure the generator for one of these options.

Parameters

Name	Type	Default	Description
TIME	Discrete	TIME	Enables the programming of pulse parameters in units of time (seconds)
PERCent	Discrete		Enables the programming of certain pulse parameters in units of percent. The ratio is computed in reference to the period frequency. For example, if the period is set to 100 ms and the width is programmed to 10%, the width will remain 10% of the programmed period, (10 ms in this example) but will be automatically adjusted to 15 ms if the period is changed to 150 ms.

Response

The **WX2182** will return TIME or PERC depending on the present pulse configuration setting.

PULSe:DELAy<delay>(?)

Description

This command programs the delayed interval of which the output idles on the low level, until the first transition to high level. The delay is measured from the trigger transition to the first pulse transition. Note that this delay does not include the system delay error that is specified in Appendix A. Also note that the only case where the delay can exceed the value of the period setting is in triggered mode, where the external trigger intervals determine the period of the pulse.

Parameters

Name	Range	Type	Default	Description
<delay>	0, 1e-9 to 1	Numeric	0	Will set the delay time interval in units of seconds. As shown in Figure 5-2, the delay is measured from trigger transition to the first pulse transition. Puls:del 0 implies that delay is off.

Response

The **WX2182** will return the pulse delay value in units of seconds.

PULSe:DELAy:PERCent<delay>(?)

Description

This command will program the delayed interval of which the output idles on the low level, until the first transition to high level. The delay is measured from the first external trigger transition to the first pulse transition. Note that this delay does not include the system delay error (200 sample clock periods + 50 ns, typical trigger input to analog output). Also note that the only case where the delay can exceed the value of the period setting is in triggered mode, where the external trigger intervals determine the period of the pulse.

Parameters

Name	Range	Type	Default	Description
------	-------	------	---------	-------------

<delay> 0.01 to 99.99 Numeric 0 Will set the delay time interval in units of percent. As shown in Figure 5-2, the delay is measured from trigger transition to the first pulse transition.

Response

The **WX2182** will return the pulse delay value in units of %.

PULSe:DOUBle:DELAy<delay>(?)

Description

This command will program the delay between two adjacent pulses when the double mode is selected. Otherwise, the double pulse delay has no effect on the pulse structure. Note that the only case where the delay can exceed the value of the period setting is in triggered mode, where the trigger interval determines the period of the pulse. Double pulse building block parameters are shown in Figure 5-3.

Parameters

Name	Range	Type	Default	Description
<delay>	0 to 10	Numeric	200e-6	Will set the delay between two adjacent pulses for the double pulse mode only. The delay is programmed in units of seconds and is measured from the last transition of the first pulse to the first transition of the second pulse.

Response

The **WX2182** will return the present double pulse delay value in units of seconds.

PULSe:DOUBle:DELAy:PERCent<delay>(?)

Description

This command will program the delay between two adjacent pulses when the double mode is selected. Otherwise, the double pulse delay has no effect on the pulse structure. Note that the only case where the delay can exceed the value of the period setting is in triggered mode, where the trigger interval determines the period of the pulse. Double pulse building block parameters are shown in Figure 5-3.

Parameters

Name	Range	Type	Default	Description
<delay>	0.01 to 99.99	Numeric	10	Will set the delay between two adjacent pulses for the double pulse mode only. The delay is programmed in units of percent and is measured from the last transition of the first pulse to the first transition of the second pulse.

Response

The **WX2182** will return the present double pulse delay value in units of percent.

PULSe:LEVel{HLOW|AOFFset|POSitive|NEGative} (?)

Description

This command will determine how the pulse levels are programmed. Pulse level mode options are: High/Low, Amplitude/Offset, Positive and Negative.

Parameters

Name	Type	Default	Description
HLOW	Discrete	HLOW	Programs pulse level using high level and low level parameters.
AOFFset	Discrete		Programs pulse level using the amplitude and offset

parameters. When the offset is left at 0 V settings (default), amplitude changes modifies the pulse level symmetrically about the 0 V level.

POSitive	Discrete	Programs pulse level using the high level parameters. The low level remains at 0 V at all times.
NEGative	Discrete	Programs pulse level using the low level parameters. The high level remains at 0 V at all times.

Response

The **WX2182** will return HOLW, AOFF, POS or NEG depending on the present pulse level mode setting.

PULSe:LEVel:HIGH<high_level>(?)

Description

This command programs the high level amplitude of the pulse waveform. The high level is calibrated when the load impedance is 50 Ω.

Parameters

Name	Range	Type	Default	Description
<high_level>	-2.450 to 2.500	Numeric	1	Will set the high level of the pulse waveform in units of volts.

Response

The **WX2182** will return the present high-level value. The returned value will be in standard scientific format (for example: 100mV would be returned as 100e-3 – positive numbers are unsigned).

PULSe:LEVel:LOW<low_level>(?)

Description

This command programs the low level amplitude of the pulse waveform. The low level is calibrated when the load impedance is 50 Ω.

Parameters

Name	Range	Type	Default	Description
<low_level>	-2.500 to 2.450	Numeric	0	Will set the low level of the pulse waveform in units of volts.

Response

The **WX2182** will return the present low-level value. The returned value will be in standard scientific format (for example: 100mV would be returned as 100e-3 – positive numbers are unsigned).

PULSe:LEVel:AMPLitude<ampl>(?)

Description

This command programs the peak-to-peak amplitude of the pulse waveform. The amplitude is calibrated when the source impedance is 50 Ω. Note that this value is a duplication of the volt:ampl parameter and therefore, modifying this parameter in the pulse menu will automatically modify the amplitude setting for the other instrument functions.

Parameters

Name	Range	Type	Default	Description
------	-------	------	---------	-------------

<ampl>	50e-3 to 2	Numeric	0.5	Will set the amplitude of the pulse waveform in units of volts. Amplitude setting is always peak-to-peak. Offset and amplitude settings are independent, providing that the offset + amplitude do not exceed the amplitude window, as specified in Appendix A.
--------	------------	---------	-----	--

Response

The **WX2182** will return the present pulse amplitude value. The returned value will be in standard scientific format (for example: 100mV would be returned as 100e-3 – positive numbers are unsigned).

PULSe:LEVel:OFFset<offs>(?)

Description

This command programs the offset amplitude of the pulse waveform. The offset is calibrated when the source impedance is 50Ω. Note that this value is a duplication of the volt:offs parameter and therefore, modifying this parameter in the pulse menu will automatically modify the offset setting for the other instrument functions.

Parameters

Name	Range	Type	Default	Description
<offs>	-1.5 to 1.5	Numeric	0	Will set the offset of the pulse waveform in units of volts. Offset and amplitude settings are independent providing that the offset + amplitude do not exceed the specified window.

Response

The **WX2182** will return the present pulse offset value. The returned value will be in standard scientific format (for example: 100mV would be returned as 100e-3 – positive numbers are unsigned).

PULSe:MODE{SINGle|DELayed|DOUBle}(?)

Description

This command will program the mode of the pulse. Pulse mode options are: Single pulse, Delayed pulse and Double pulse. These modes are depicted in Figures 5-1 through 5-3.

Parameters

Name	Type	Default	Description
SINGle	Discrete	SING	Programs single pulse output, which generates normal pulses
DELayed	Discrete		Programs a delayed pulse mode, which generates normal pulses that are delayed from the SYNC output
DOUBle	Discrete		Programs a double pulse mode, which generates a pair of single pulses that are displaced by a double delay period

Response

The **WX2182** will return SING, DEL or DOUB depending on the present pulse mode setting.

PULSe:POLarity{NORMal|COMPLemented|INVerted}(?)

Description

This command will program the polarity of the pulse in reference to the baseline level. The polarity options are: Normal - where the pulse is generated exactly as programmed, Inverted - where the pulse is inverted about the 0 level base line and Complemented - where the pulse is inverted about its mid-amplitude axis.

Parameters

Name	Type	Default	Description
NORMAL	Discrete	NORM	Programs normal pulse output
COMPLEMENTED	Discrete		Programs complemented pulse output
INVERTED	Discrete		Programs an inverted pulse output

Response

The **WX2182** will return NORM, COMP or INV depending on the present polarity setting.

PULSe:PERiod<period>(?)

Description

This command will program the pulse repetition rate (period). Note that with the sum of all parameters, including the pulse width and fall time can not exceed the programmed pulse period and therefore, it is recommended that the pulse period be programmed first, before all other pulse parameters. Note that by selecting the double pulse mode, the pulse period remains unchanged.

Parameters

Name	Range	Type	Default	Description
<period>	80e-9 to 1e6	Numeric	10e-3	Programs the period of the pulse waveform in units of seconds.

Response

The **WX2182** will return the present pulse period value in units of seconds.

PULSe:TRANSition:STATE{FAST|LINEar|SYMMetrical} (?)

Description

This command will place the pulse output in one of three transition options: 1) Fast - the level transitions from high-to-low or low-to-high at the fastest rate that the generator can produce 2) Linear - the level transitions linearly at a programmed rate from low-to-high and from high-to-low and each transition can be programmed to a different rate and 3) Symmetrical - the leading and trailing edges transition exactly at the same rate.

Parameters

Name	Type	Default	Description
FAST	Discrete	FAST	Programs the fast transitions mode. In this mode, the leading and trailing edges will transition as fast as the instrument allows.
LINEar	Discrete		Selects linear transitions. Note that unlike analog pulse generators, the WX2182 can be programmed freely within the specified boundaries, without the limitation of transition ranges commonly attributed to analog pulse generators.
SYMMetrical	Discrete		Programs a special mode where the transitions are symmetrical for both the leading and trailing edges (lead time = trail time). In this case, the value of the lead-time is automatically attributed to the trail time and the value of the trail time has no effect on the pulse shape.

Response

The **WX2182** will return FAST, LIN or SYMM depending on the present transition mode setting.

PULSe:TRANsition<l_edge>(?)

Description

This command will program the interval it will take the leading edge of the pulse to transition from its low- to high-level settings. The parameter is programmed in units of seconds. Unlike analog pulse generators, the **WX2182** can be programmed freely within the specified boundaries, without the limitation of transition ranges that are commonly attributed to analog pulse generators. Note that this parameter will affect the instrument only when the pulse transition mode is set to linear.

Parameters

Name	Range	Type	Default	Description
<l_edge>	1e-9 to 100e-3	Numeric	1e-3	Will set the leading-edge transition time parameter in units of seconds. Note that the sum of all parameters, including transition times, must not exceed the programmed pulse period.

Response

The **WX2182** will return the present leading-edge transition time value in units of seconds.

PULSe:TRANsition:PERCent<l_edge>(?)

Description

This command will program the interval it will take the leading edge of the pulse to transition from its low- to high-level settings. The parameter is programmed in units of percent of the pulse period. Note that this parameter will affect the instrument only when the pulse transition mode is set to linear and when the pulse configuration is programmed to percent.

Parameters

Name	Range	Type	Default	Description
<l_edge>	0.01 to 99.99	Numeric	10	Will set the leading-edge transition time parameter in units of %. Note that the sum of all parameters, including transition times must not exceed 100%.

Response

The **WX2182** will return the present leading-edge transition time value in units of %.

PULSe:TRANsition:TRAIling<t_edge>(?)

Description

This command will program the interval it will take the trailing edge of the pulse to transition from its high- to low-level settings. The parameter is programmed in units of seconds. Unlike analog pulse generators, the **WX2182** can be programmed freely within the specified boundaries, without the limitation of transition ranges that are commonly attributed to analog pulse generators. Note that this parameter will affect the instrument only when the pulse transition mode is set to linear.

Parameters

Name	Range	Type	Default	Description
<T_edge>	1e-9 to 100e-3	Numeric	1e-3	Will set the trailing-edge transition time parameter in units of seconds. Note that the sum of all parameters, including transition times, must not exceed the programmed pulse period.

Response

The **WX2182** will return the present trailing edge transition time value in units of seconds.

PULSe:TRANSition:TRAILing:PERCent<t_edge>(?)

Description

This command will program the interval it will take the trailing edge of the pulse to transition from its high- to low-level settings. The parameter is programmed in units of percentages of the pulse period. Note that this parameter will affect the instrument only when the pulse transition mode is set to linear and when the pulse configuration is programmed to percent.

Parameters

Name	Range	Type	Default	Description
<l_edge>	0.01 to 99.99	Numeric	10	Will set the trailing-edge transition time parameter in units of %. Note that the sum of all parameters, including transition times, must not exceed 100%.

Response

The **WX2182** will return the present leading edge transition time value in units of %.

PULSe:WIDTh<width>(?)

Description

This command will program the pulse width value. Figures 5-1 through 5-3 show how the pulse width affects the shape of the pulse. Note that the only case where the pulse width can exceed the value of the period setting is in triggered mode, where the trigger determines the period of the pulse.

Parameters

Name	Range	Type	Default	Description
<width>	1e-9 to 1	Numeric	2e-3	Will set the width of pulse in units of seconds. Note that the sum of all parameters, including the pulse width, must not exceed the programmed pulse period.

Response

The **WX2182** will return the present pulse width value in units of seconds

PULSe:WIDTh:PERCent<width>(?)

Description

This command will program the pulse width value. Figures 5-1 through 5-3 show how the pulse width affects the shape of the pulse. Note that this parameter will affect the instrument only when the pulse transition mode is set to linear and when the pulse configuration is programmed to percent.

Parameters

Name	Range	Type	Default	Description
<l_edge>	0.01 to 99.99	Numeric	20	Will set the pulse width parameter in units of %. Note that the sum of all parameters, including transition times, must not exceed 100%.

Response

The **WX2182** will return the present leading edge transition time value in units of %.

LAN System Configuration Commands

Use these commands to configure IP addresses and other LAN parameters. It is strongly recommended that this be done with a computer specialist, because incorrect programming may place the instrument in an unknown configuration which will not communicate as expected with the network. The LAN commands are summarized in Table 4-13.



NOTE

Last LAN configuration settings will remain as long as the instrument is turned on. New LAN configuration settings will take effect only after the instrument has been powered off and on.

Table 4-13: LAN Commands Summary

Keyword	Parameter Form	Default	Notes
:SYSTem			
:IP			
[:ADDRESS]	<IP_address>		
:MASK	<mask>		
:GATeway	<gate_way>		
:BOOTp	OFF ON 0 1	0	
HOSTname:	<host_name>		
:KEEPlive			
:STATe	OFF ON 0 1	1	
:TIMEout	2 to 300	45	
:PROBes	2 to 10	2	

SYSTem:IP<ip_adrs>(?)

Description

This command programs the IP address for LAN operation. The same command is performed from the front panel Utility -> Remote Interface -> LAN menu. Note that after you use this command the power to the WX2182 must be recycled before the new address takes precedence.

Parameters

Name	Range	Type	Description
<ip_adrs>	0 to 255	String	Programs the IP address for LAN operation. The current IP address can be observed on the TCP/IP Network Properties display.

Response

The **WX2182** will return the present IP address value similar to the following: 192.168.0.245

SYSTem:IP:MASK<mask_adrs>(?)

Description

This command programs the subnet mask address for LAN operation. The programming is performed from the front panel Utility -> Remote Interface -> LAN menu.

Parameters

Name	Range	Type	Description
<mask_adrs>	0 to 255	String	Programs the subnet mask address for LAN operation. Programming must be performed from the front panel. The current IP address can be observed on the TCP/IP Network Properties display.

Response

The **WX2182** will return the present IP address value similar to the following: 255.255.255.0

SYSTem:IP:BOOTp{OFF|ON|0|1}(?)

Description

Use this command to toggle BOOTP mode on and off.

Parameters

Range	Type	Default	Description
0-1	Discrete	0	Toggles BOOTP mode on and off. When on, the IP address is administrated automatically by the system.

Response

The **WX2182** will return 0 or 1, depending on the present BOOTP setting.

SYSTem:IP:GATeway<gate_adrs>(?)

Description

This command programs the gateway address for LAN operation. The programming is performed from the

front panel Utility -> Remote Interface -> LAN menu.

Parameters

Name	Range	Type	Description
<gate_adrs>	0 to 255	String	Programs the gateway address for LAN operation. Programming must be performed from the front panel. The current IP address can be observed on the TCP/IP Network Properties display.

Response

The **WX2182** will return the present IP address value similar to the following: 0.0.0.0

SYSTEM:IP:HOSTname<name>(?)

Description

This command programs the host name address for LAN operation. The programming is performed in the factory and it is highly suggested that users do not change the host name without first consulting an Tabor customer service person.

Parameters

Name	Type	Description
<name>	String	Programs the host name for LAN operation.

Response

The **WX2182** will return a string containing the host name. String length is 16 characters.

SYSTEM:KEEPalive:STATE{OFF|ON|0|1}(?)

Description

Use this command to toggle the keep-alive mode on and off. The keep-alive mode assures that LAN connection remains uninterrupted throughout the duration of the LAN interfacing.

Parameters

Range	Type	Default	Description
0-1	Discrete	1	Toggles the keep-alive mode on and off. When on, the WX2182 constantly checks for smooth LAN connection at intervals programmed by the syst:keep:time command. The LAN will be probed as many times as programmed by syst:keep:prob parameter to check if there is an interruption in the LAN communication. When communication fails, the WX2182 reverts automatically to local (front panel) operation.

Response

The **WX2182** will return 0 or 1, depending on the present keep-alive setting.

SYSTEM:KEEPalive:TIMEout<time_out>(?)

Description

This command programs the keep-alive time-out. The keep-alive mode assures that LAN connection remains uninterrupted throughout the duration of the LAN interfacing.

Parameters

Name	Range	Type	Default	Description
------	-------	------	---------	-------------

<time_out>	2 to 300	Numeric	45	Programs the keep-alive time out in units of seconds. The time-out period is initiated when the LAN is idle for more than the time-out period. The LAN will be probed as many times as programmed by syst:keep:prob parameter to check if there is an interruption in the LAN communication. When communication fails, the WX2182 reverts automatically to local (front panel) operation.
------------	----------	---------	----	--

Response

The **WX2182** will return the present keep-alive time-out value.

SYSTem:KEEPalive:PROBes<probes>(?)

Description

This command programs the number of probes that are used by the keep-alive sequence. The keep-alive mode assures that LAN connection remains uninterrupted throughout the duration of the LAN interfacing.

Parameters

Name	Range	Type	Default	Description
<probes>	2 to 10	Numeric	2	Programs the number of probes that are used by the keep-alive sequence. The time-out period is initiated when the LAN is idle for more than the time-out period and the LAN will be probed as many times as programmed by this parameter to check if there is an interruption in the LAN communication. When communication fails, the WX2182 reverts automatically to local (front panel) operation.

Response

The **WX2182** will return the present keep-alive number of probes.

Store/Recall Commands

Use these commands to store instrument settings. The store command collects the current front panel setting and parameters and stores them in a dedicated memory cell. The store operation can include front panel settings and current waveforms but, due to memory limitations, you may select to keep settings only without waveforms or waveforms only without settings. The store/recall commands are summarized in Table 4-14.

Table 4-14: Store/Recall Commands Summary

Keyword	Parameter Form	Default	Notes
:SYSTem			
:STORe			
:CELL	1 to 9	1	
:CLEAr			Clears memory cell
:CONFig	SETup WAVE ALL	ALL	
:TARGet	INTernal USB	INT	
:UPDate			
:RECall			
:CELL	1 to 9	1	
:TARGet	INTernal USB	INT	
:UPDate			

SYSTem:STORe:CELL<cell_number>(?)

Description

This command selects a memory cell. The selected memory cell will become the target for the store operation. You may select to store front panel settings, waveforms or both.

Parameters

Name	Range	Type	Description
<cell_number>	1 to 9	Numeric (integer only)	Selects an active memory cell number. Consequent store commands will affect this cell only.

Response

The **WX2182** will return the active memory cell value.

SYSTem:STORe:CLEAr

Description

Use this command to clear the content of a specific memory cell. This will prepare the memory cell to accept new setup and waveform data.

SYSTem:STORe:CONFIg{SETup|WAVE|ALL}(?)

Description

Use this command to select what you intend to store in the active memory cell.

Parameters

Name	Type	Default	Description
SETup	Discrete		Selects front-panel configuration to be stored in the active memory cell.
WAVE	Discrete		Selects the current arbitrary waveform to be stored in the active memory cell.
ALL	Discrete	ALL	Will store both front-panel configuration and waveform in the active memory cell.

Response

The **WX2182** will return SET, WAVE, or ALL depending on the present configuration setting.

SYSTem:STORe:TARGet{INTernal|USB}(?)

Description

Use this command to select the target of your store operation. You may select between an internal flash memory that is limited in size and disk-on-key flash that you can attach to the front panel input. Selecting the internal option, you may store waveforms up to 100k long but external memory has no limitations except the physical size of the flash on the disk-on-key.

Parameters

Name	Type	Default	Description
INTernal	Discrete	INT	Selects the internal flash memory as the target for the store operation. Waveform size for this option is limited to 100k points.
USB	Discrete		Selects the front panel USB input as the target for the store operation. Waveform size for this option is limited only by the size of the disk-on-key flash.

Response

The **WX2182** will return INT or USB, depending on the present store target setting.

SYSTem:STORe:UPDate

Description

Use this command to update the active memory cell with the front panel settings, waveforms, or both.

SYSTem:RECall:CELL<cell_number>(?)

Description

This command selects a memory cell. The selected memory cell will become the source for the recall operation. You may select to recall front panel settings, waveforms, or both.

Parameters

Name	Range	Type	Description
<cell_number>	1 to 9	Numeric (integer)	Selects an active memory cell number. Consequent

only) recall commands will affect this cell only.

Response

The **WX2182** will return the active memory cell value.

SYSTEM:RECall:TARGet{INTernal|USB}(?)

Description

Use this command to select the source of your recall operation. You may select between an internal flash memory that is limited in size and disk-on-key flash that you can attach to the front panel input. Selecting the internal option, you may recall waveforms up to 100k long, but external memory has no limitations except the physical size of the flash on the disk-on-key.

Parameters

Name	Type	Default	Description
INTernal	Discrete	INT	Selects the internal flash memory as the source for the recall operation. Waveform size for this option is limited to 100 k points.
USB	Discrete		Selects the front panel USB input as the source for the recall operation. Waveform size for this option is limited only by the size of the disk-on-key flash.

Response

The **WX2182** will return INT or USB, depending on the present recall source setting.

SYSTEM:RECall:UPDate

Description

Use this command to update the front panel and arbitrary memory with the information stored in the active memory cell.

System Commands

The system-related commands are not related directly to waveform generation but are an important part of operating the WX2182. Use these commands to reset the instrument and query its system settings.

Table 4-15: Store/Recall Commands Summary

Keyword	Parameter Form	Default
:RESet (*RST)		
:SYSTem		
:ERRor?		
:LOCal		
:VERsion?		
:INFOrmation		
:CALibration?		
:MODEl?		
:SERial?		
:HARDware?		
*RST		
*TRG		
*OPC?		
*STB?		
*IDN?		
*OPT?	116 for 1 ch, 16M; 132 for 1 ch, 32M; 216 for 2 ch, 16M; 232 for 2 ch, 32M	

RESet, or *RST

Description

This command will reset the WX2182 to its factory defaults.

SYSTem:ERRor?

Description

Query only. This query will interrogate the WX2182 for programming errors.

Description

The WX2182 will return error code. Error messages are listed below.

Error Messages

In general, whenever the WX2182 receives an invalid SCPI command, it automatically generates an error. Errors are stored in a special error queue and may be retrieved from this buffer one at a time. Errors are retrieved in first-in-first-out (FIFO) order. The first error returned is the first error that was stored. When you have read all errors from the queue, the generator responds with a 0, "No error" message.

If more than 30 errors have occurred, the last error stored in the queue is replaced with -350, "Queue Overflow". No additional errors are stored until you remove errors from the queue. If no errors have occurred when you read the error queue, the generator responds with 0, "No error".

The error queue is cleared when power has been shut off or after a *CLS command has been executed. The *RST command does not clear the error queue. Use the following command to read the error queue:

SYSTem:ERRor?

Errors have the following format (the error string may contain up to 80 characters):

102,"Syntax error".

A complete listing of the errors that can be detected by the generator is given below.

- 100,"Command error". When the generator cannot detect more specific errors, this is the generic syntax error used.
-
- 101,"Invalid Character". A syntactic element contains a character, which is invalid for that type.
- 102,"Syntax error". Invalid syntax found in the command string.
- 103,"Invalid separator". An invalid separator was found in the command string. A comma may have been used instead of a colon or a semicolon. In some cases where the generator cannot detect a specific separator, it may return error -100 instead of this error.
- 104,"Data type error". The parser recognized a data element different than allowed.
-
- 108,"Parameter not allowed". More parameters were received

than expected for the header.

- 109, "Missing parameter". Too few parameters were received for the command. One or more parameters that were required for the command were omitted.
- 128, "Numeric data not allowed". A legal numeric data element was received, but the instrument does not accept one in this position.
- 131, "Invalid suffix". A suffix was incorrectly specified for a numeric parameter. The suffix may have been misspelled.
- 148, "Character data not allowed". A character data element was encountered where prohibited by the instrument.
- 200, "Execution error". This is the generic syntax error for the instrument when it cannot detect more specific errors. Execution error as defined in IEEE-488.2 has occurred.
- 221, "Setting conflict". Two conflicting parameters were received which cannot be executed without generating an error.
- 222, "Data out of range". Parameter data, which followed a specific header, could not be used because its value is outside the valid range defined by the generator.
- 224, "Illegal parameter value". A discrete parameter was received which was not a valid choice for the command. An invalid parameter choice may have been used.
- 250, "Mass storage error". General error related to mass memory storage. Mass memory errors relate to the internal flash, working memory and external USB stick.
- 251, "Missing mass storage". This error will generate when attempting to store settings on an external USB stick but the media is not mounted.
- 252, "Write buffer overflow". This will occur when the writable buffer exceeds its limitation. Error relates to mass storage only.
-
- 253, "Cannot create a directory". Will be generated when the external media is incapable of creating a specific directory.
- 254, "Cannot delete file or directory". An attempt to delete a file

or directory has failed.

- 255, "File extension not found". Store and recall files are expected to have certain extensions. Files that do not have the correct extension will generate this error.
- 256, "File name not found". An attempt to read a file name that does not exist from an external media.
- 257, "File type not supported". Store and recall files are expected to have certain format. Files that do not have the correct format will generate this error.
- 258, "Invalid specified path". An unexpected file path encountered.
- 300, "Device-specific-error". This is the generic device-dependent error for the instrument when it cannot detect more specific errors. A device-specific error as defined in IEEE-488.2 has occurred.
- 301, "Digital Pulse-specific-error". This is the generic device-dependent error for the instrument when it is attempting to construct a digital pulse but cannot detect more specific errors.
- 311, "Memory error". Indicates that an error was detected in the instrument's memory.
- 350, "Queue Overflow". The error queue is full because more than 30 errors have occurred. No additional errors are stored until the errors from the queue are removed. The error queue is cleared when power has been shut off, or after a *CLS command has been executed.
- 410, "Query INTERRUPTED". A command was received which sends data to the output buffer, but the output buffer contained data from a previous command (the previous data is not overwritten). The output buffer is cleared when power is shut off or after a device clear has been executed.

SYSTEM:LOCAL

Description

This command will deactivate the active interface and will restore the WX2182 to local (front panel) operation.

SYSTEM:VERSION?

Description

Query only. This query will interrogate the WX2182 for its current firmware version. The firmware version is automatically programmed to a secure location in the flash memory and cannot be modified by the user except when performing firmware update.

Response

The WX2182 will return the current firmware version code in a format similar to the following: 1.15

SYSTEM:INFORMATION:CALIBRATION?

Description

Query only. This query will interrogate the instrument for its last calibration date.

Response

The generator will return the last calibration date in a format similar to the following: 24 Sep 2010 (10 characters maximum).

SYSTEM:INFORMATION:MODEL?

Description

Query only. This query will interrogate the instrument for its model number in a format similar to the following: WX2182-116. The model number is programmed to a secure location in the flash memory and cannot be modified by the user.

Response

The generator will return its model number WX2182-116, WX2182-132, WX2182-216, or WX2182-232.

SYSTEM:INFORMATION:SERIAL?

Description

Query only. This query will interrogate the instrument for its serial number. The serial number is programmed to a secure location in the flash memory and cannot be modified by the user.

Response

The generator will return its serial number in a format similar to the following: 2xxxxx

IEEE-STD-488.2 Common Commands and Queries

Since most instruments and devices in an ATE system use similar commands that perform similar functions, the IEEE-STD-488.2 document has specified a common set of commands and queries that all compatible devices must use. This avoids situations where devices from various manufacturers use different sets of commands to enable functions and report status.

The IEEE-STD-488.2 treats common commands and queries as device dependent commands. For example, *TRG is sent over the bus to trigger the instrument. Some common commands and queries are optional, but most of them are mandatory.

The following is a complete listing of all common-commands and

queries, which are used by the WX2182

- ***RST** - Resets the generator to its default state.
- ***TRG** - Triggers the generator from the remote interface. This command affects the generator if it is first placed in the Trigger or Burst mode of operation and the trigger source is set to "BUS".
- ***CLS** - Clear the Status Byte summary register and all event registers.
- ***OPC?** - Returns "1" to the output buffer after all the previous commands have been executed. *OPC? is used for synchronization between a controller and the instrument using the MAV bit in the Status Byte or a read of the Output Queue. Reading the response to the *OPC? query has the advantage of removing the complication of dealing with service requests and multiple polls to the instrument. However, both the system bus and the controller handshake are in a temporary hold-off state while the controller is waiting to read the *OPC? query response.
- ***STB?** - Query the Status Byte summary register. The *STB? command is similar to a serial poll but is processed like any other instrument command. The *STB? command returns the same result as a serial poll, but the "request service" bit (bit 6) is not cleared if a serial poll has occurred.
- ***IDN?** - Query the generator's identity. The returned data is organized into four fields, separated by commas. The generator responds with its manufacturer and model number in the first two fields, and may also report its serial number and options in fields three and four. If the latter information is not available, the device must return an ASCII 0 for each.
- ***OPT?** - Returns the instrument option: 116, 132, 216 or 232.

Appendices

Appendix	Title	Page
A	Specifications.....	A-1

Appendix A Specifications

Instrument configuration

Characteristics	Description
WX218x-x	2.1 GS/s arbitrary waveform generator with two output paths, DC coupled 2V amplifier with >600 MHz analog bandwidth or, AC coupled 5dBm amplifier with 1.0 GHz analog bandwidth
WX2181	Single channel instrument with 16,000,000 waveform points
WX2181-1	Single channel instrument with 32,000,000 waveform points
WX2182	Dual channel instrument with 16,000,000 waveform points
WX2182-1	Dual channel instrument with 32,000,000 waveform points
WX Rack Mount	Rack mounting kit assembly
WX Sync Cable	Synchronization cable to synchronize two dual channel WX2182-x to form a four channel 2.1 GS/s arbitrary waveform generator system

Inter-channel offset control (Course tuning – Dual-channel versions only)

Characteristics	Description
Initial skew	<200 ps from 1 GS/s to 2.1 GS/s; <1 ns from 100 MSa/s to 1 GS/s; <10 ns below 100 MSa/s
Control	
Range	0 to n – 128 points; 0 to 80 points with external segment control (n = segment length)
Resolution	8 points
Accuracy	Same as sample clock accuracy

Inter-channel skew control (Fine Tuning – Dual-channel versions only)

Characteristics	Description
Initial skew	<200 ps from 1 GS/s to 2.1 GS/s; <1 ns from 100 MSa/s to 1 GS/s; <10 ns below 100 MSa/s
Control	
Range	-3 ns to +3 ns
Resolution	10 ps
Accuracy	±(10% of setting + 20 ps)

Waveform type

Characteristics	Description
Standard	A waveform is selected from a built in library. The standard waveform parameters are programmable
Arbitrary	Arbitrary waveform coordinates are downloaded and stored in memory segments. The arbitrary waveform parameters are programmable
Sequenced	Arbitrary waveforms are downloaded and stored in memory segments. The segments are arranged in a sequence table that step, loop, jump and nest on segments in a user-defined configuration. Conditional jump and nest pending an event signal
Advanced Sequences	Same functionality as described for sequenced waveforms except sequences are arranged in the sequence table
Modulated	A modulated waveform is calculated from a built in library of modulation schemes
Pulse	A pulse waveform is calculated and downloaded to the arbitrary waveform memory.

Run mode

Characteristics	Description
Continuous	A selected output function shape is output continuously
Self armed	No start commands are required to generate waveforms
Armed	The output dwells on a dc level and waits for an enable command and then the output waveform is output continuously; An abort command turns off the waveform
Triggered	A trigger signal activates a single-shot or counted burst of output waveforms and then the instrument waits for the next trigger signal
Normal mode	The first trigger signal activates the output; consecutive triggers are ignored for the duration of the output waveform
Override mode	The first trigger signal activates the output; consecutive triggers restart the output waveform regardless if the current waveform has been completed or not
Gated	A waveform is output when a gate signal is asserted. The waveform is repeated until the gate signal is de-asserted. Last period is always completed

Standard Waveforms

Characteristics	Description
General	Waveforms are computed and generated every time a standard waveform is selected.
Standard waveform library	Built-in, auto computed waveforms: sine, triangle, square, ramp, pulse, sinc, exponential rise, exponential decay, gaussian, noise and dc.
Standard waveform control	The standard waveform parameters can be adjusted to specific requirements. The waveform is re-computed with each parameter change.

Standard waveforms frequency Control

Characteristics	Description
Range	10 kHz to 250 MHz (Sine to 1GHz)
Resolution	8 digits
Accuracy	
Internal reference	≤1 ppm from 19°C to 29°C; 1ppm/°C below 19°C or above 29°C; ≤1 ppm/year aging rate
External reference	Same as accuracy and stability of the external reference. Reference is applied to the reference input

Arbitrary Waveforms

Characteristics	Description
General	Arbitrary Waveforms are created on a remote computer and downloaded to the arbitrary waveform memory through one of the available remote interfaces. The frequency of the waveform is calculated from its programmed sample clock value and the number of waveform points that were used for creating the waveform
Waveform length	320 to 16,000,000 points (320 to 32,000,000 with option -232), in multiples of 32 points
Number of waveforms	1 to 16,000
Dynamic waveform control	Software command or rear panel segment control input (D-sub, 8 bit lines)
Waveform jump timing	Coherent or asynchronous, selectable
DAC resolution	12 bits

Sequenced Waveforms

Characteristics	Description
General	Segments are grouped in a sequence table that links, loops and jumps to next in user-defined scenarios. Sequence steps are advanced on trigger events or remote commands. Each channel has its own sequence scenario
Sequence scenario	1 to 1,000 unique scenarios, programmed in sequence tables
Sequence table length	1 to 16k steps.
Step advance control	Auto, once (x "N") and stepped
Loop counter	
Segment loops	1 to 1,000,000 cycles, each segment
Sequence loops	1 to 1,000,000 (applies to "Once" sequence advance mode only)

Advanced Sequencing

Characteristics	Description
General	Enables the grouping of sequences into scenarios in a way that is similar to how segments are grouped in a sequence table. Each channel has its own advance sequencing generator
ASequence scenario	1 scenario, programmed in advanced sequence table
Dynamic advance sequence control	Software command or rear panel sequence control input (D-sub, 8 bit lines)
ASequence table length	1 to 1k steps
Step advance control	Auto, once and stepped
Once loop counter	1 to 1,000,000 cycles, each sequence

Arbitrary/sequenced waveforms Sample Clock Control

Characteristics	Description
Range	10 MSa/s to 2.1 GS/s , common or separate for each channel
Resolution	8 digits
Accuracy	
Internal reference	≤1 ppm from 19°C to 29°C; 1ppm/°C below 19°C or above 29°C; 1 ppm/year aging rate
External reference	Same as accuracy and stability of the external reference. Reference is applied to the reference input or sample clock input

Analog outputs

Characteristics	Description
General	DC-coupled amplified or Direct DAC or AC-coupled amplified output, selectable
Connector type	SMA
ON/OFF control	Output is turned On or OFF for each channel independently

RF, AC-coupled analog output

Characteristics	Description
Type of output	Single-ended ¹⁾
Impedance	50 Ω, typical
Amplitude control	Specified into 50 Ω, levels double into high impedance
Range	-5 dBm to 5 dBm
Resolution	3 digits
Accuracy	±(3% +0.5dBm)
Bandwidth	1.5 GHz, typical
Flatness	±1dB 4 MHz to 1 GHz, ±2dB to 1.5 GHz, typical

DC-coupled analog output

Characteristics	Description	
	Amplified output	Direct DAC output
Type of output	Single-ended ¹⁾ or differential	
Impedance	50 Ω , typical	
Amplitude control	Specified into 50 Ω , levels double into high impedance	
Range, single-ended	50 mVp-p to 2 Vp-p	50 mV to 500 mV
Range, differential	100 mVp-p to 4 Vp-p	100 mV to 1 Vp-p
Resolution	3 digits	
Accuracy, offset = 0 V	$\pm(3\% + 5 \text{ mV})$	
Offset control	Common mode, specified into 50 Ω , levels double into high impedance	
Range	-1.5 V to + 1.5 V	
Resolution	3 digits	
Accuracy	$\pm(5\% + 10 \text{ mV})$	
Rise/fall time (10% to 90%)	600 ps, typical	350 ps, typical
Bandwidth	600 MHz, typical (calculated)	1 GHz, typical (calculated)
Overshoot	5%, typical	15%, typical
Harmonic distortion ²⁾	-49 dBc, 1 Vp-p	-56 dBc, 0.5 Vp-p
Non harmonic distortion ²⁾	-69 dBc, 1 Vp-p, DC to 600 MHz	-64 dBc, 0.5 Vp-p, DC to 1 GHz
SCLK/2 spur ³⁾	1 Vp-p	0.5 Vp-p amplitude
200 MHz	-42 dBc	-63 dBc ⁴⁾
500 MHz	-40 dBc	-63 dBc ⁴⁾
800 MHz	-36 dBc	-63 dBc ⁴⁾
SCLK/2-f _{out} spur ³⁾	1 Vp-p	0.5 Vp-p ⁴⁾
200 MHz	-45 dBc	-67 dBc ⁴⁾
500 MHz	-42 dBc	-67 dBc ⁴⁾
800 MHz	-37 dBc	-55 dBc ⁴⁾
Phase Noise ²⁾	-90 dBc/Hz, 1 Vp-p, 10 kHz offset	-90 dBc/Hz, 0.5 Vp-p, 10 kHz offset

¹⁾ The unused output must be terminated with 50 Ω to ground

²⁾ offset=0 V, SCLK=2.1 GS/s, 32 points sine waveform (131.25 MHz output frequency), typical values

³⁾ offset=0 V, SCLK=2.1GS/s, arbitrary sine waveforms, typical values

⁴⁾ Measured with low pass filter option 81180A-F4G

RF, AC-coupled analog output (continued)

Characteristics	Description
Harmonic distortion ²⁾	-50 dBc
Non harmonic distortion ²⁾	-58 dBc, DC to 1.5 GHz
SCLK/2 spur ³⁾	
200 MHz	-68 dBc ⁴⁾
500 MHz	-68 dBc ⁴⁾
800 MHz	-68 dBc ⁴⁾
SCLK/2-f _{out} spur ³⁾	
200 MHz	-68 dBc ⁴⁾
500 MHz	-68 dBc ⁴⁾
800 MHz	-60 dBc ⁴⁾
Phase Noise ²⁾	-90 dBc/Hz, 10 kHz offset

¹⁾ The unused output can be left open

²⁾ SCLK=2.1 GS/s, 32 points sine waveform (131.25 MHz output frequency), 0 dBm, typical values

³⁾ SCLK=2.1GS/s, arbitrary sine waveforms, typical values, 0 dBm

⁴⁾ Measured with low pass filter option 81180A-F4G

SYNC output

Characteristics	Description
Connector type	SMA
Type of output	Single ended
Source	Channel 1 or channel 2
Waveform	Pulse (32 points width), WCOM (waveform duration pulse)
Impedance	50 Ω, typical
Amplitude	1.2 V, typical; doubles into high impedance
Variable position control	
Range	0 to segment length
Resolution	32 points
Rise/fall time	2 ns, typical
Variable Width control	
Range	32 points to segment length
Resolution	32 points

Marker outputs

Characteristics	Description
Connector type	SMB
Number of markers	Two markers per channel
Type of output	Differential (+) and (-) outputs
Impedance	50 Ω , typical
Level control	Specified into 50 Ω , levels double into high impedance
Voltage window	0V to 1.25 V, single-ended; 0V to 2.5 V, differential
Low level	0 V to 0.8 V, single-ended; 0 V to 1.6 V, differential
High level	0.5 V to 1.25 V, single-ended; 0 V to 2.5 V, differential
Resolution	10 mV
Accuracy	10% of setting
Width control	0 SCLK periods to segment length
Position control	0 to segment length in 4 points increments
Marker resolution	4 SCLK periods (programmed as part of the output waveform)
Initial delay ¹⁾	3.5 ns + 1 sample clock period, typical
Initial Skew between Marker 1 and Marker 2	<100 ps, typical
Variable delay control	Separate for each marker
Range	0 to 3 ns
Resolution	10 ps
Accuracy	$\pm(10\%$ of setting +20 ps)
Rise/fall time	1.0 ns, typical

¹⁾ Analog output to marker output

Trigger input

Characteristics	Description
Connector type	SMA
Drive	Channel 1, channel 2, or both
Input impedance	10 k Ω , typical
Polarity	Positive, negative, or both, selectable
Damage level	\pm 20 Vdc
Frequency range	0 to 15 MHz
Trigger level control	
Range	-5 V to 5 V
Resolution	12 bit (2.5 mV)
Accuracy	\pm (5% of setting + 2.5 mV)
Sensitivity	200 mVp-p
Pulse width, minimum	10 ns
System delay ⁴⁾	200 sample clock periods + 50 ns, typical
Trigger delay	Separate for each channel
Range	0 to 8,000,000 sample clock periods
Resolution	8 points
Accuracy	Same as sample clock accuracy
Smart Trigger	Detects a unique pulse width range
Conditioned trigger	<pulse width, >pulse width, <>pulse width
Pulse width range	50 ns to 2 s
Resolution	2 ns
Accuracy	\pm (5% of setting +20 ns)
Trigger Holdoff	Ignores triggers for a holdoff duration
Holdoff range	100 ns to 2 s
Resolution	2 ns
Accuracy	\pm (5% of setting +20 ns)
Trigger jitter	8 sampling periods

⁴⁾ Trigger input to analog output

Internal Trigger Generator

Characteristics	Description
Source	Common or separate for each channel
Mode	Timer (waveform start to waveform start); Delayed (waveform stop to waveform start)
Timer	
Range	100 ns to 2 s
Resolution	3 digits
Accuracy	100 ppm
Delayed	
Range	152 to 8,000,000 sample clock periods
Resolution	Integer numbers, divisible by 8

Event input

Characteristics	Description
General	Used for branching in or out from a sequence loop. Also used for enabling or disabling the output in armed mode.
Connector type	Rear panel BNC
Input impedance	10 k Ω , typical
Polarity	Positive, negative or either, selectable
Damage level	\pm 20 Vdc
Frequency range	0 to 15 MHz
Trigger level control	
Range	-5 V to 5 V
Resolution	12 bit (2.5 mV)
Accuracy	\pm (5% of setting + 2.5 mV)
Sensitivity	200 mVp-p
Pulse width, minimum	10 ns

Sequence / Segment Control input

Characteristics	Description
Connector type	D-sub, 8 bit lines
Number of input connectors	1ch instrument: 8 bit bus + valid line 2ch instrument: (8 bit bus + valid line) per channel
Switching rate	20 ns + waveform duration minimum
Input impedance	10 k Ω , typical
Input level	TTL

External reference clock input

Characteristics	Description
Connector type	Rear panel BNC
Input frequency	10 MHz to 100 MHz, programmable
Input impedance	50 Ω , typical
Input voltage swing	-5 dBm to 5 dBm
Damage Level	10 dBm

External sample clock input

Characteristics	Description
General	External signal is fed to a frequency splitter. Same frequency is applied to both channel
Connector type	Rear panel SMA
Input impedance	50 Ω , typical
Input voltage swing	0 dBm to 10 dBm
Input frequency range	2.0 GHz to 2.1 GHz
Clock divider	1/1, 1/2, 1/4, ... 1/256, separate for each channel
Damage Level	15 dBm

Two Instruments Synchronization

Characteristics	Description
General	Two instruments are synchronized via dedicated synchronization cable. Master instrument controls waveform generation of slave instrument
Initial Skew between instruments	20 ns + 0 to 16 SCLK periods
Offset Control	8 SCLK periods increments
Clock Source	Master sample clock generator
Trigger Source	Master trigger input

Mechanical, Environmental and Maintenance Specifications

Display

Characteristics	Description
Type	TFT LCD, back-lit
Size	4 "
Resolution	320 x 240 pixels

Peripheral devices

Characteristics	Description
USB port	1 x front, USB host, standard A; 1 x rear, USB device, standard B
LAN port	1000/100/10 BASE-T
GPIB port	IEEE 488.2 standard interface, 24 pin
Segment control port	2 x D-sub, 9 pin

Power supply

Characteristics	Description
Source voltage and frequency	
Rating range	100 VAC to 240 VAC
Frequency range	50 Hz to 60 Hz
Power consumption	100 VA

Mechanical

Characteristics	Description
Dimensions	
With feet	315 x 102 x 395 mm (W x H x D)
Without feet	315 x 88 x 395 mm (W x H x D)
Weight	
Without package	4.5 kg
Shipping weight	6 kg

Environmental

Characteristics	Description
Operating temperature	0°C to 40°C
Storage temperature	-40°C to 70°C
Humidity	85% RH, non condensing

Certifications and compliances

Characteristics	Description
Safety	IEC61010-1
EMC	IEC 61326-1:2006

Maintenance

Characteristics	Description
General	Periodical recalibration is required to maintain accuracy of output characteristics
Recalibration Period	2 years

This page was intentionally left blank