


How to Simply Generate an Arbitrary Waveform

The Tabor family of Arbitrary Waveform Generators (AWGs) allows you to program arbitrary waveform segments that can be combined in any sequence. This document will quickly guide you through the definition process.

NOTE

In order to program more complex arbitrary waveforms, use the Tabor **ArbConnection** software-based wave composer tool.

The front panel of the AWG is depicted below.

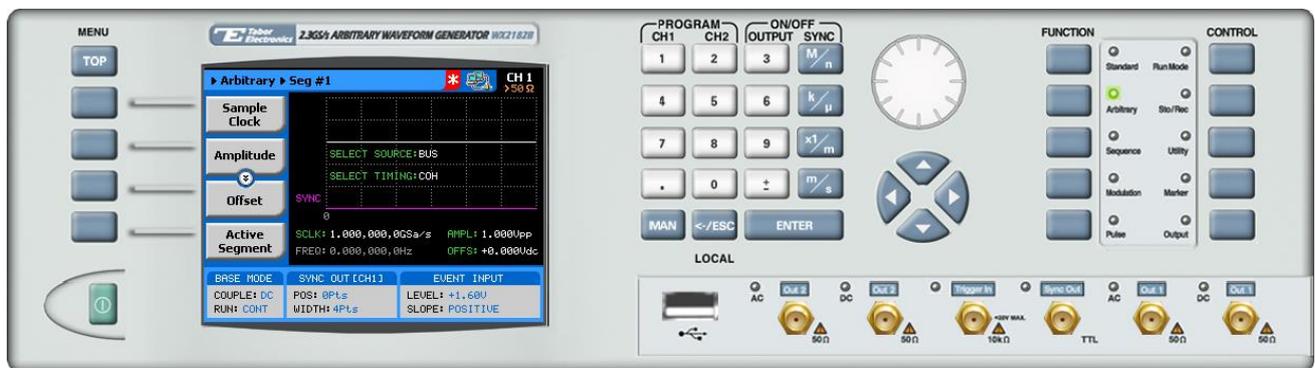


➔ To generate an arbitrary waveform using the front panel:


1. Press the **Arbitrary** button in the function menu.



- Press the **Active Segment** menu button to select the index number of the segment to be edited. Enter the number of the segment to be edited and press **ENTER**.

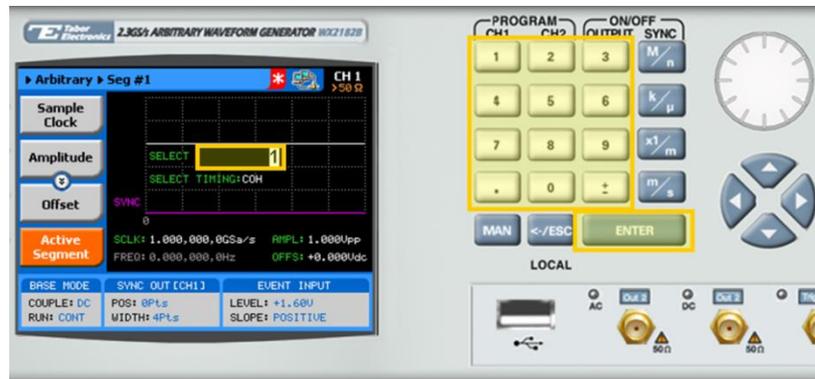

- When selecting a numeric attribute for modification, modify the displayed value using the dial or the cursor keys, or by entering the value using the numeric keypad. Press **ENTER** to save the modified parameter value.

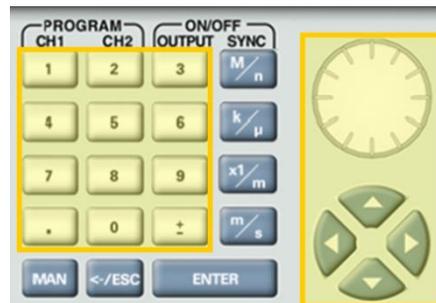

- Modify the arbitrary waveform using menu buttons that appear on the left-hand side of the panel.


TIP

Whenever the  icon is displayed there are more attribute menu buttons to be shown below. Simply scroll down using the dial or cursor key.

5. Choose a menu buttons to modify any of the following attributes:

- **Sample Clock.** Specifies the sample clock frequency, measured in samples/second.
- **Power.** Specifies the output power of the waveform. This parameter is available for AC-coupled output paths only.
- **Amplitude.** The amplitude of the waveform (in Volts peak-to-peak). This parameter is *not* available for AC-coupled output paths.
- **Offset.** The amplitude offset (in Volts peak-to-peak) with reference to zero-level amplitude. This parameter is *not* available for AC-coupled output paths.
- **Active Segment.** The number of the arbitrary waveform segment that is currently active in working memory.
- **Jump Event.** Selects the source that will trigger segment transitions.
 - **Bus.** Selection of segments is controlled by remote PC commands.
 - **External.** An external source dynamically asserts control via the AWG's rear-panel, 9-pin control connector.
- **Jump Timing.** Defines the transition type.
 - **Coherent.** The currently running segment is completed before switching to the next segment.
 - **Immediate.** The currently running segment is immediately terminated and the newly selected segment begins.
- **Wave Composer.** Allows you to define the arbitrary waveform shape that is stored in the selected segment. See step 6.
- **Delete Segments.** Removes the table that defines start and stop addresses for each segment location.

6. Press the **Wave Composer** menu button to define and edit an arbitrary waveform segment, as shown below.



The Wave Composer offers the following menu buttons:

- **Horizontal Unit.** Used to select the horizontal unit type. Choose **Sample Clock, Frequency, or Period.**
- **Active Segment.** Selects an arbitrary waveform segment for editing.
- **Update Segment.** Saves the modifications made to the selected arbitrary waveform segment.
- **Delete Segments.** Removes the table that defines start and stop addresses for each segment location.

7. Modify any of the segment's attributes:

- **Wave Shape.** Choose **Square, Sine, Triangle, Sinc, Gaussian, Exponential or Random Noise.**
- **Number of Points.** The length of the segment in points.
- **Cycles.** The number of cycles that will be created in the selected segment.
- **Wave shape specific parameter.** Sets the parameter relevant for the chosen waveshape, eg. Phase for Sine wave.
- **Wave Span.** The low and high level values of the DAC (Digital-to-Analog Converter), ranging from -8192 to +8191.

8. Press the **Output** button in the control menu to configure the output settings.



9. Define the channels in the **Output** section as being ON or OFF, modifying the settings using the dial or the cursor keys.


TIP

You can quickly modify the output settings by selecting **CH1** or **CH2** on the keypad, and toggling the **OUTPUT** key to turn the channel on or off.



10. Select the output path of the channels in the Output Couple section, modifying the settings using the dial or the cursor keys.

- **DC** (2Vp-p into 50 Ω DC coupled)
- **HV** (High-Voltage 4Vp-p into 50 Ω DC coupled)
- **AC** (-20 to +10 dBm into 50 Ω AC coupled)

Press **ENTER** to save the output settings.



For More Information

To learn more about Tabor's solutions or to schedule a demo, please contact your local Tabor representative or email your request to info@tabor.co.il. More information can be found at our website at www.taborelec.com

© Proprietary of Tabor Electronics Ltd.